

Illustration 2

g01151853

2. Remove O-ring seals (4) and backup ring (5) from check valve (2). Repeat this Step for the other check valve.

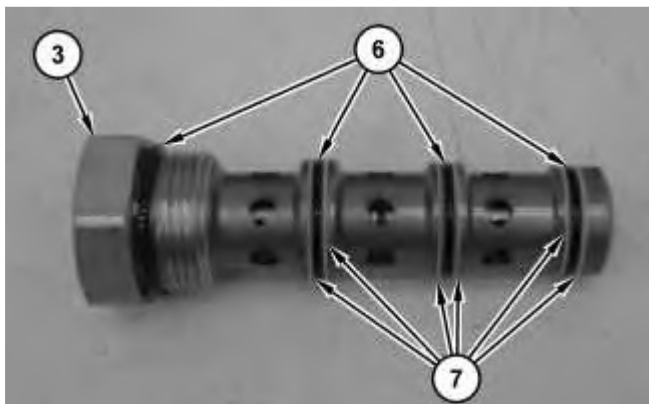


Illustration 3

g01151854

3. Remove O-ring seals (6) and backup rings (7) from flow divider valve (3) .
-

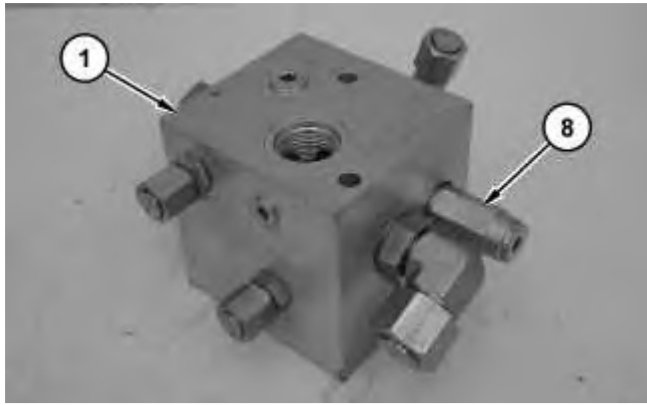


Illustration 4

g01151855

4. Remove relief valve (8) from control manifold (1) .

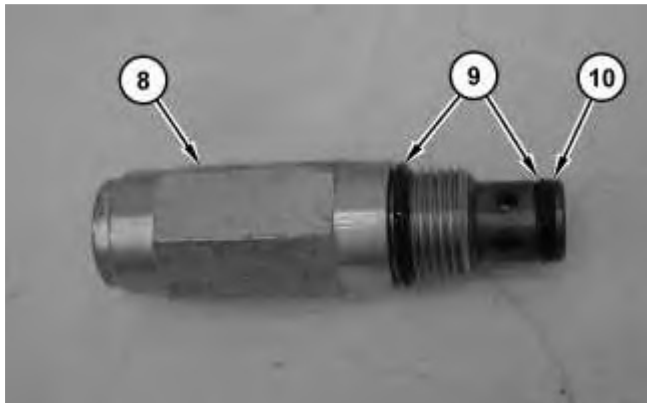


Illustration 5

g01151857

5. Remove O-ring seals (9) and backup ring (10) from relief valve (8) .