

2. Install indicator band (61) and new tie-wraps (60). Install pin (62) in the bracket.

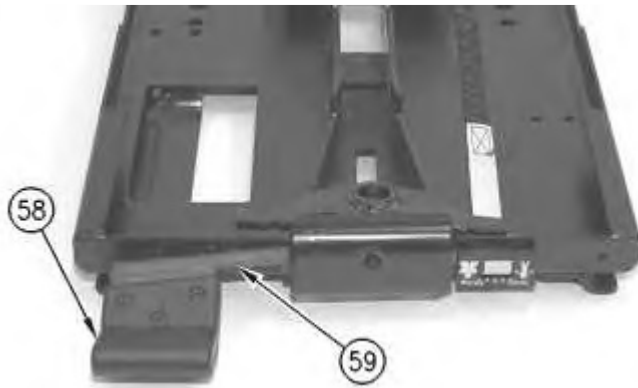


Illustration 2

g00288400

3. Install height adjustment lever (59) and handle (58). Install the key for the height adjustment lever.

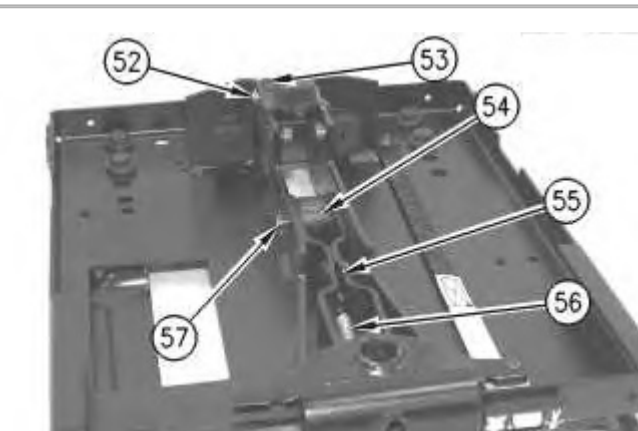


Illustration 3

g00288399

Note: Apply **5N-5561** Lubrication Compound on the roller shafts before installation.

4. Install arm assembly (55) and spring (57). Install roller (53) and two spacers. Install retaining ring (52). Install roller (54) and the pin. Install retaining ring (57). Make sure that the rollers do not bind.

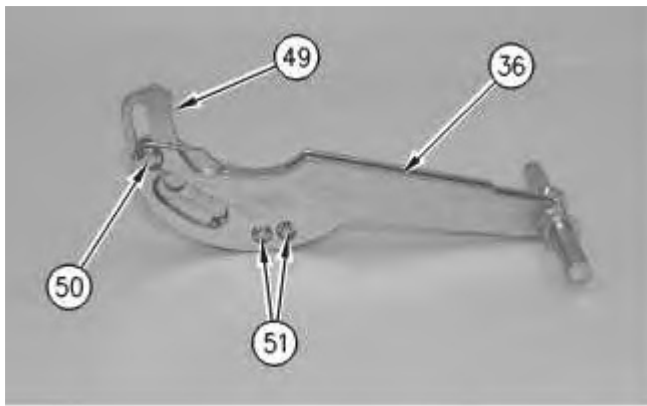


Illustration 4

g00288398

5. Install cam (49) in suspension arm (36). Install retaining rings (51) and (50) and the pins.

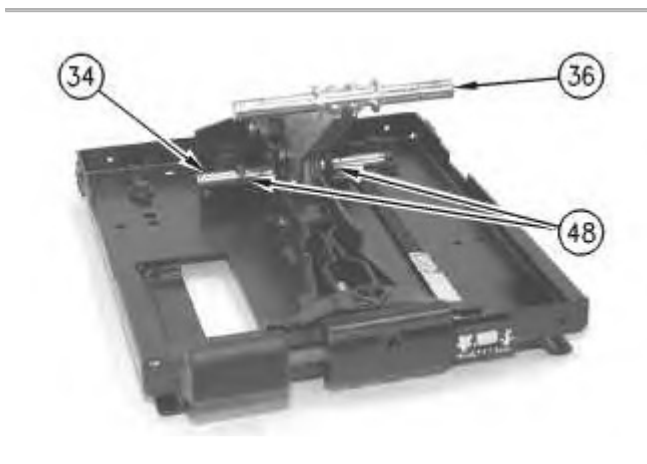


Illustration 5

g00288397

6. Install the shaft and suspension arm (36). Install two spacers (48) on shaft (34).

