


STEP 209



B9076403M

Install the ball joint and nut.

STEP 210

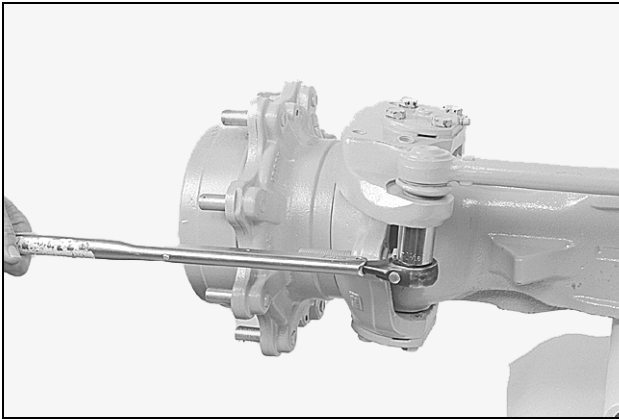

BK98E041

Tighten the nuts to 165 Nm (122 pound-feet).

STEP 211

Repeat steps 206 through 210 for the opposite end of the axle.


STEP 212

See Specifications on page 3 for the correct lubricant for the center bowl.

STEP 213

Lubricate the king pins with molydisulfide grease.

MEASURING TOE-IN

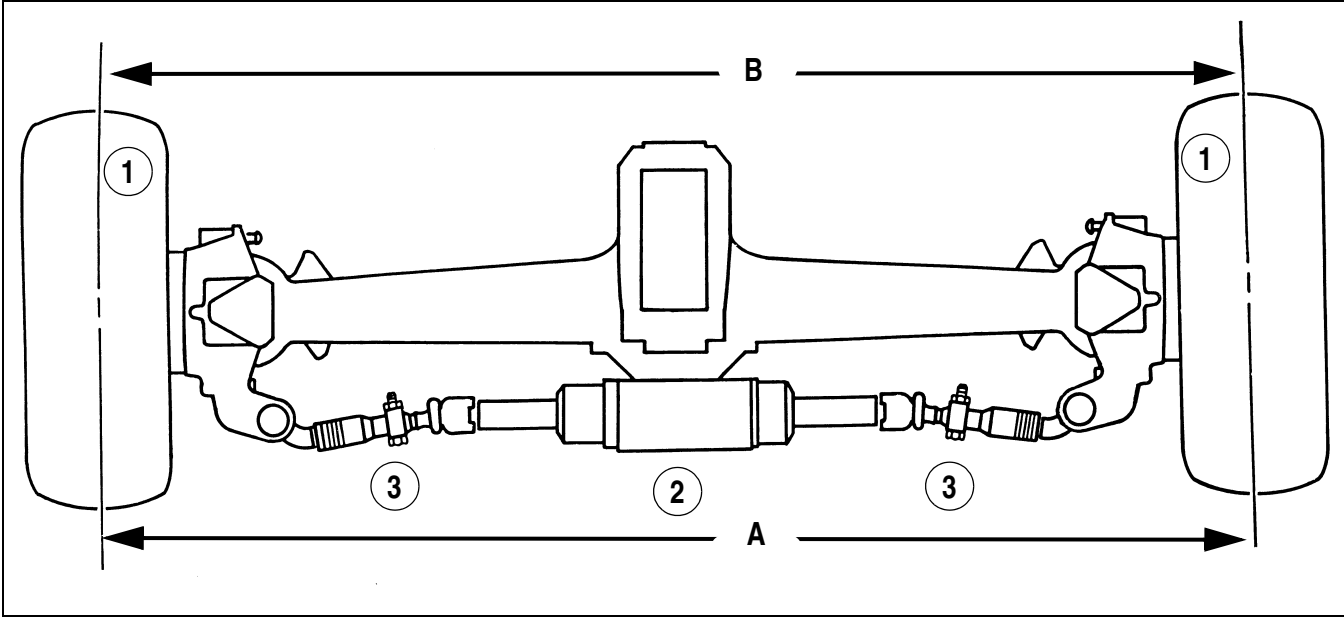

1. MARK AROUND CENTER OF TIRE
2. STEERING CYLINDER
3. LOOSEN THE JAM NUT AND TURN THE PISTON ROD AS REQUIRED

NOTE: MEASUREMENT B MUST BE EQUAL TO OR UP TO 5 MM (3/16 INCH) LESS THAN MEASUREMENT A

B870171J

SECTION INDEX
POWER TRAIN

Section Title	Section Number
Removal and Installation of Power Train Components	6000
Standard Transmission Specifications, Pressure Checks, and Troubleshooting	6002
Wheels, Tires and Wheel Weights.	6003
Rear Axle and Planetaries.	6004
Standard Transmission	6007

Section 6000

REMOVAL AND INSTALLATION OF POWER TRAIN COMPONENTS