



REMOVING AND INSTALLING STARTER LOCKING AND BACKUP LIGHT SWITCH

Removing


1. Disconnect selector lever cable.

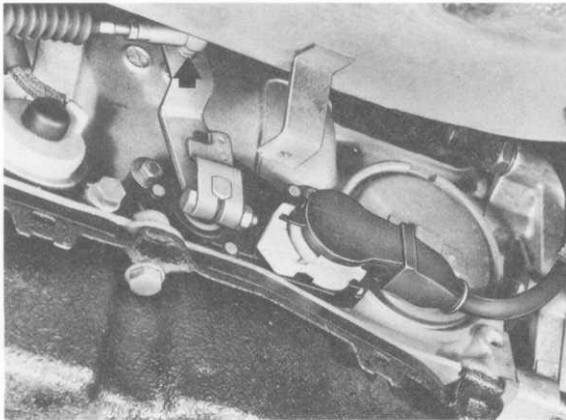


2. Remove bolt for range selector lever and pull off lever.

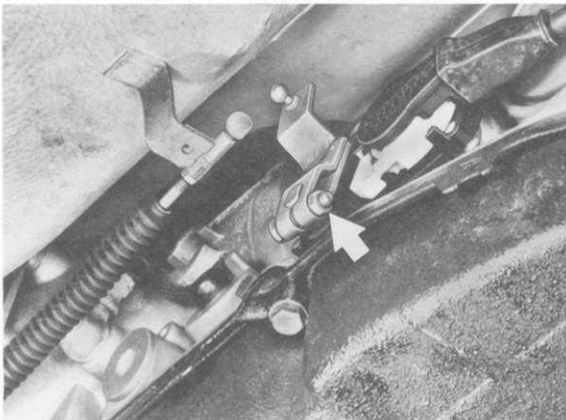


3. Unlock plug by turning white plastic ring (arrow) upwards in direction of arrow.

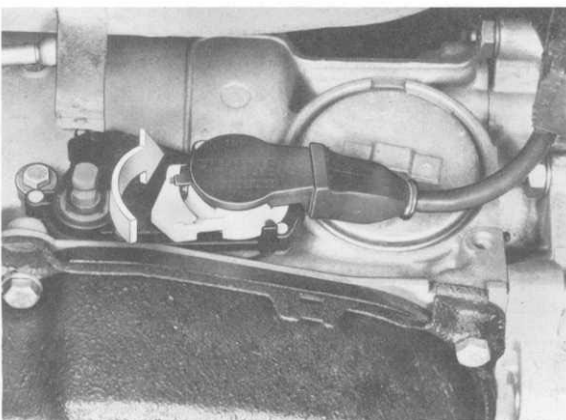

4. Pry off plug carefully with two screwdrivers applied on cable outlet and bar.

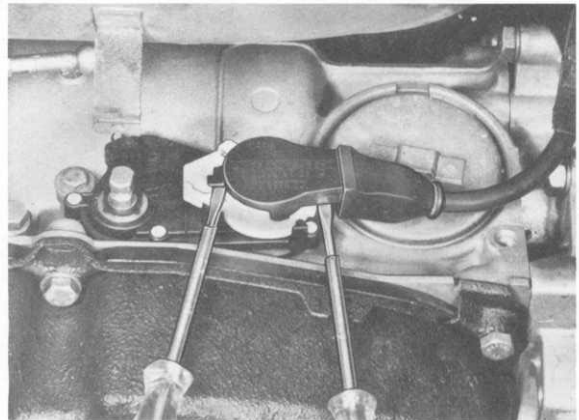


5. Remove switch mounting screws and take off switch.

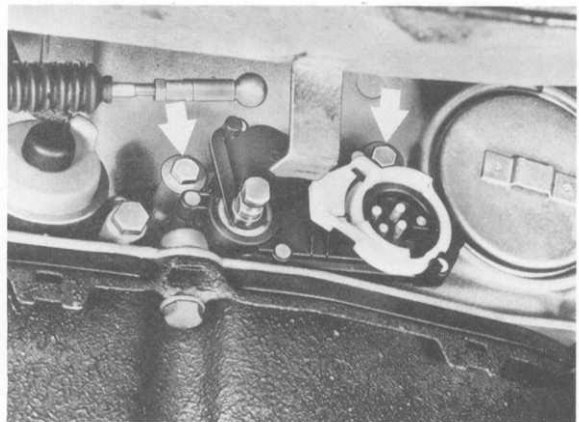

Installing


1. Install switch with both mounting screws, but do not tighten.

2. Install range selector lever that lug on switch engages. Move range selector lever to position "N".

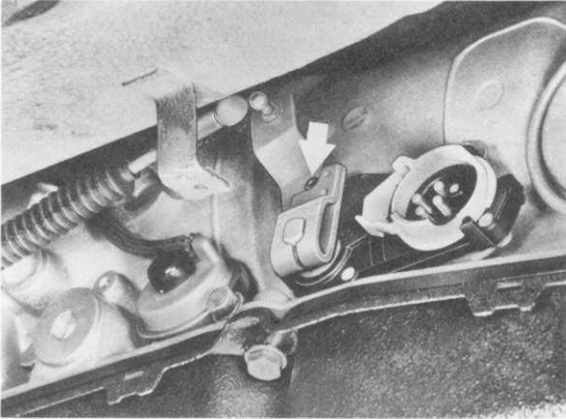

ADJUSTING STARTER LOCKING AND BACKUP LIGHT SWITCH

1. Insert locating pin made of 4 mm dia. welding wire (or 4 mm dia. drill) through lug into locating bore in switch housing.

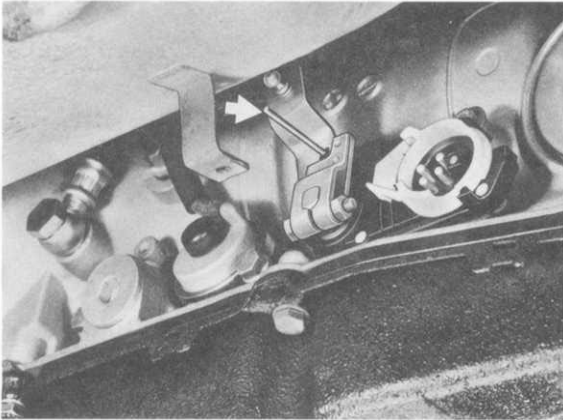

2. Tighten switch mounting screws with 10 Nm (7 ftlb) and pull out locating pin.
3. Press on plug and turn white plastic ring down.

