

Removal and installation of engine controller


Removal

⚠ For machine with disconnect switch:
Before starting work, turn the starting switch to the OFF position, wait over one minute, then switch off the battery disconnect switch and take out the disconnect key.


For machine with no battery disconnect switch:

Cut off power, wait for approx. one minute after turning off the engine starting key and then disconnect the negative (-) terminal of the battery.

1. Open the engine hood.
2. Disconnect connectors EC01 (1), ENG (2), and CE03 (3).

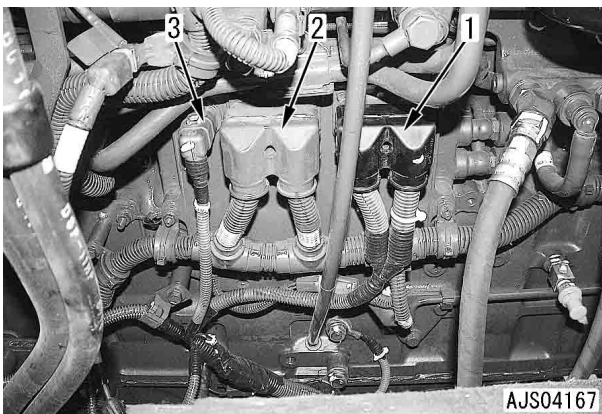

3. Remove engine controller (4).

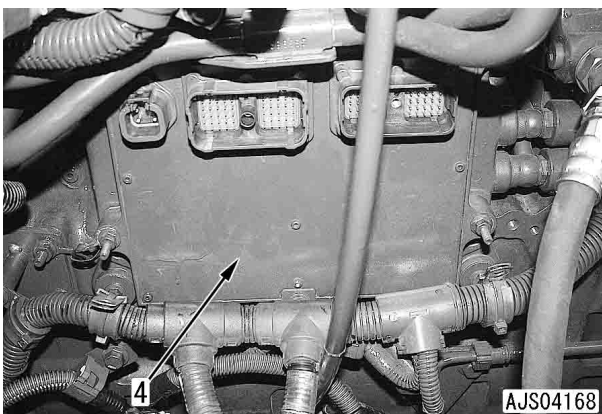

Installation

- Carry out installation in the reverse order to removal.

PC350LC/NLC-8 Hydraulic excavator

Form No. UEN02642-01

© 2009 KOMATSU
All Rights Reserved
Printed in Belgium 03-09 (01)

HYDRAULIC EXCAVATOR

PC350LC -8
PC350LCD-8
PC350NLC-8
PC350NLCD-8

Machine model	Serial number
---------------	---------------

PC350-LC8	K50001 and up
PC350LCD-8	K50001 and up
PC350NLC-8	K50001 and up
PC350NLCD-8	K50001 and up

90 Diagrams and drawings

Hydraulic diagrams and drawings

Hydraulic circuit diagram 1/2.....	3
Hydraulic circuit diagram 2/2.....	5