


Liftgate Latch - Power



WARNING: Before beginning any service procedure in this section, REFER to [Safety Warnings](#). Failure to follow this instruction may result in serious personal injury.

Exploded View

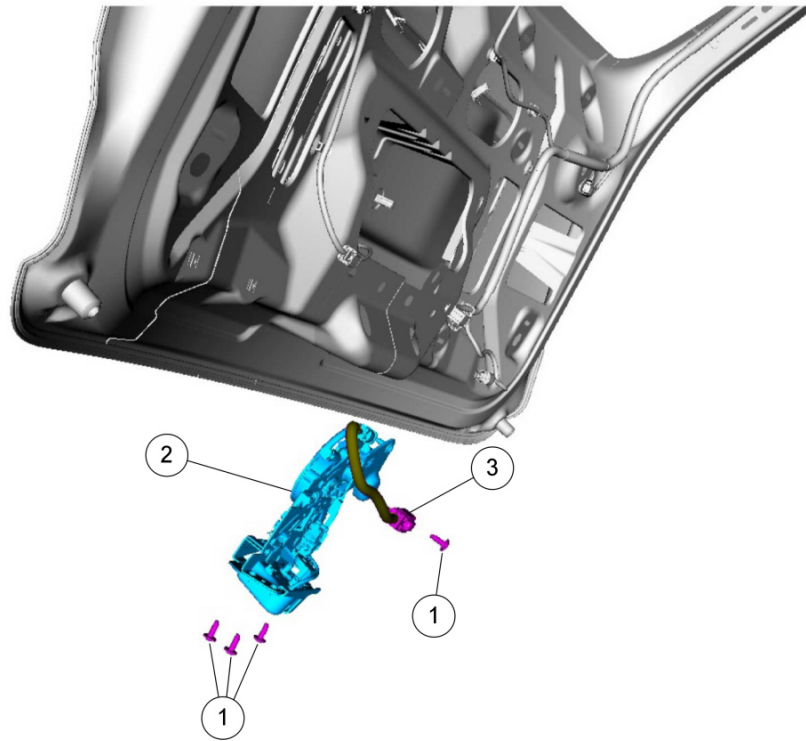


N0130142

Item	Service Part Number	Description	Tool Number	Material Name	Notes
1	N807675	Liftgate latch bolt	-	-	9 Nm (80 lb-in)
2	43150	Liftgate latch	-	-	-
3	-	Liftgate latch electrical connector (part of 43150)	-	-	-


Removal

1. Remove the liftgate trim panel. REFER to *Liftgate Trim Panel*.
2. Disconnect the liftgate latch electrical connector.
3. Remove the 2 liftgate door handle moulding bolts.

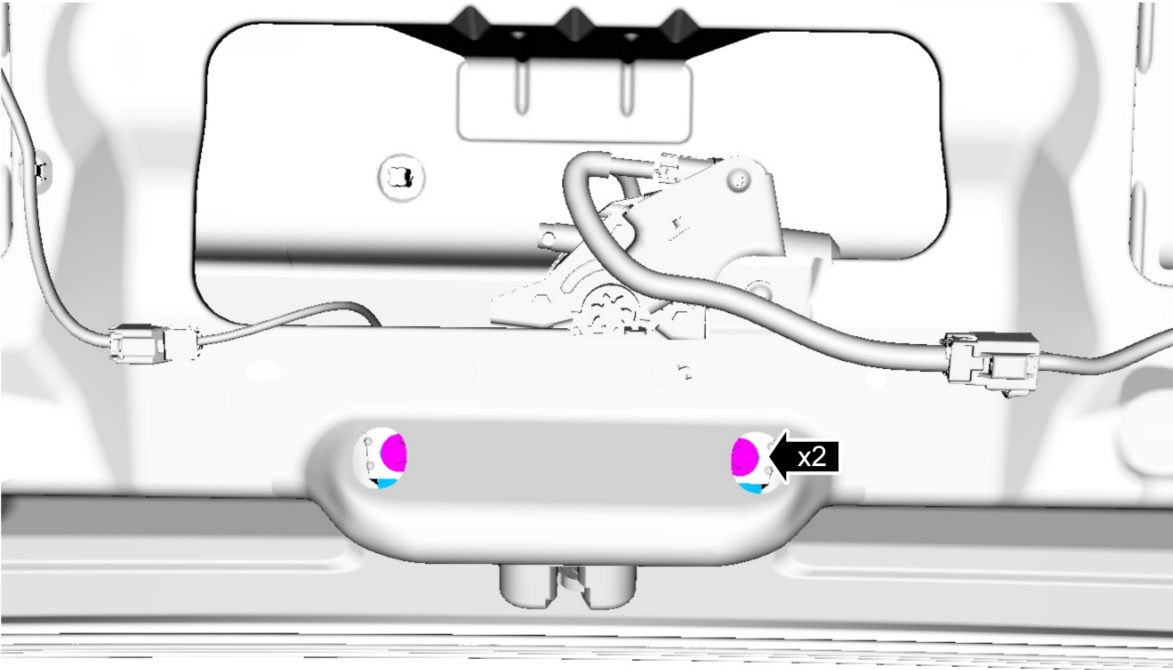

N0130162

4. Disconnect the liftgate release switch.
5. Depress the 2 tabs and remove the liftgate door handle moulding.

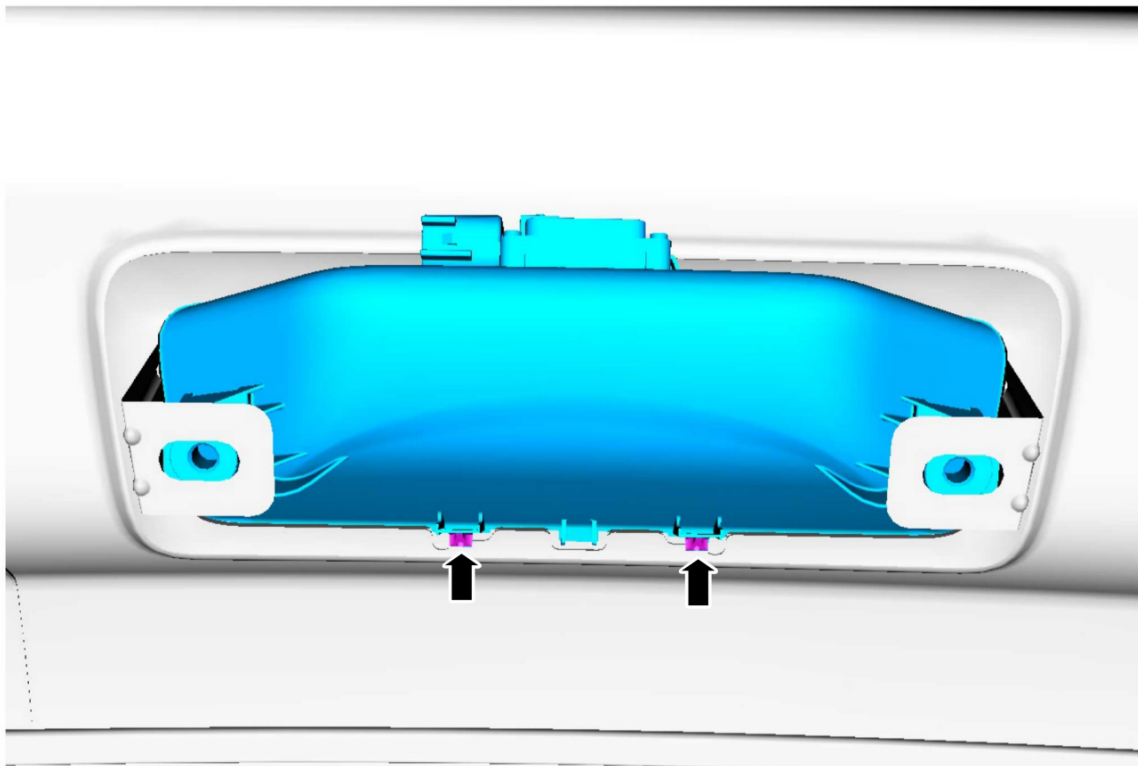

N0130165

6. Remove the 4 liftgate latch bolts and the liftgate latch.
To install, tighten to 9 Nm (80 lb-in).

Installation

To install, reverse the removal procedure.