

**FIG. 3**

**FIG. 3:** Rear ring and pinion components.


- (1) Spur Gear, 56
- (2) Differential Case
- (3) Differential Case
- (4) Pin
- (5) Bolt
- (6) Lock Washer
- (7) Bearing
- (8) Bearing
- (9) Bevel Pinion, 12
- (10) Bevel Gear, 20
- (11) Bevel gear, 20
- (12) Pinion Shaft
- (13) Pin 08X45
- (14) Pinion Washer
- (15) Washer 38X52X01

## Rear Axle and Brakes

### Disassembly

Remove the rear transmission housing assembly as outlined in the CHASSIS section of this manual.

**FIG. 4:** Remove the snap ring to remove the differential lock arm from the LH side. Use care not to lose or damage the O-rings (1) on the differential lock shaft.

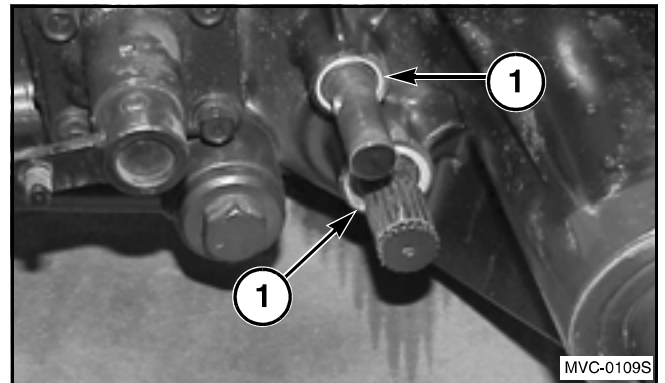

**FIG. 4**

**FIGS. 5–7:** Remove the hardware from the RH axle housing. Remove the RH axle housing.



**FIG. 5**



**FIG. 6**



**FIG. 7**