



Fig. 3.

EFD00000_01

1028347

2.4 EFD00000_2 - Battery earth points

- | | | | |
|---|--|---|---|
| 1 | On the right-hand pillar of the cab | - | X328 - Battery isolator switch earth terminal |
| | - X455 - Roof harness earth | | |
| 2 | On the inside of the right-hand fender | - | X329 - Battery isolator switch earth terminal |
| | - X160 - Console harness earth (chassis) | | |
| | - X463 - Earth (Isobus) | - | X330 - Battery negative terminal contact (battery isolator switch) |
| 3 | Underneath the cab, to the right of the transmission | - | X335 - Battery isolator switch earth terminal |
| | - X51 - Transmission harness earth (chassis) | | |
| | X201 - Engine harness earth | | |
| | X334 - Battery isolator switch earth terminal | 5 | In the controller compartment |
| | | | - X173 - Cab transmission harness earth |
| 4 | On the battery isolator, underneath the cab on the right-hand side | 6 | On the spool valve support plate |
| | | | - X226 - Trailer connector harness earth |