

Drive

Shield Removal and Installation

NOTE: The drive shaft shown in the photos may be different than your drive shaft. The procedure will be the same.

Removal

Slide the tractor half of the implement drive line from the implement half.

FIG. 45: There are three openings in the side of the end shield for access to the locking tabs on the shield bearing.

Push down on the end shield and use a screwdriver to release the locking tabs. Slide the end shield off of the implement drive line.



FIG. 45

FIG. 46: Remove the shield bearing.

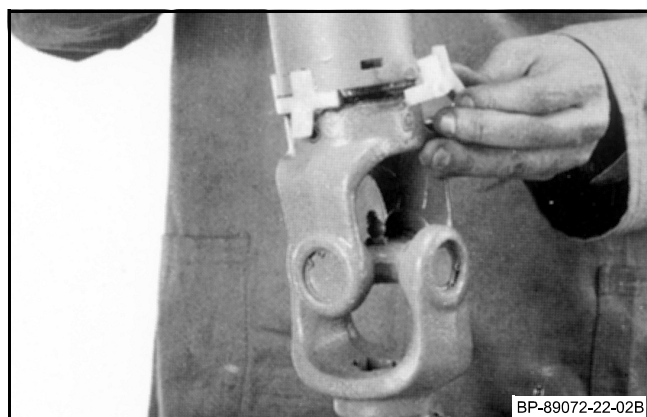


FIG. 46

FIG. 47: Remove the outer shield tube.

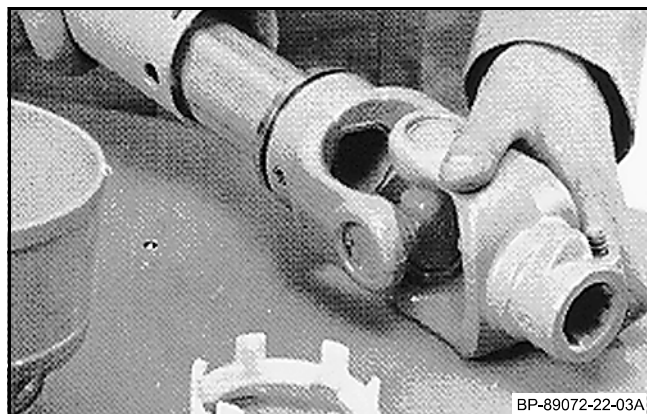


FIG. 47

Installation

FIG. 48: Apply grease to the groove in the tube yoke.



FIG. 48

FIG. 49: Install the shield bearing on the tube yoke. Slide the inner shield tube into the shield bearing until the locking tabs are engaged. Make sure the shield bearing is seated in the groove in the tube yoke.

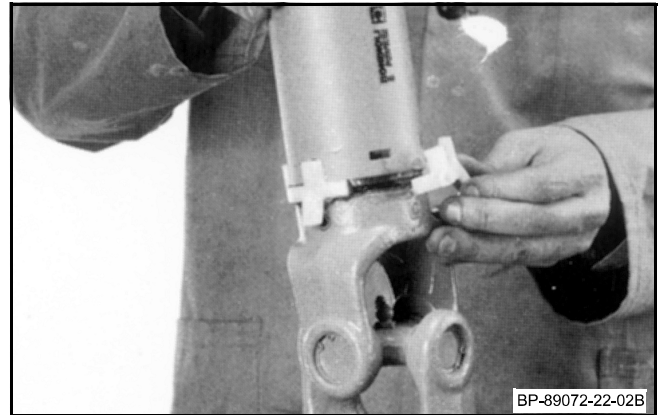


FIG. 49

FIG. 50: Slide the end of the shield onto the inner shield tube. Align the tang on the inside of the end shield with the opening at the ends of the shield bearings. Slide the end shield onto the shield bearing until the locking tabs are engaged. Hit the end shield with a soft hammer to seat the locking tabs.

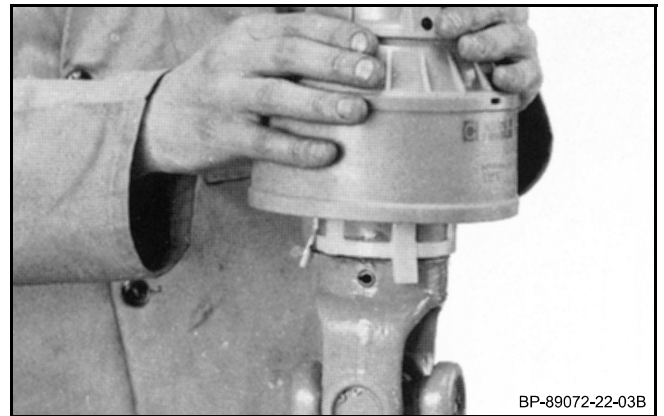


FIG. 50