


Axial Piston Pump

Removal


See the safety warnings at the beginning of this section and follow the procedures.

1. Drain all hydraulic fluid from the reservoir.

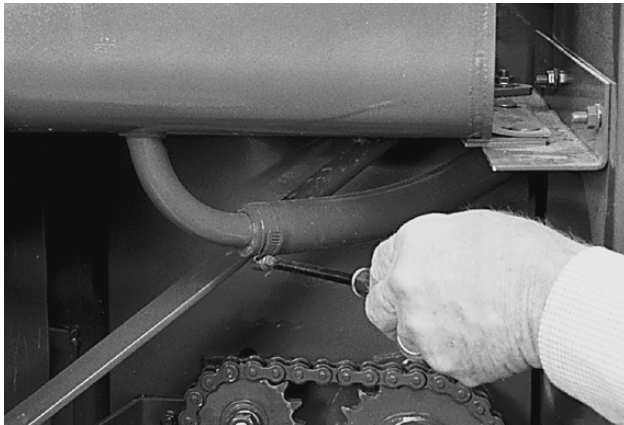


56RB-89064-26

2. Loosen the cap screw for the drive sprocket on the pump.

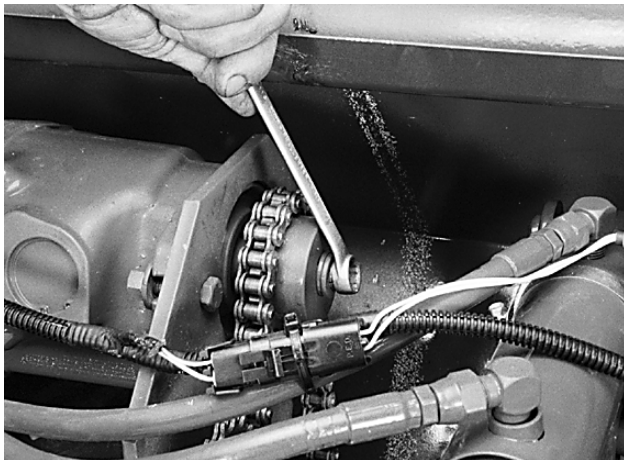


56RB-89062-5

3. Loosen the bolt in the tensioner sprocket for the pump drive chain and relieve the chain tension.

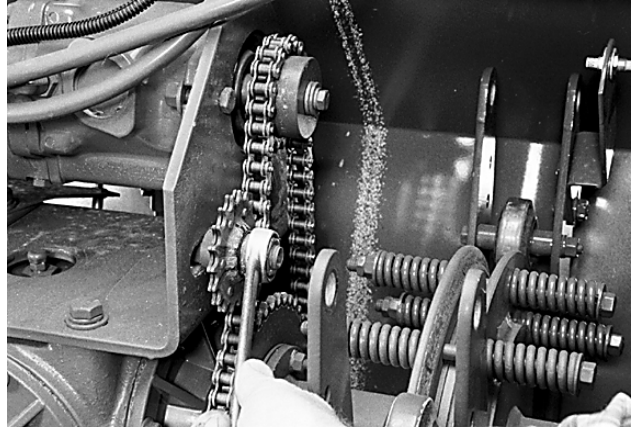


56RB-89061-6

4. Remove the connector link from the pump drive chain and remove the drive chain.

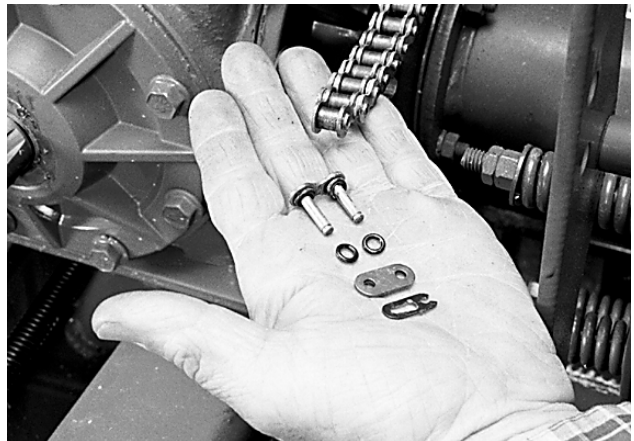


56RB-89061-9

5. Fasten identification tags on the hydraulic lines at the pump. Disconnect the hydraulic lines from the pump. Install caps on the hydraulic lines.

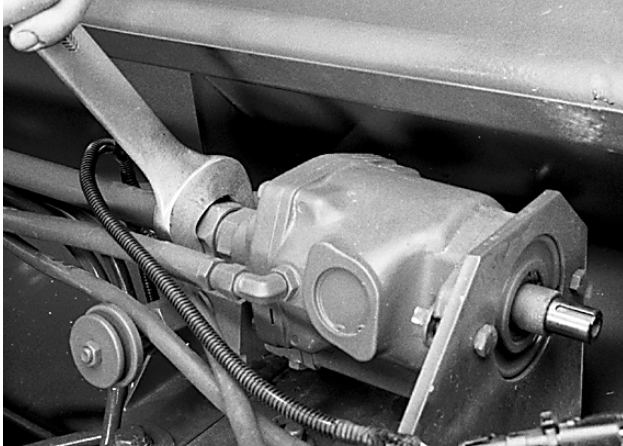


56RB-89062-19

7. Remove the bolts that fasten the pump to the pump bracket and remove the pump.

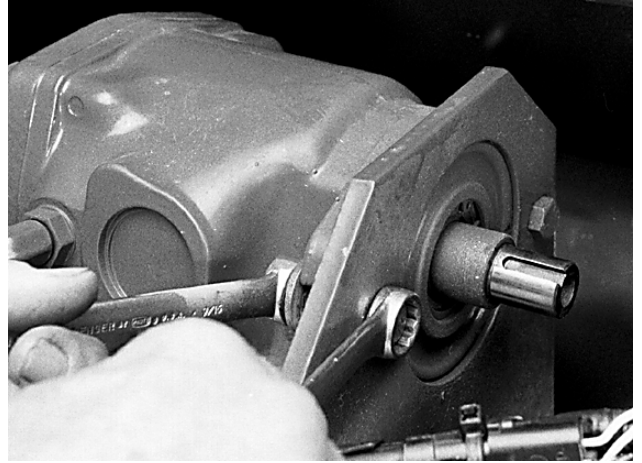

56RB-89062-13

6. Remove the drive sprocket from the pump. Use a puller if necessary. Remove the key from the pump shaft.

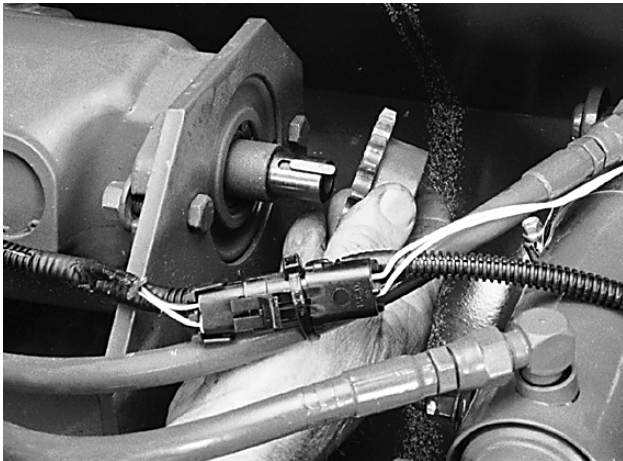

56RB-89062-9