


ENGINE (Cont'd)


Removal and Installation (Cont'd)

Remove the wire harness from the temperature sending units (Item 1) [A].

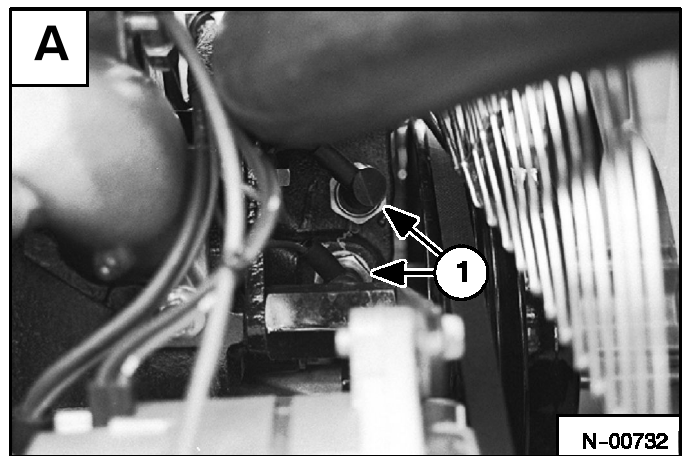


Remove the wire harness (Item 1) [B] from the fuel shut off on the injector pump.

Remove the wire harness from the engine and position the harness on the left side of the engine compartment.

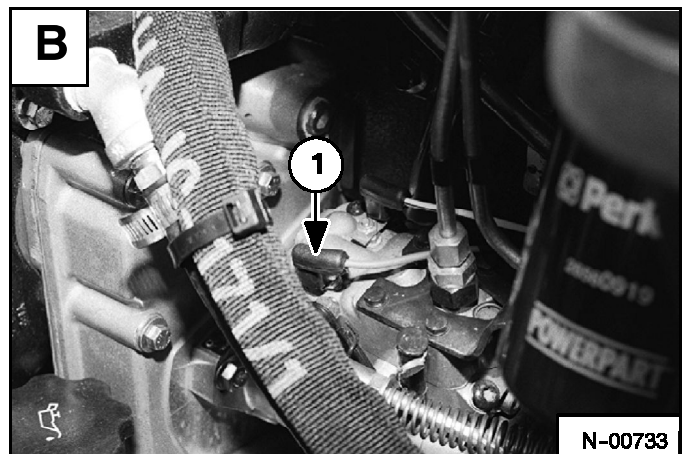


Remove the wire harness (Item 1) [C] from the cold starting aid.

Remove the air hose (Item 2) [C].

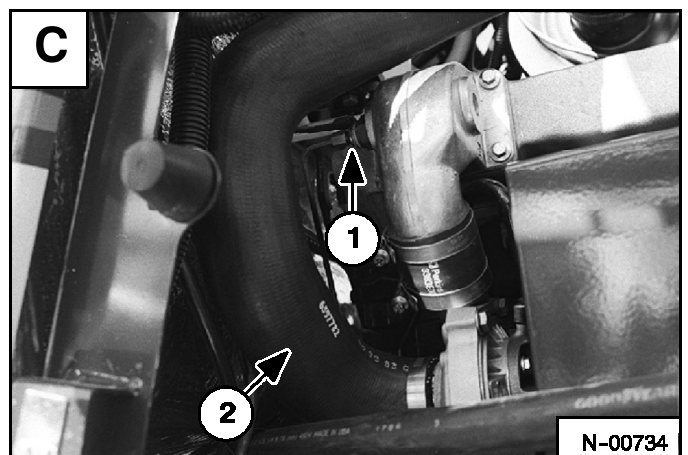

Remove the fuel feed line (Item 1) [D] from the filter.


Slide the fuel line out of the retaining clips (Item 2) [D].

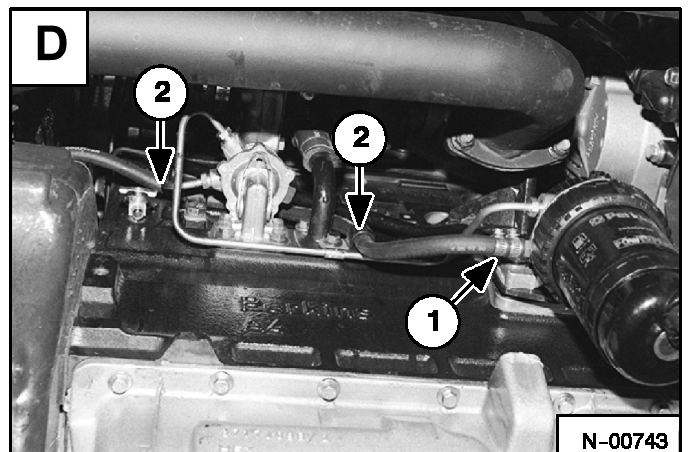

ENGINE (Cont'd)


Removal and Installation (Cont'd)

Remove the nuts (Item 1) [A] from the exhaust manifold.

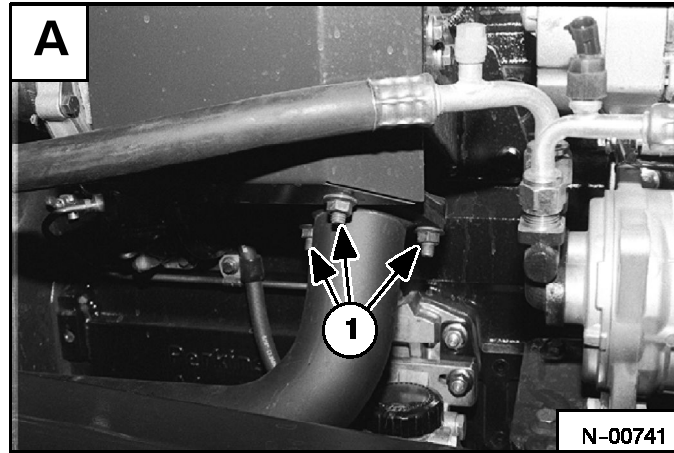

Remove the clamp (Item 1) [B] from the exhaust pipe.

Remove the exhaust.

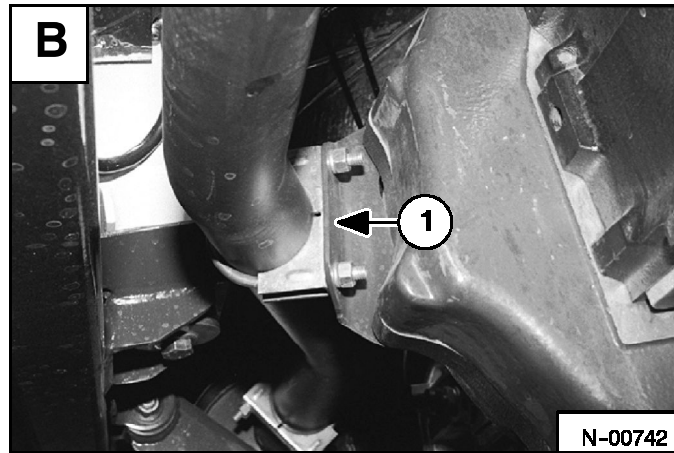


Remove the four fan mount bolts (Item 1) [C].

Remove the fan.

Remove any wire harness and linkage from the transmission. (See Page 3-1.)

NOTE: The engine and transmission is removed as an assembly.

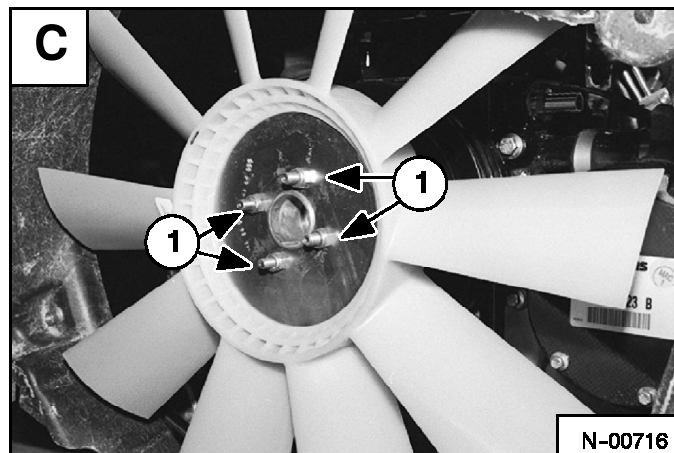

Support the engine and transmission from underneath the Spra-Coupe.

Remove the transmission crossmember.

Remove the motor mount bolts (Item 1) [D] from both sides of the engine.

