

Frame and Housing Components

FIGS. 36–39: Loosely install the two flange screws (1) and the flange lock nuts (2) securing the top of the closure extension (6) to the header frame.

Loosely install the three carriage bolts (3), the three flathead countersunk screws (4), and the six flange lock nuts (5) securing the closure extension to the inner post (7).

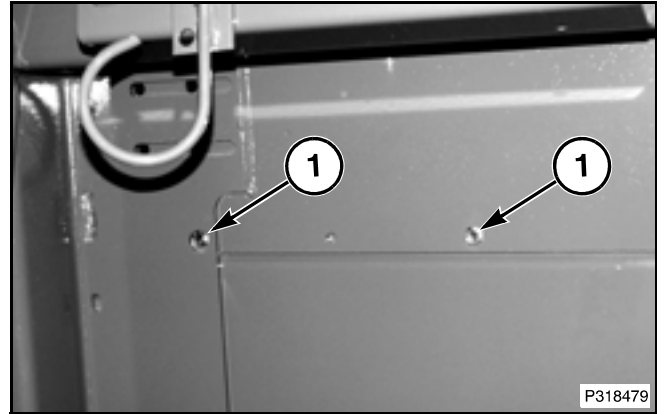


FIG. 36

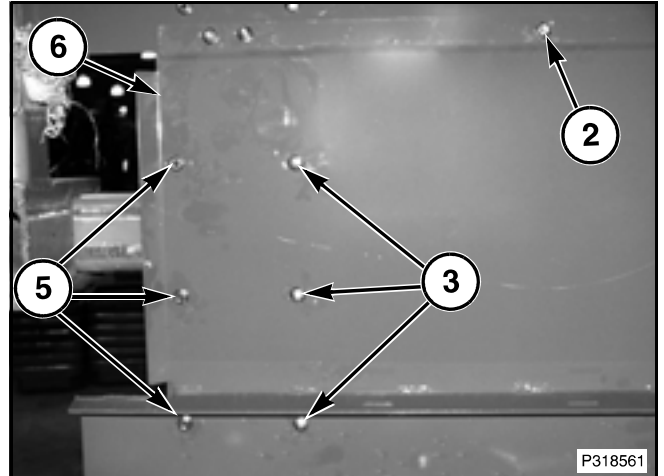


FIG. 37

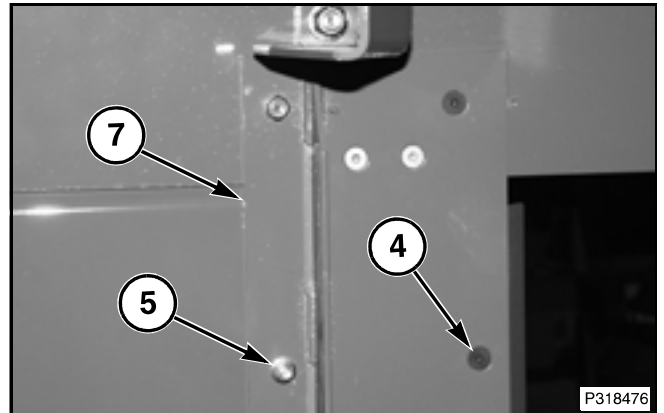


FIG. 38

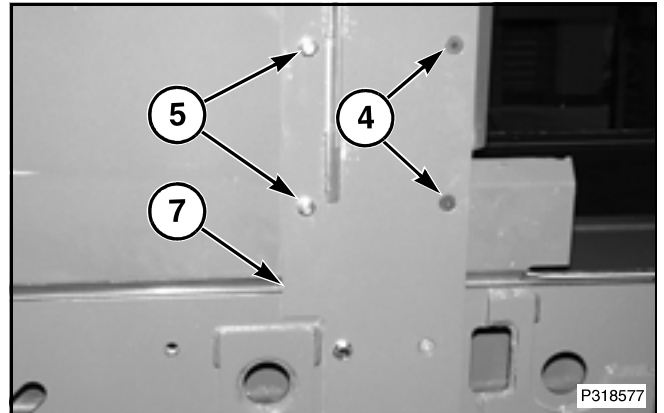


FIG. 39

Frame and Housing Components

FIG. 40: Install and tighten the six truss head self-tapping screws (1) securing the bottom closure extension (2).

Tighten all of the hardware securing the closure extension and the inner post.

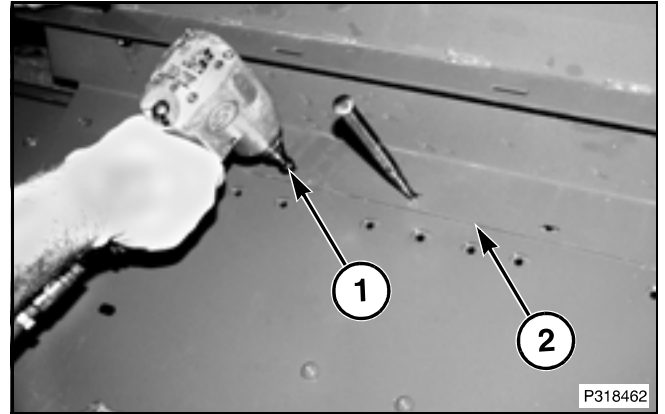


FIG. 40

FIG. 41: Be sure that the adjustable stripper (1) is positioned between the integral straw retarder (2) and the attaching plate on the header housing.

Insert the four carriage bolts from the bottom and install the flange lock nuts (3) securing the adjustable stripper to the integral straw retarder and the header frame. Tighten the flange lock nuts.

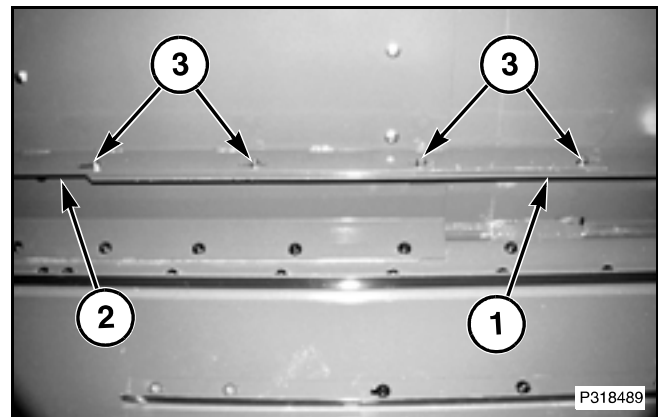


FIG. 41