

Removal

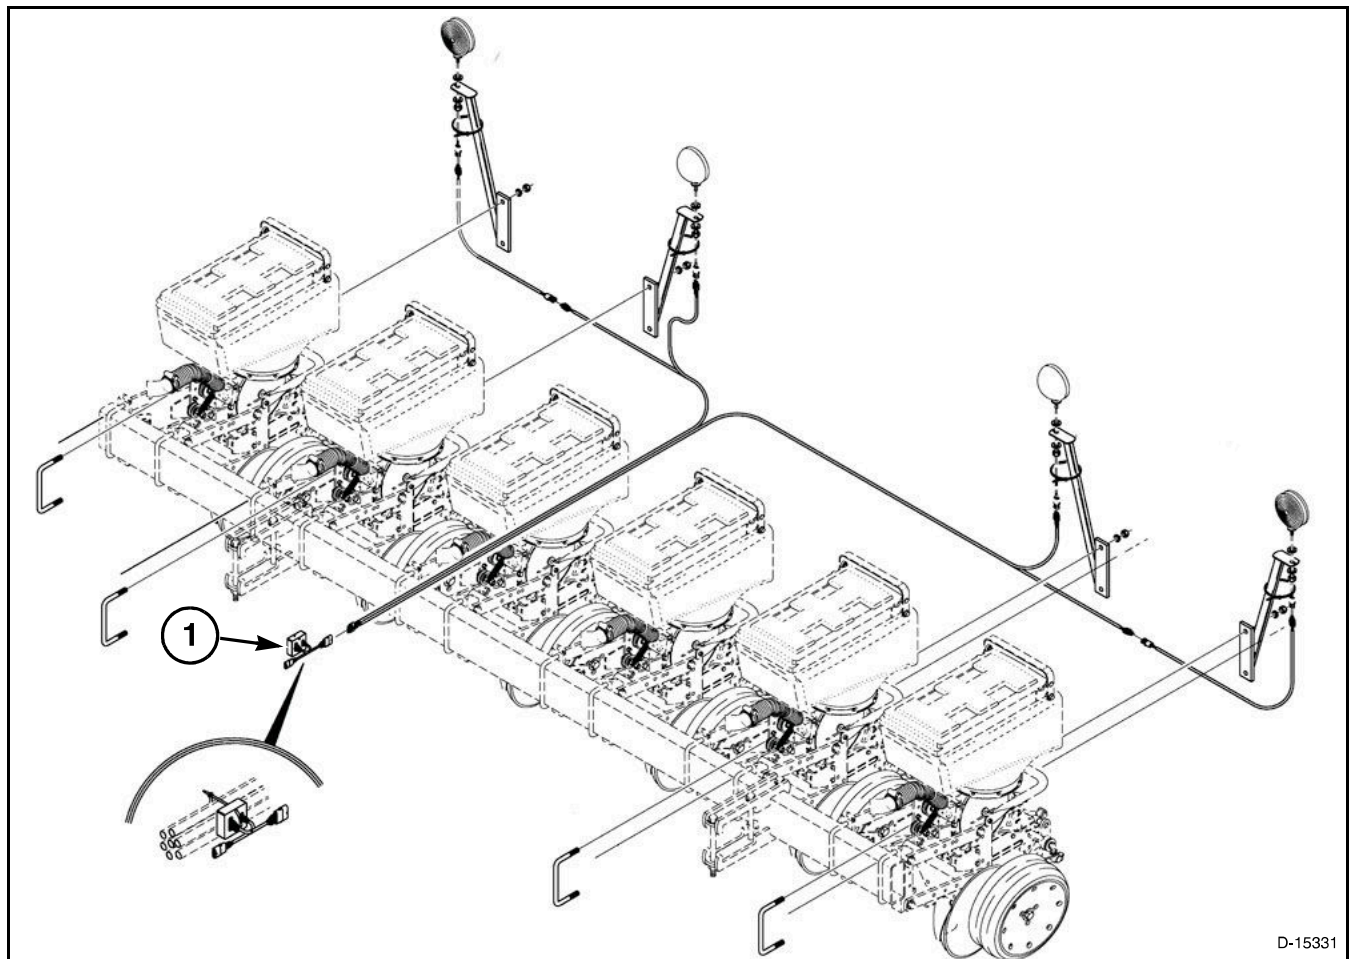


FIG. 4

FIG. 4: The module (1) is located near rear of the planter.

Disconnect the two wire harnesses.

Clip the cable tie.

Remove module.

Replace if necessary.

Installation

Attach module with cable tie to hydraulic hoses.

Attach harness connections.

Install cover plate.

Light Harness

TRANSPORT LIGHTS

Location

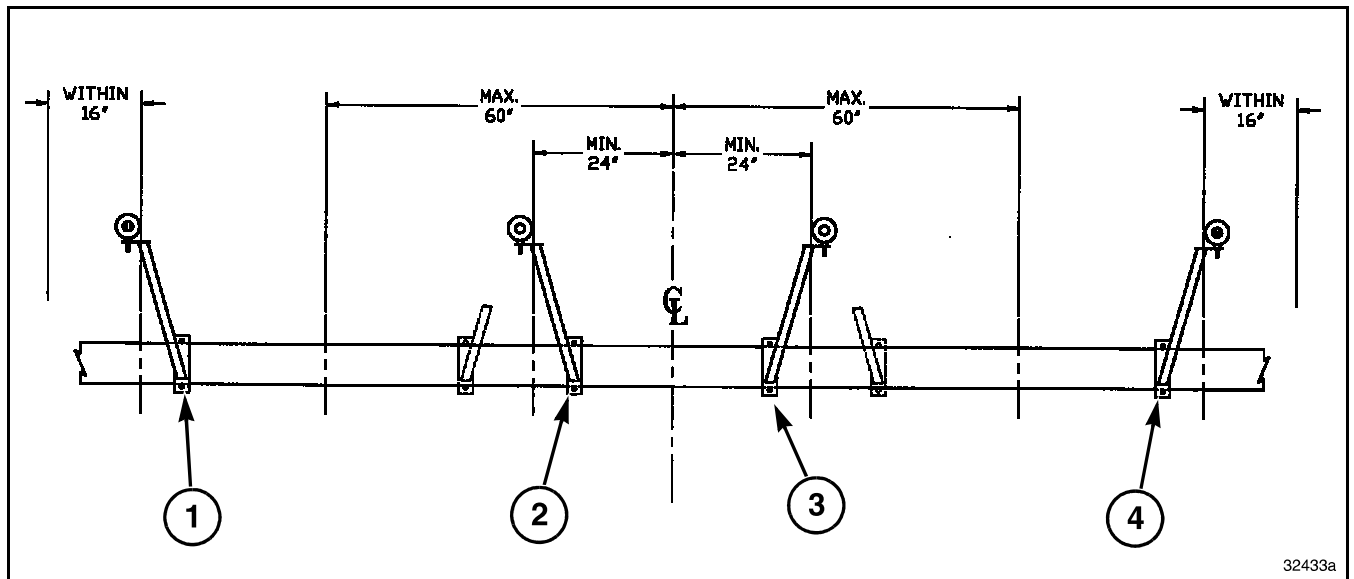


FIG. 5

FIG. 5: There are four transport lights on the planter.

- (1) Amber Flashing Warning Lamp
- (2) Red Tail/Brake Lamp
- (3) Red Tail/Brake Lamp
- (4) Amber Flashing Warning Lamp

Make sure harness is routed away from drive chains and parallel link pinch points.