

## BELT TENSION ARM

### Removal

FIG. 34: On the left-hand side of the baler remove the tension spring (1). Refer to the Belt Tension and Bale Density Springs section in this division for more information.

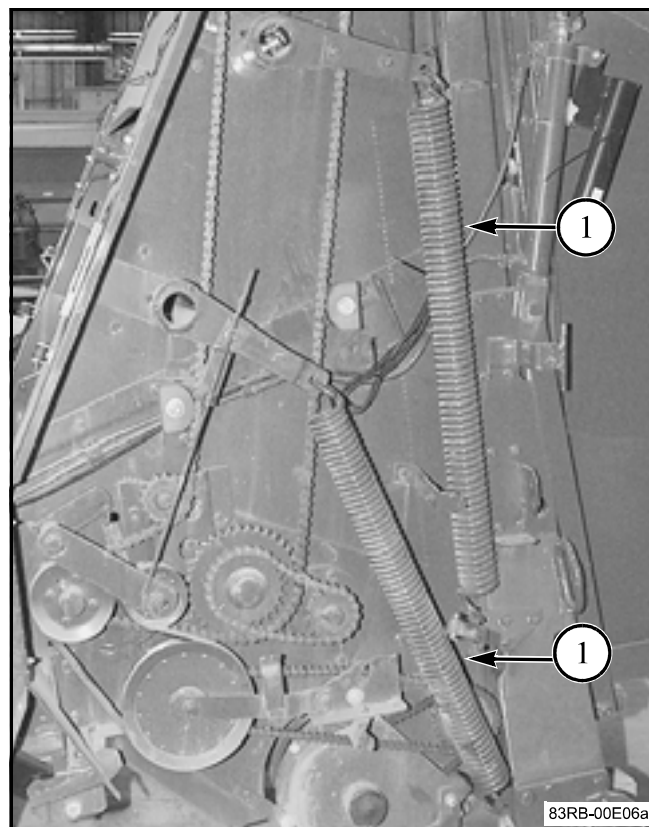


FIG. 34

FIG. 35: On the right-hand side of the baler remove the belt tension spring (1). Refer to the Belt Tension and Bale Density Springs section in this division for more information. Install the tailgate pin on both sides of the baler to release tension from the belts. Remove the belts (2) and front shield (3).


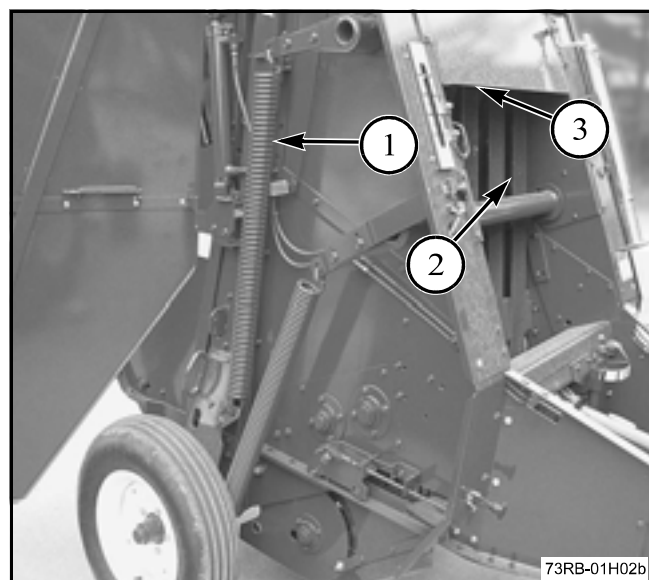


FIG. 35

## Bale Forming

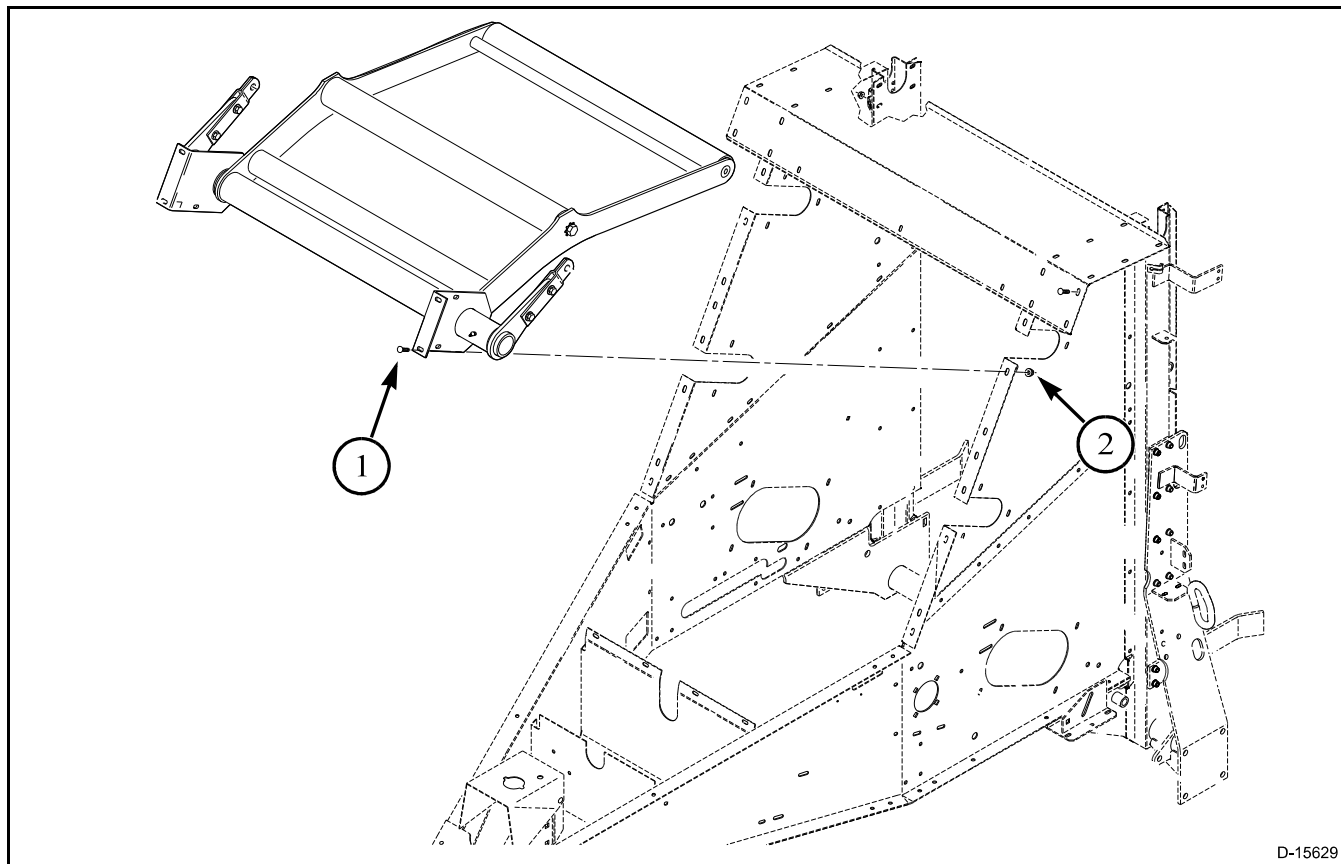

D-15629

FIG. 36

FIG. 36: Use a suitable lifting device to hold the belt tension arm (1).

Remove the four round head square neck bolts (2) and the lock nuts.

Remove the belt tension arm (1) from the baler.