


# Hydraulics

## HEADER DRIVE MOTOR

### Components

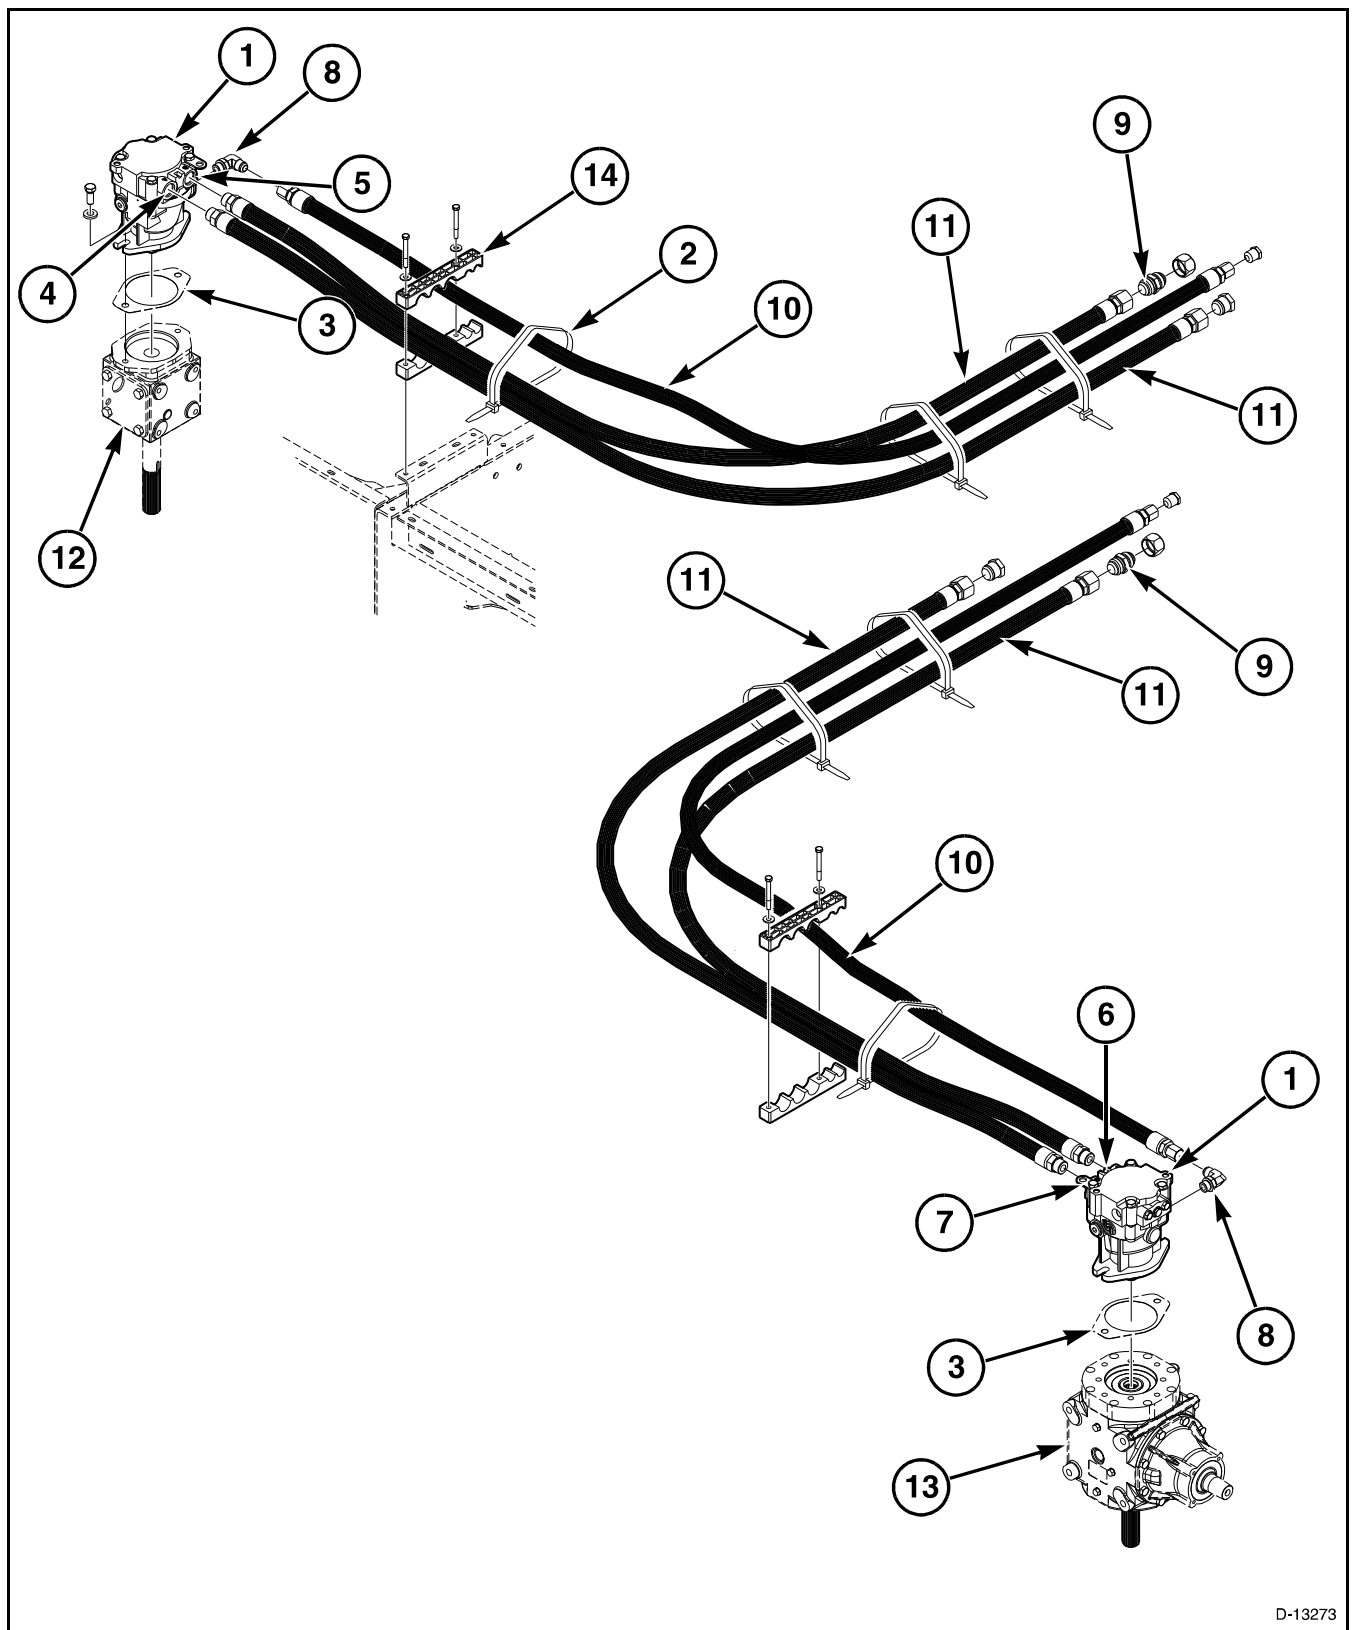

D-13273

FIG. 2

**FIG. 2: 4.9 m (16 ft) Rotary Header** - Disconnect the hoses from the machine and plug or cap the hoses or fittings. Fasten identification tags to all of the hydraulic hoses and lines.

- (1) Hydraulic Motor
- (2) Cable Tie
- (3) Gasket
- (4) Port A - Right-Hand
- (5) Port B - Right-Hand
- (6) Port A - Left-Hand
- (7) Port B - Left-Hand
- (8) O-ring Boss Elbow
- (9) O-ring Boss Connector
- (10) Case Drain Hose
- (11) Pressure and Return Hose
- (12) Housing - Right-Hand (Single Conditioner Shown)
- (13) Gear Box - Left-Hand
- (14) Clamp

*NOTE: If the hoses are not connected to the correct ports at assembly, the header drive motor will rotate in the wrong direction and will lock up. The header drive motors on a rotary header rotate in opposite directions.*

*Make sure to fasten identification tags to the hoses and lines before removal.*