

5. Install the support brackets (2).
6. Install the hardware (1) that fastens the support brackets.

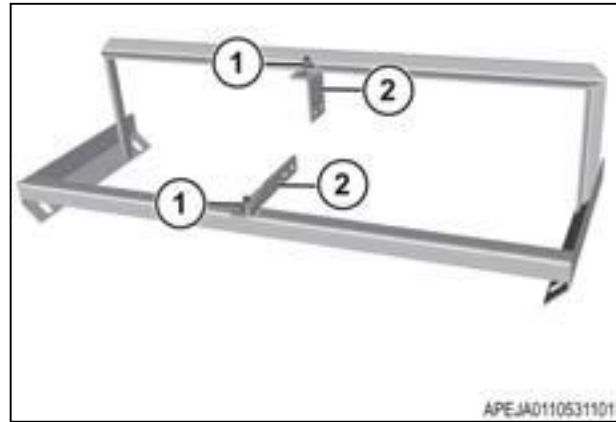


Fig. 64

7. Install the panel (2).
8. Install the hardware (1) that fastens the panel.

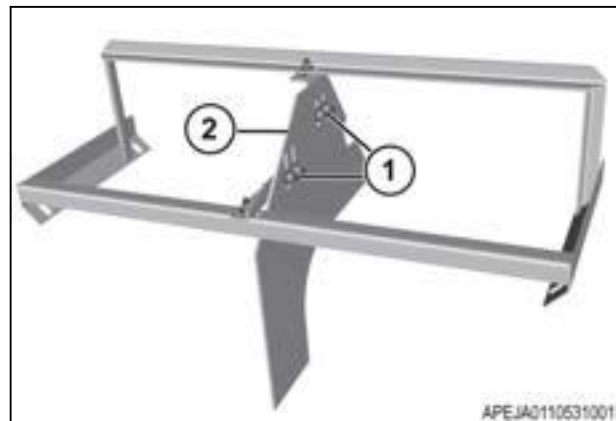


Fig. 65

9. Install the support brackets (2).
10. Install the hardware (1) that fastens the support brackets.

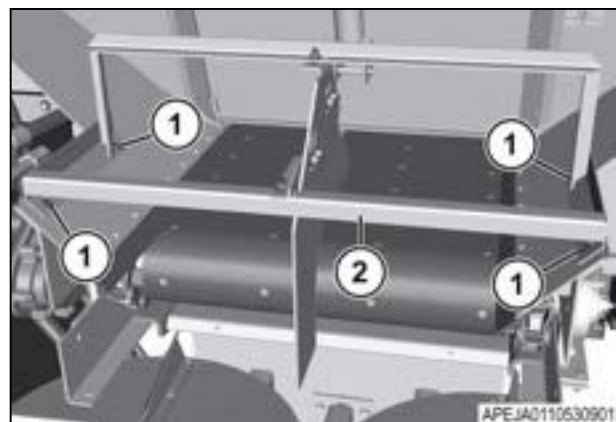


Fig. 66

2.1.12 Removing a fender

Before starting the procedure



DANGER:

Chemical safety hazard. Personal injury or death can occur. Wear manufacturer recommended personal protective equipment when handling hazardous chemicals. Potentially dangerous chemicals used with the equipment include items such as fuel, lubricants, coolant, hydraulic fluid, paints and adhesives in addition to the agricultural chemicals being applied.



WARNING:

Chemical safety hazard. Personal injury can occur. If chemicals come in contact with the body, wash immediately according to the chemical manufacturer's recommendations.

Clean the machine of dangerous chemicals or fertilizers after use. During application, chemicals or fertilizers can build up on the inside and outside of the machine.

Get medical aid immediately if signs of illness, such as drowsiness or constant fatigue, occur during or recently after the use of dry or liquid agricultural chemicals or fertilizers.

Procedure

1. Park the machine on a solid, level surface.
2. Apply the park brake, stop the engine, and take the key with you.
3. Block the wheels.
4. Turn the battery disconnect switch to the off position. Remove the key from the battery disconnect switch.
5. Remove the hardware (1) that fastens the lamp (3).

IMPORTANT:

The following steps show the left-hand side of the machine. Follow the same steps for the right-hand side of the machine.

6. Remove the harness clamps (2) that fasten the harness to the machine.
7. Remove the lamp and put the lamp to the side.

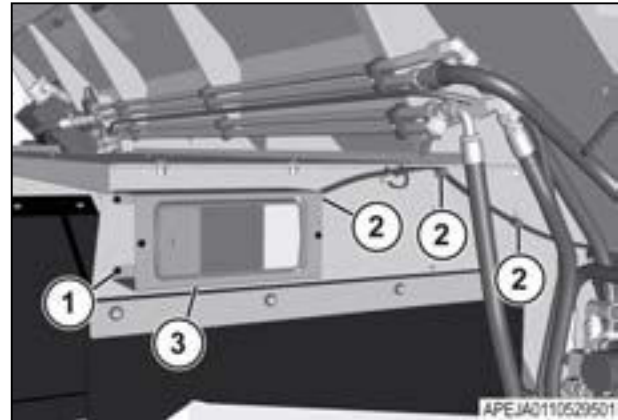


Fig. 67

8. Remove the hardware (2) that fastens the fender (1).
9. Remove the fender.

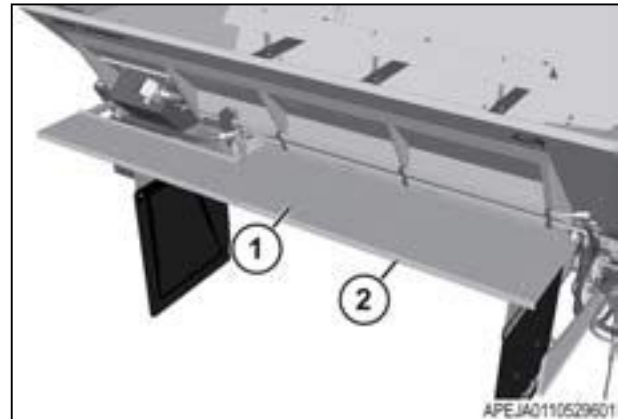


Fig. 68

10. Remove the hardware (2) that fastens the angle brackets (1) to the machine.
11. Remove the angle brackets.

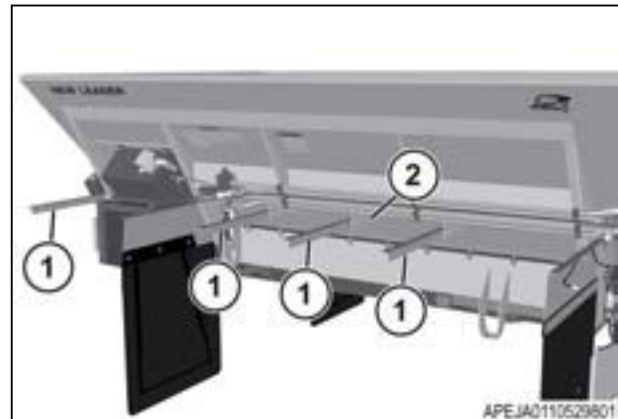


Fig. 69