

- 3. Remove the hardware (1) and both of the engine cover guides (2) from the side channel (3).

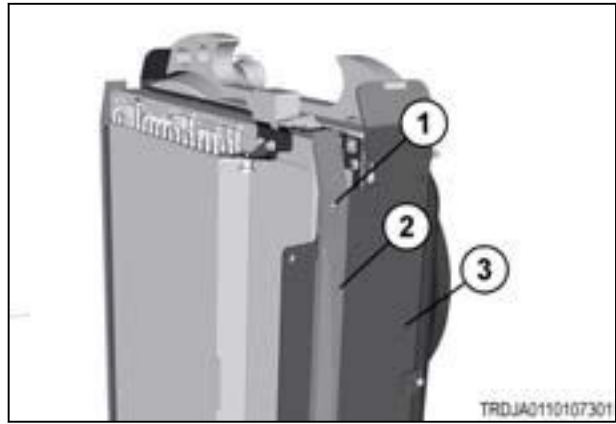


Fig. 69

- 4. Remove the hardware (1) and the fan shroud (2).

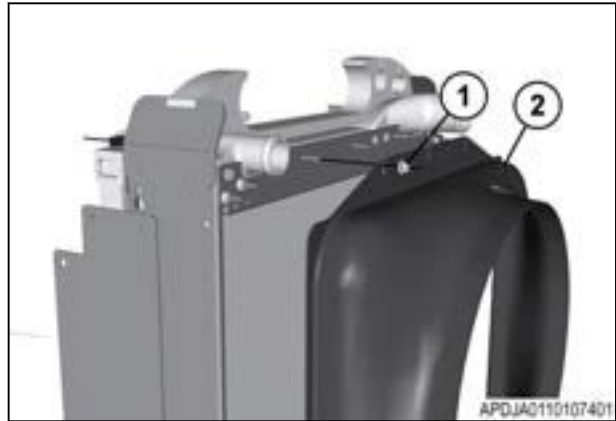


Fig. 70

- 5. Unlock two latches and pull the two plunger springs (1) to open the condenser/cooler (2).

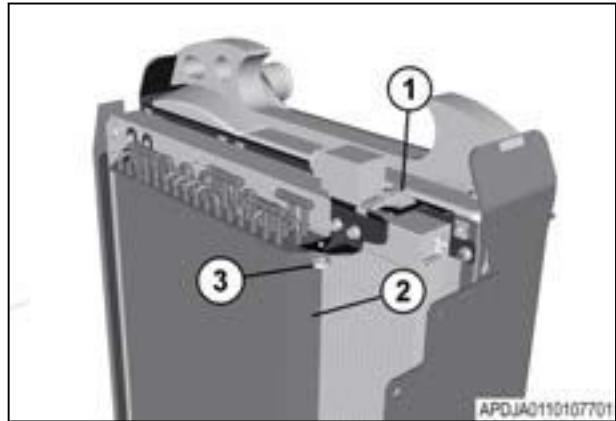


Fig. 71

6. Remove the hardware (1) and the condenser (2).
The weight of the cooler is approximately 19 kg (42 lb).

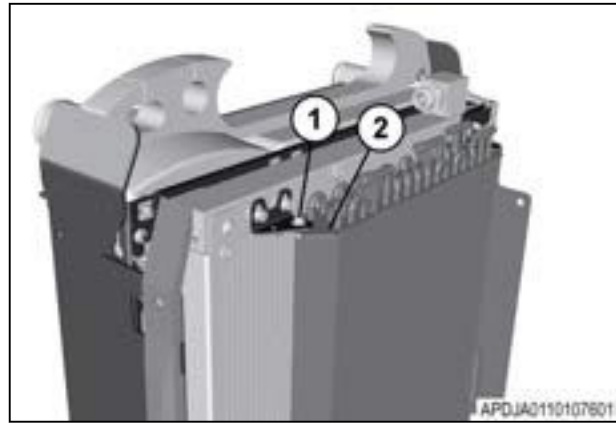


Fig. 72

7. Remove the hardware (1), both cooler brackets (2), and both cooler pivots (3).

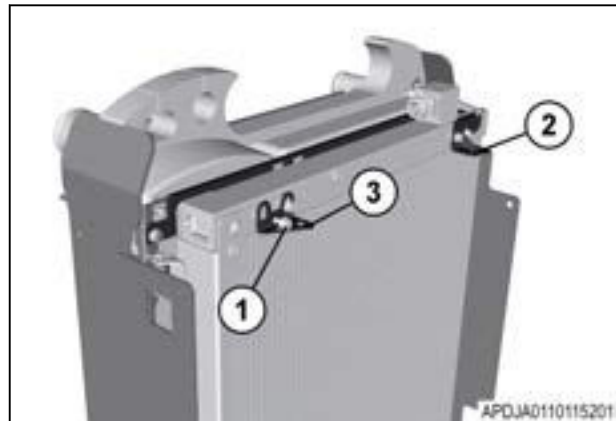


Fig. 73

8. Remove the top fitting (1) and the bottom fitting (2) from the hydraulic oil cooler.

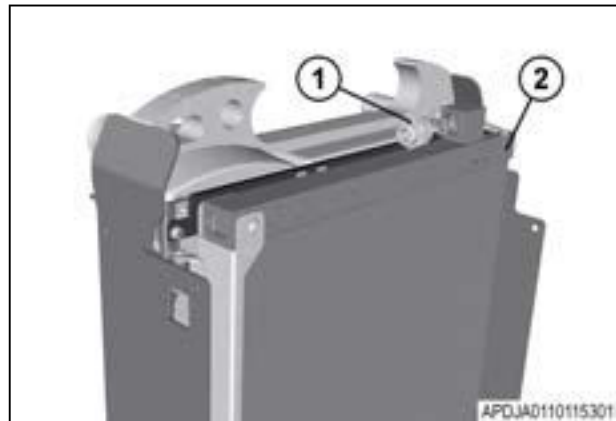


Fig. 74