

2.1.4 Install the auger bearing

Procedure

1. Install the auger bearing (1).
2. Install the hex nuts (2) and hex bolts from the flangettes.
3. Install the auger mounting plate/bearing assembly (1).
4. Install the hex nuts, washers, and hex bolts (2) to the auger mounting plate.
5. Install the auger adjusting hex bolts (3).
6. Adjust the auger mounting plate/bearing assembly to align with the marks.
7. Install the drive key, the shim(s), and the locking collar (4).
8. Install the auger safety clutch.
9. Disengage the lift cylinder stop.
10. Start the machine.
11. Lower the header.

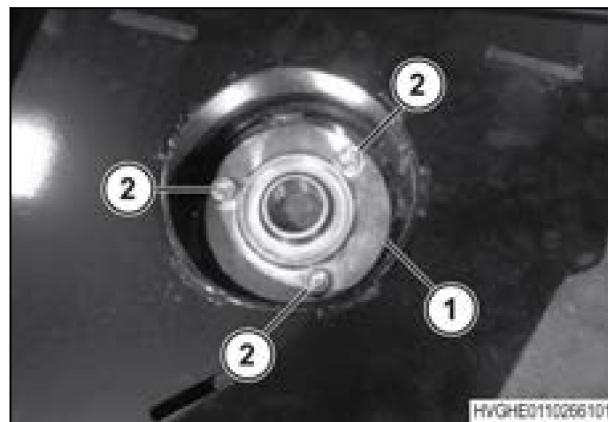


Fig. 5

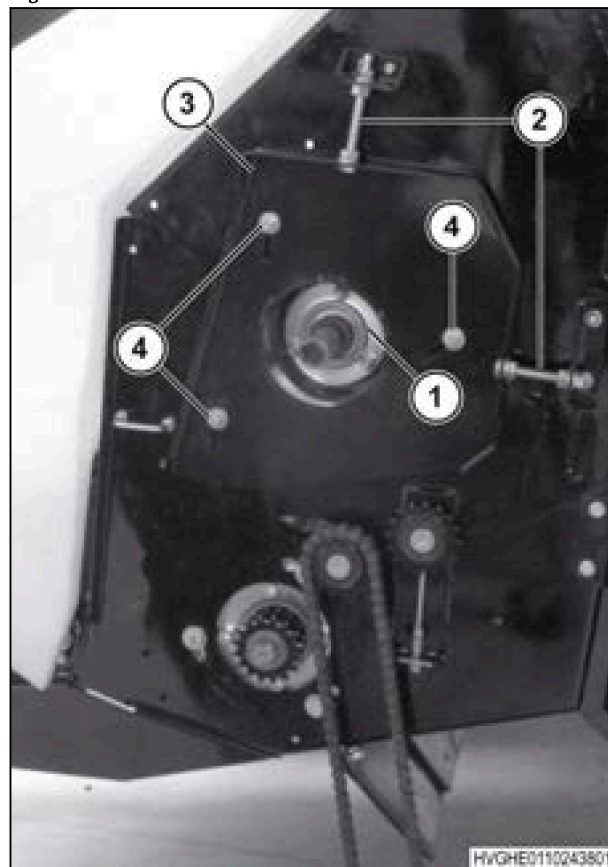


Fig. 6

3. Electrical system

3.1 Basic troubleshooting procedures	0
3.1.1 Tools	0
3.1.2 Continuity check	0
3.1.3 Voltage check	0
3.2 Connectors	3-3
3.2.1 Check a connector	3-3
3.2.2 Terminal numbers	3-3
3.2.3 Pins and sockets	3-4
3.2.3.1 Dielectric grease	3-5