

CX210 - CX230 - CX240 Crawler Excavators

Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27690GB
General specifications and special torque setting.....	1002	7-29361GB
2 ENGINE		
Removal and installation of the engine	2000	7-28230GB
Radiator and oil-cooler	2001	7-28050GB
Engine specifications	*	
Disassembly and assembly of the engine.....	*	
3 FUEL SYSTEM		
Fuel tank	3001	7-27970GB
Fuel engine system.....	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting	4001	7-27724GB
Inspection and maintenance of batteries and connecting a booster battery....	4002	7-27921GB
Main and engine electronic control boxes.....	4003	7-27933GB
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	7-27750GB
Rollers	5003	7-27772GB
Sprocket.....	5004	7-27781GB
Idler wheel and tension shock absorber	5005	7-27803GB
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	7-27841GB
Drive motor and final drive transmission disassembly and assembly.....	6002	7-28090GB
Swing reduction gear, removal and installation.....	6003	7-27820GB
Swing reduction gear, disassembly and assembly (CX210 - CX230).....	6004	7-28371GB
Swing reduction gear, disassembly and assembly (CX240)	6004	7-28391GB
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components.....	8000	7-27952GB
Specifications, troubleshooting, checks and hydraulic pressure settings	8001	7-27704GB
Hydraulic reservoir removal and installation	8002	7-27990GB
Main and pilot pumps, removal and installation	8003	7-27860GB
Main hydraulic control valve, removal and installation.....	8004	7-27890GB
Attachment cylinders, removal and installation.....	8005	7-27791GB
Hydraulic swivel, removal and installation	8006	7-27811GB
Pilot blocs, removal and installation.....	8007	7-28130GB
Swing motor, removal and installation (CX210 - CX230).....	8008	7-28071GB
Swing motor, removal and installation (CX240).....	8008	7-28071GB
Main hydraulic pump, disassembly and assembly.....	8010	7-35490GB
Main hydraulic control valve, disassembly and assembly.....	8011	9-36270GB
Attachment cylinders, disassembly and assembly.....	8012	7-27902GB
Hand control levers, disassembly and assembly	8013	7-28110GB
Foot control levers, disassembly and assembly	8014	7-28210GB
Six-solenoid valves, disassembly and assembly	8015	7-27911GB
Caution valve, disassembly and assembly	8016	7-27942GB
Safety valve	8017	7-29631GB
Hydraulic swivel, disassembly and assembly	8018	7-28080GB
Swing motor, disassembly and assembly (CX210 - CX230).....	8019	7-28011GB
Swing motor, disassembly and assembly (CX240).....	8019	7-29760GB
Hydraulic functions.....	8020	7-28490GB

DIVISION/SECTION	SECTION N°	REFERENCE N°
9 UPPERSTRUCTURE		
Quick coupler	9000	9-93630GB
Upperstructure, turntable and counterweight.....	9002	7-27982GB
Boom, dipper and bucket	9003	7-27963GB
Seat and seat belt	9004	7-28120GB
Cab and cab equipment.....	9005	7-28022GB
Air conditioning troubleshooting.....	9006	9-88730GB
Air conditioning unit disassembly and assembly.....	9007	██████████
Air conditioning servicing	9008	██████████
Air conditioning components.....	9009	██████████
Articulated boom supplement (CX210 - CX230).....	9010	9-93770GB
Large format hydraulic and electrical schematics	Pocket	7-27623

* Consult the Engine Service Manual

██████████ Sections to be distributed at a later date

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.