

TM10246 - 644J Loader (S.N. 611232—) A/C Binary Pressure Switch Remove and Install

A/C Binary Pressure Switch Remove and Install




1. T192988A-UN: Left Access Door

LEGEND:

1 - Left Rear Access Door

Open left rear cab access door (1) by lifting on release lever left of operators seat.

2. [See Fresh Air Filter Remove and Install](#) . (Group 1830.)
-

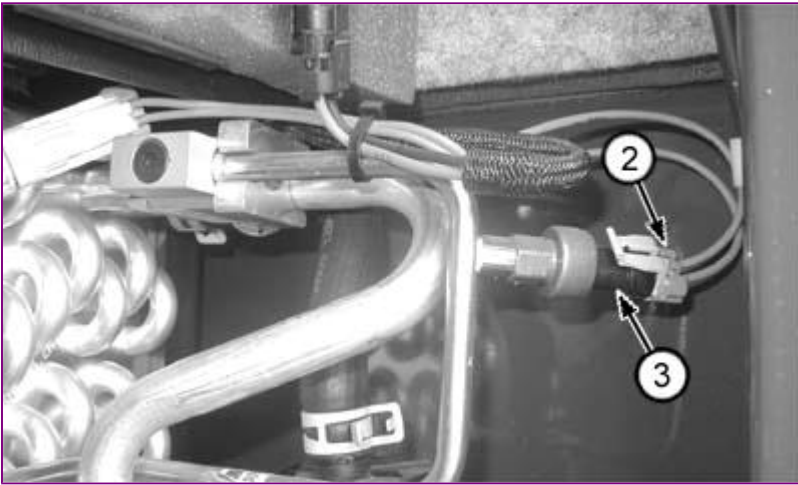

3. T192987A-UN: Pressure Switch Electrical Connector


LEGEND:

- 2 - Wiring Harness
3 - Pressure Switch

Disconnect wiring harness (2) from the pressure switch (3).

4. **NOTE:**

A Schrader valve is located in the connection to prevent the air conditioning from discharging when the switch is removed.

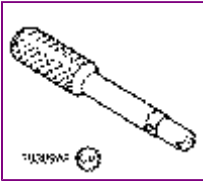

T8389AF-UN: JT02130

Remove pressure switch (3). Inspect and replace as required.

5. Connect wiring harness (2) to pressure switch (3).
6. Install air filter and close access door (1).