

**Main fuse box**

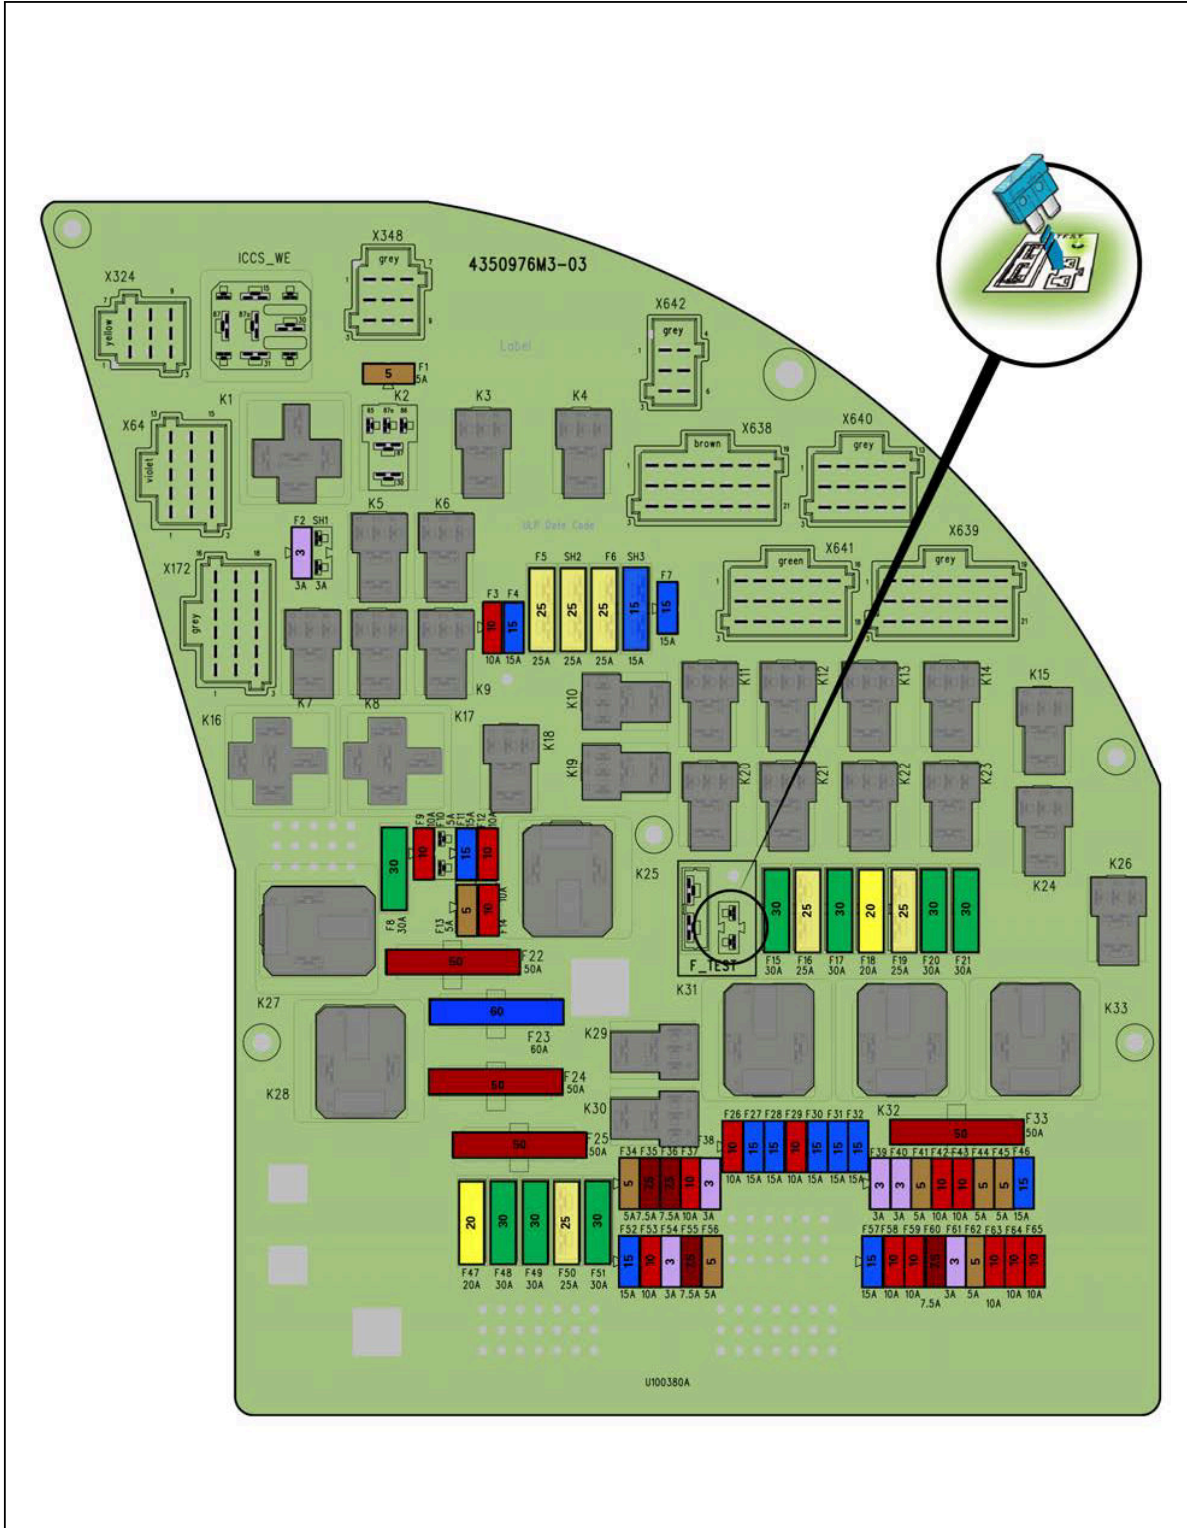


Fig. 1

**For TechStar CVT transmission**

Number	Amperage	Size	Protected function
F1	5A	Small	Fuse board earth
F2	3 A	Small	Functions <ul style="list-style-type: none"> <li>• K6 relay control circuit supplying the +ACC for the tractor</li> </ul>
F3	10 A	Small	+ACC <b>X395</b> - Radio supply
F4	15 A	Small	+ ACC <ul style="list-style-type: none"> <li>• <b>X403</b> - Rear windscreen wiper motor</li> <li>• <b>X411</b> - Rear windscreen wiper switch</li> <li>• <b>X453</b> - Extreme cold weather pump motor</li> </ul>
F5	25 A	Average	+ACC <ul style="list-style-type: none"> <li>• <b>X58</b> - Windscreen wiper and direction indicator control unit</li> <li>• <b>X65</b> - Front windscreen wiper motor</li> </ul>
F6	25 A	Average	High beam lamps on grille and hand rail
F7	15 A	Small	Low beam lamps on grille and hand rail
F8	30 A	Average	+BAT <b>X250</b> - Power socket in cab (on the right-hand console)
F9	10 A	Small	Not used
F10	15 A	Small	<b>X646</b> - Battery isolator switch
F11	15 A	Small	K7 and K8 relay power circuit supplying +BAT to functions 3 and 4 of the <b>ENG109</b> - External connector for front-loader supply
F12	10 A	Small	Functions <ul style="list-style-type: none"> <li>• K6 relay power circuit supplying the +ACC for the tractor</li> </ul>
F13	5 A	Small	Auto-Guide™ antenna +BAT
F14	10 A	Small	+ APC <ul style="list-style-type: none"> <li>• <b>X250</b> - Power socket in cab(on the right-hand console)</li> <li>• <b>X250</b> - Power socket in cab(on the front right-hand fender arch)</li> </ul>
F15	30 A	Average	+BAT <b>X652</b> - Hazard warning light unit
F16	25 A	Average	<ul style="list-style-type: none"> <li>• <b>X275</b> - Front accessories connection socket (work light)</li> <li>• <b>X365</b> - Hand-rail work light</li> </ul>
F17	30 A	Average	<ul style="list-style-type: none"> <li>• <b>X78</b> - Work light on rear right-hand fender</li> <li>• <b>X93</b> - Work light on rear left-hand fender</li> </ul>