


# AUTOMATIC HEATER-AIR CONDITIONER (BLOWER CONTROL) 149

(For Component Locations See Page 201)

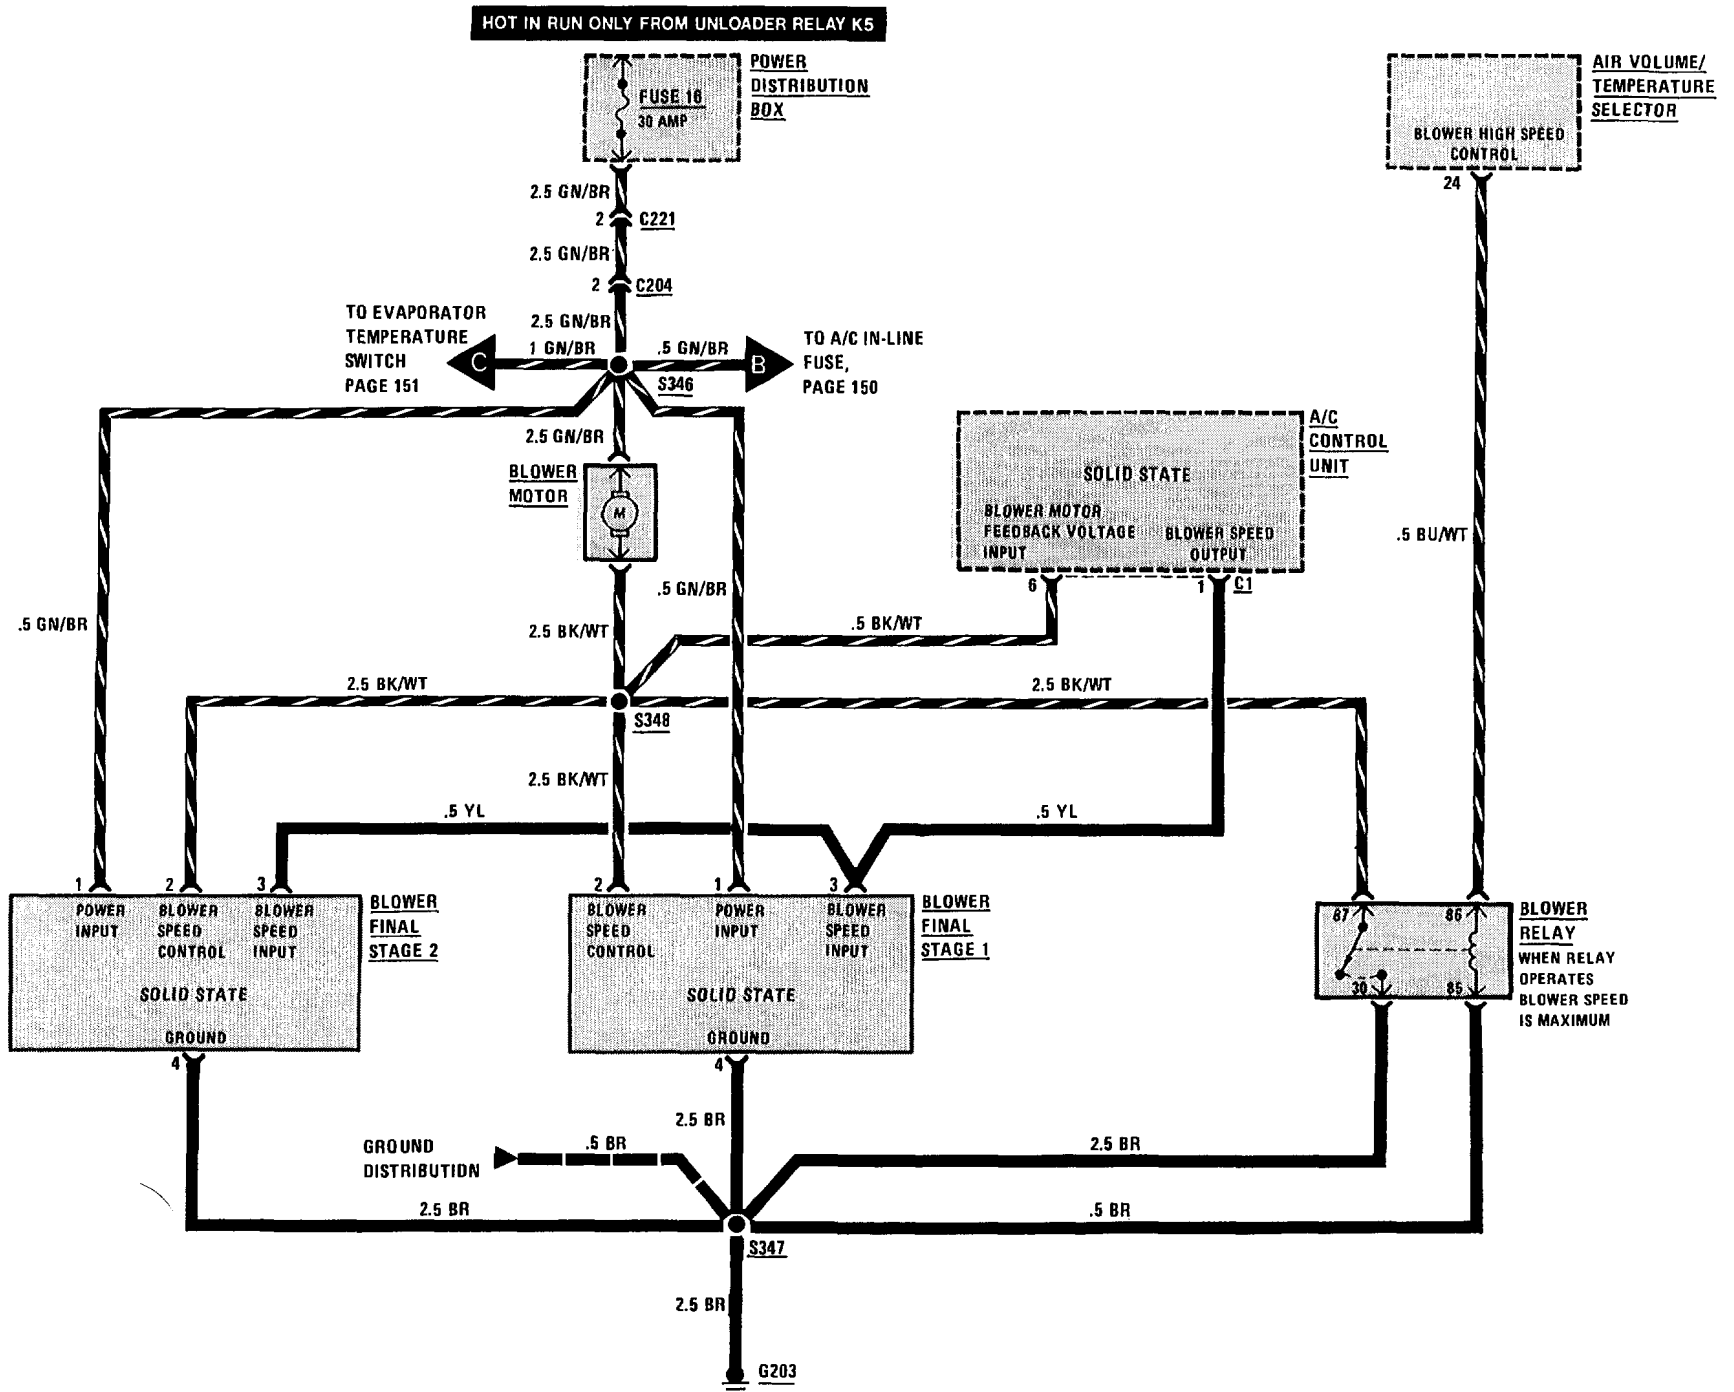

# 150 AUTOMATIC HEATER-AIR CONDITIONER (AIR CONTROL)

(For Component Locations See Page 201)


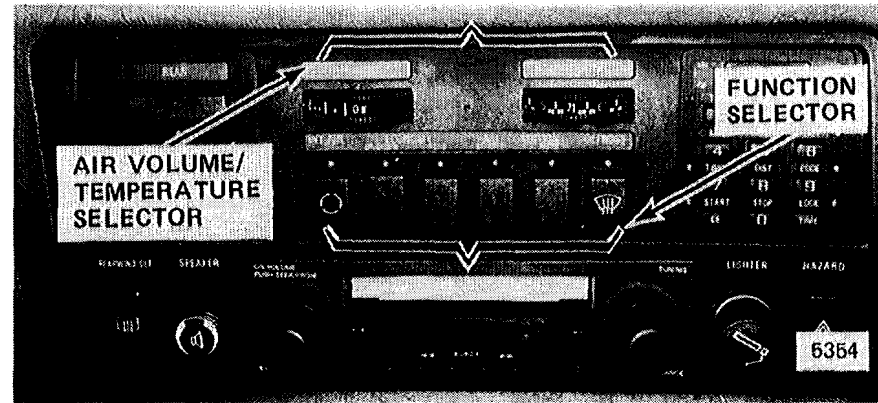


Figure 1 - At Center Console

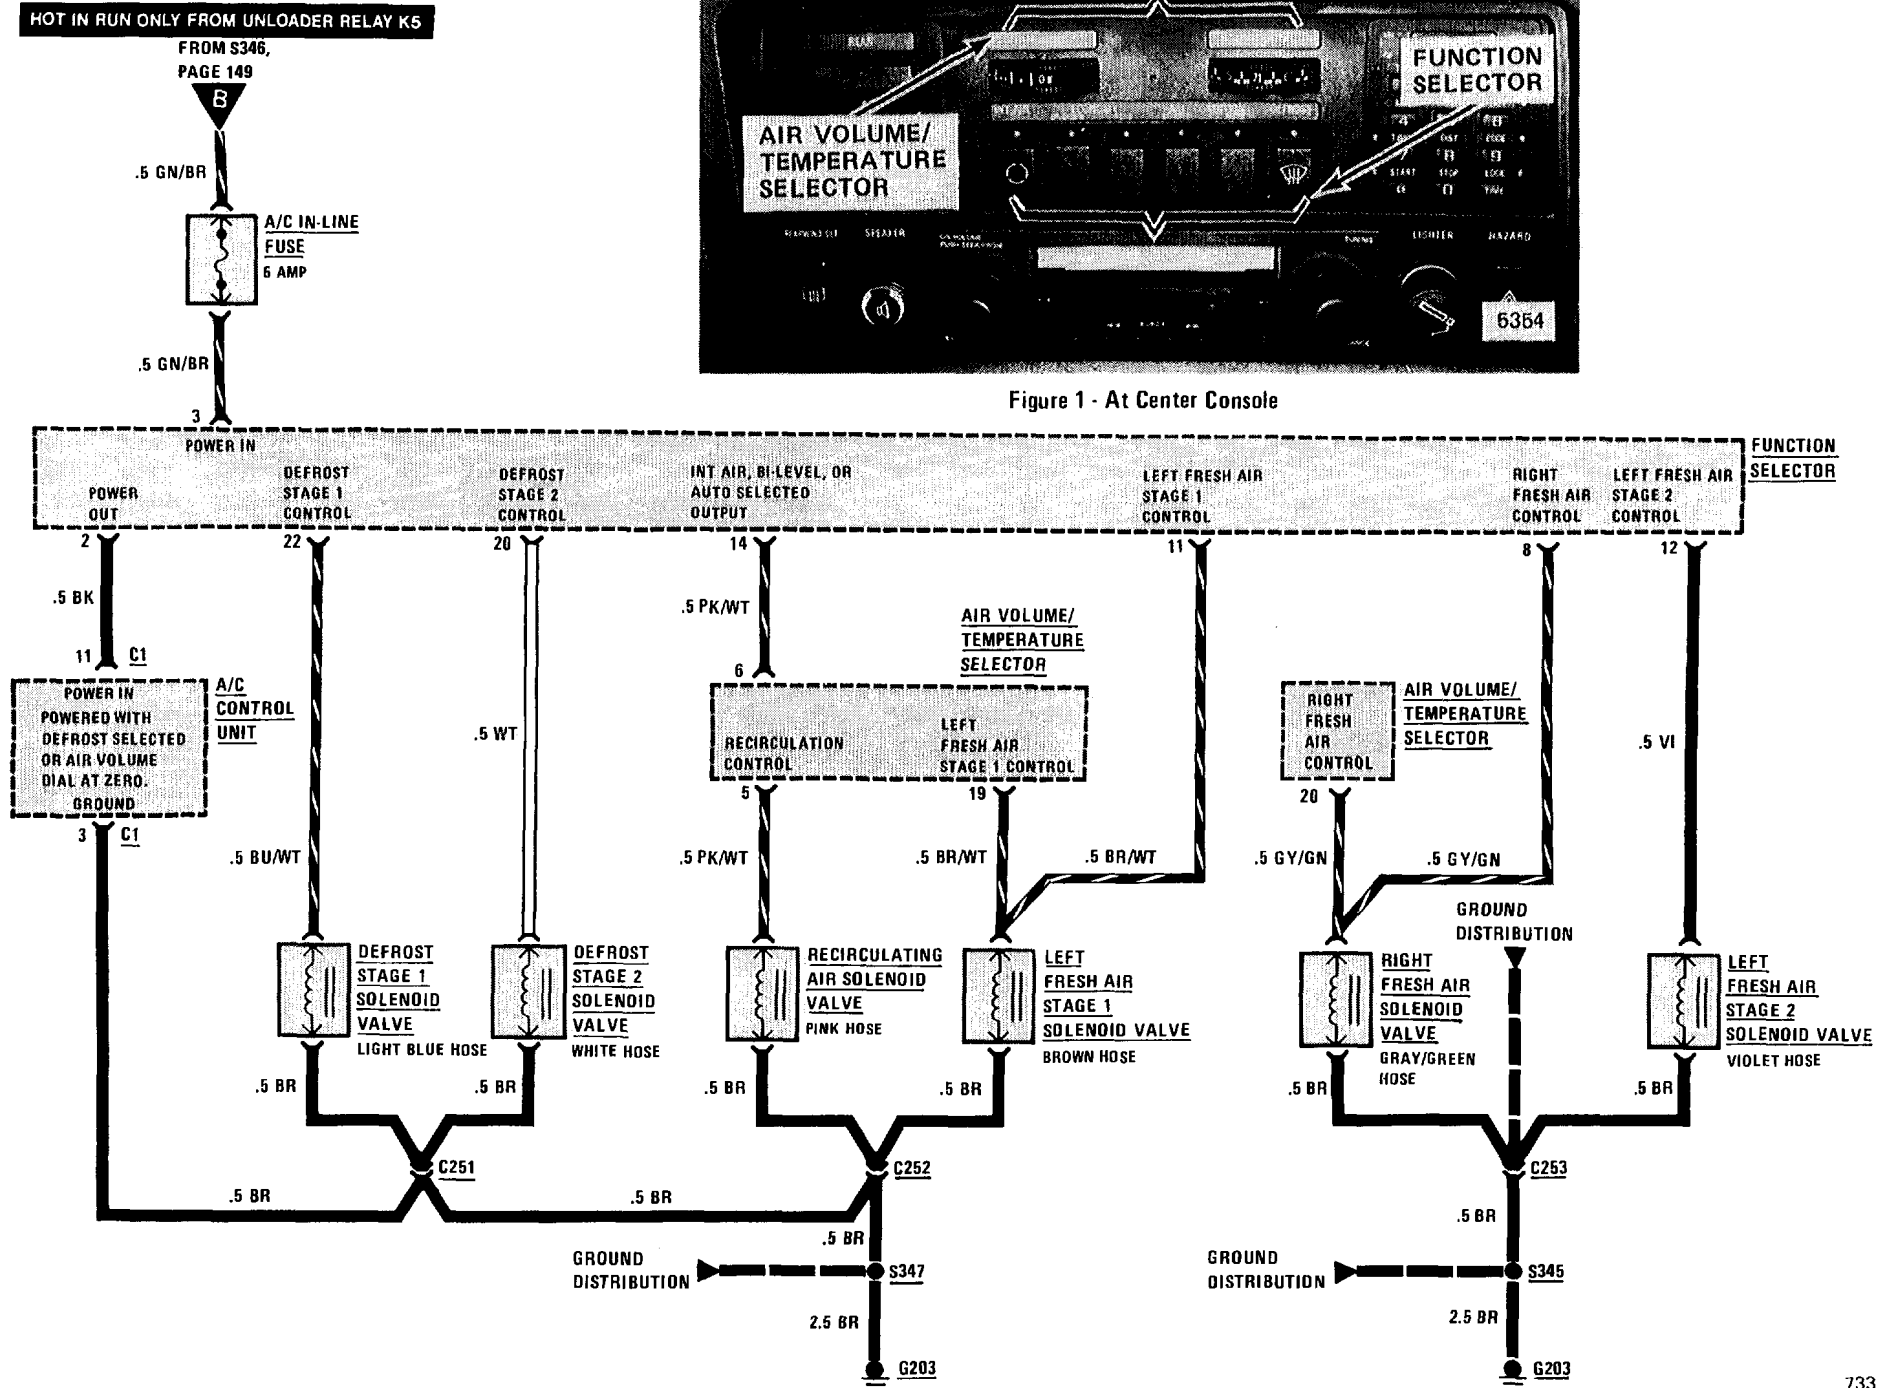

# AUTOMATIC HEATER-AIR CONDITIONER (AIR/COMPRESSOR CONTROL) 151

(For Component Locations See Page 201)

**HOT IN RUN ONLY FROM UNLOADER RELAY K5**

