



- 4) Disconnect hose (68) between steering valve and steering cylinder tube from steering valve end. ❖11
- 5) Disconnect hose (69) between steering valve and priority valve from steering valve end.

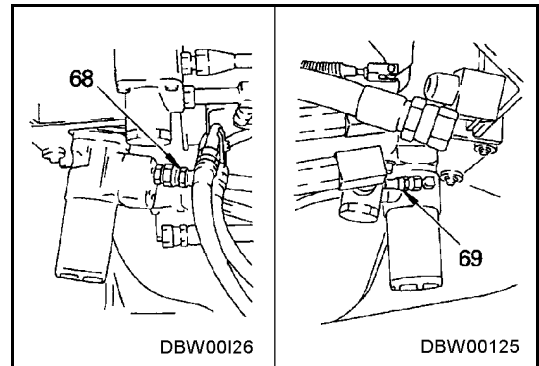

18. Fuel control cable

Remove locknut and disconnect fuel control cable (70) from injection pump. ❖12

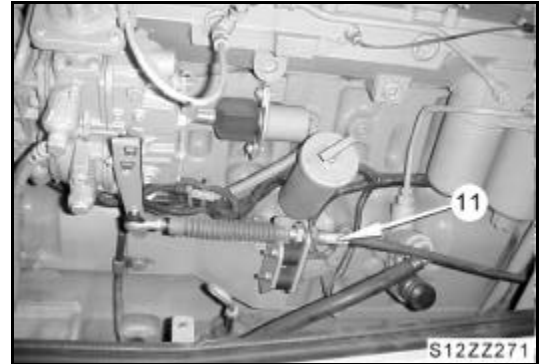


19. Cab, floor support


❖13

Sling cab and floor support, remove left and right mounting nuts (71) and (72) from viscous damper (73), then lift off cab and floor support (74).

- i Remove the air conditioner drain hose from the clamp.
- i Remove the caps at the top of the cab, and install four eye bolts.
- i Hold the tongue of the washer and loosen the mounting bolt.
- i Be careful of the cab glass when removing.
- i Check that there is no interference with the hoses and electric wiring, and lift off slowly.
- i After removing, put blocks under the floor support and lower to the ground.

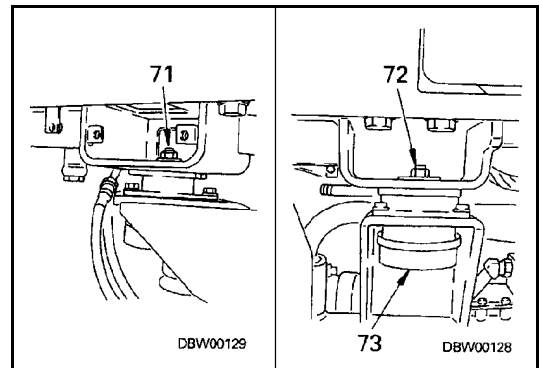


Cab, floor support: **670 kg (1477 lb)**

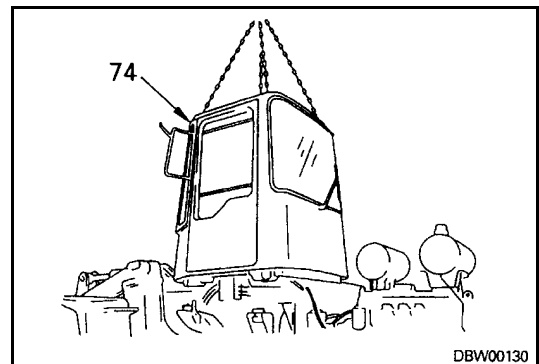


20. Hydraulic, steering pump

- 1) Remove tube hoses (75) and (76) between hydraulic, steering pump and hydraulic tank.
Disconnect the PPC hose clamp from the tube.

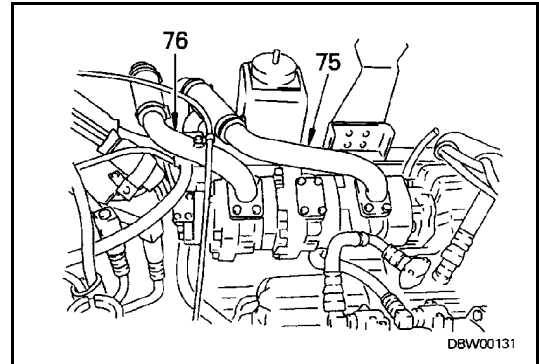


- 2) Disconnect each hose at bottom of pump from pump.
! Hose (77) for main control valve
! Hose (78) for priority valve (steering)
! Hose (79) for priority valve (switch)
Remove the spacers also.

✖14

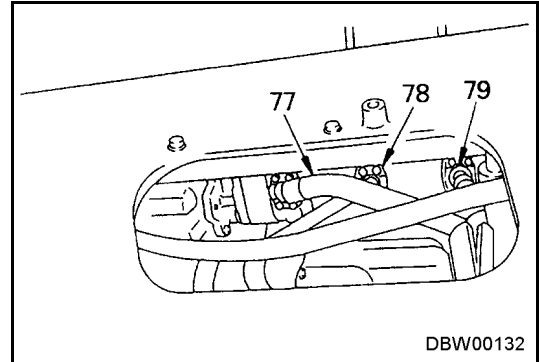

- 3) Disconnect hose (80) between hydraulic tank and steering valve from tube.

✖15

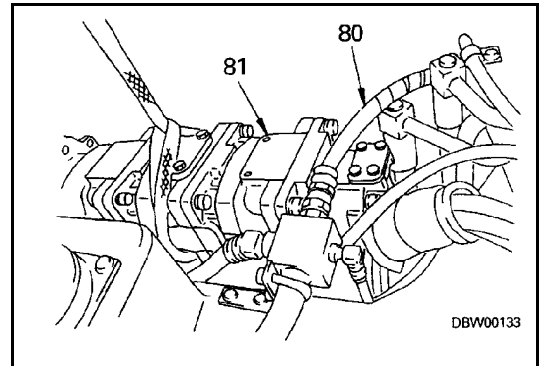

- 4) Sling hydraulic and steering pump (81), then remove mounting bolts and lift off.
Raise the pump slightly, then disconnect hose (82) to the charge valve from the pump end.

✖16

Hydraulic, steering pump: **44 kg (97 lb)**