

Illustration 4

g01209662

4. Remove bolts (7) and pedal (6).

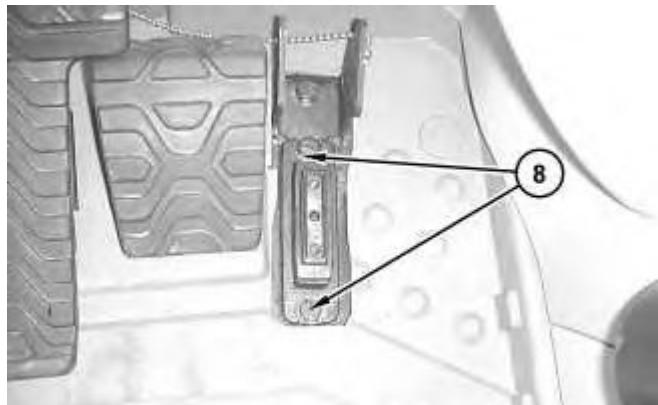


Illustration 5

g01209666

5. Remove bolts (8).

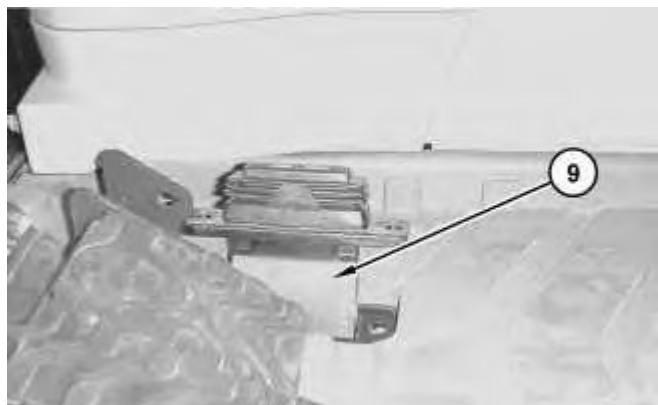


Illustration 6

g01209669

6. Remove auxiliary pilot valve (9).

## **Disassembly and Assembly**

### **324D, 325D, 326D and 329D Excavators and 329D MHPU Mobile Hydraulic Power Unit Machine Systems**

**Media Number -RENR8646-23**

**Publication Date -01/02/2015**

**Date Updated -28/05/2020**

i02426969

## **Auxiliary Pilot Valve (Straight Travel) - Disassemble**

**SMCS - 5059-015-AX**

**S/N - A3R1-UP**

**S/N - AZP1-UP**

**S/N - BFC1-UP**

**S/N - BTK1-UP**

**S/N - BYS1-UP**

**S/N - CYW1-UP**

**S/N - CZF1-UP**

**S/N - DBH1-UP**

**S/N - DJF1-UP**

**S/N - DTZ1-UP**

**S/N - EBM1-UP**

**S/N - EJC1-UP**

**S/N - GBR1-UP**

**S/N - GPB1-UP**

**S/N - GPK1-UP**

**S/N - J8D1-UP**

**S/N - J9D1-UP**

**S/N - JAT1-UP**