7. Assemble cover (14) in the body (1) with wrench bolt.



Figure 21

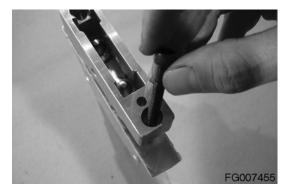


Figure 22

Assemble wrench bolt (15) in the body (1) with torque 8. wrench.

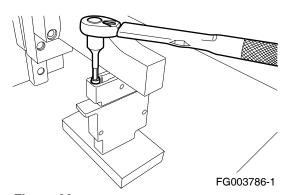


Figure 23

Assemble socket bolt (18) and nut (19) in the guide (16). 9.



Figure 24

Dozer Control Valve SP000992 Page 15 10. Assemble guide (16) and lever (20) with spring pin (21).

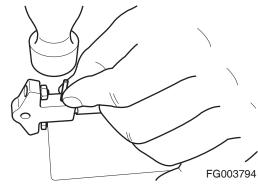


Figure 25

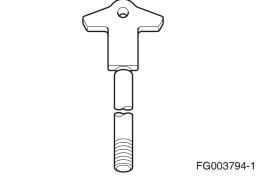


Figure 26

11. Assemble guide (16) in the cover with pin (17).


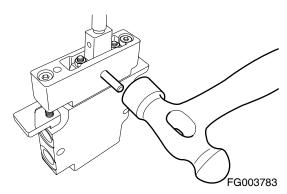


Figure 27

12. Adjust the clearance of lever (20) with wrench and wrench.

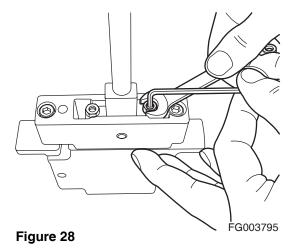

Dozer Control Valve Page 16

13. Assemble boot (22) and busshing (23) in the body (1).



Figure 29

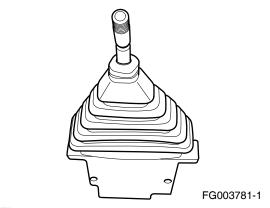


Figure 30

SP000992 **Dozer Control Valve**