

# FE.FG

## SERVICE MANUAL 2012 Model FOREWORD

This Service Manual contains maintenance and repair methods for the Mitsubishi Fuso Truck FE. FG Series. Read this manual carefully as an aid in providing correct, efficient maintenance. Please note that the information and specifications contained within this manual may change without notice. This is due to product modifications and continued vehicle improvements that are made throughout the model years. Should you encounter any discrepancy in the information provided, please do not hesitate to contact your nearest Mitsubishi Fuso Dealer or Mitsubishi Fuso Truck of America, Inc.

MARCH 2011

## GROUP INDEX

GENERAL .....	00
MAINTENANCE SCHEDULE .....	01
ENGINE.....	11
LUBRICATION .....	12
FUEL AND ENGINE CONTROL.....	13
COMMON RAIL SYSTEM.....	13E
COOLING.....	14
INTAKE AND EXHAUST .....	15
EMISSION CONTROL .....	17
BlueTec® SYSTEM .....	17E
CLUTCH.....	21
TRANSMISSION <DUONIC™> .....	22
DUONIC™ .....	22E
TRANSFER.....	24
PROPELLER SHAFT .....	25
FRONT AXLE	
<FE> .....	26A
<FG> .....	26B
REAR AXLE.....	27
WHEEL AND TIRE .....	31
FRONT SUSPENSION .....	33
REAR SUSPENSION.....	34
BRAKE.....	35
ANTI-LOCK BRAKE SYSTEM (ABS) ....	35E
PARKING BRAKE .....	36
STEERING .....	37
BUMPER AND FRAME .....	41
CAB.....	42
DOOR.....	43
EXTERIOR .....	51
INTERIOR .....	52
ELECTRICAL.....	54
HEATER, AIR-CONDITIONER AND VENTILATION .....	55
FULL AUTOMATIC AIR-CONDITIONER.....	55E

---

# **MODIFICATION SUMMARY**

**2013 MODEL YEAR**

**2014 MODEL YEAR**

**2014<sup>1</sup>/<sub>2</sub> MODEL YEAR**

**2015 TO 2016 MODEL YEARS**

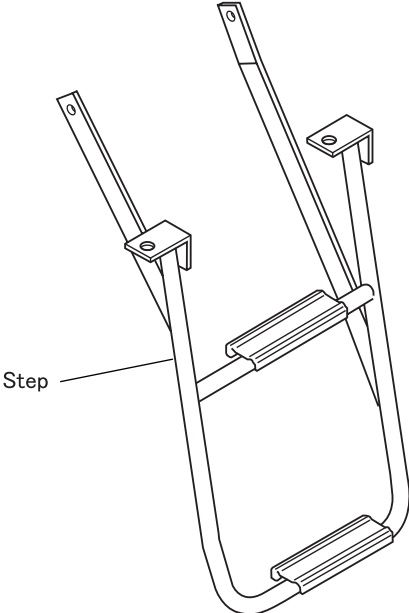
---

# **MODIFICATION SUMMARY**

**2013 MODEL YEAR**

# MODIFICATION SUMMARY

- This section describes only the difference from FE.FG SERVICE MANUAL 2012 Model (Pub.No.00ELT0001).
- Be sure to check the differences described in the following before servicing.

Group	Contents of different points	Service procedure
00 GENERAL	Removal and installation procedures for battery in PRECAUTIONS FOR MAINTENANCE OPERATION are changed because the dual battery system is newly adopted.	See Gr00.
22 TRANSMISSION <DUONIC®>	Hose clip is added to the transmission power take-off <Large-capacity type>.	See Gr22.
51 EXTERIOR	<p>The rear step (crew cab) is different.</p>  <p style="text-align: right;">P50926E</p>	-
52 INTERIOR	The driver seat and the passenger seat are different.	See Gr52.