

# **FE.FG**

## **SERVICE MANUAL**

### **2002 Model**

#### **FOREWORD**

This Service Manual contains maintenance and repair methods for the Mitsubishi Fuso Truck FE, FG Series. Read this manual carefully as an aid in providing correct, efficient maintenance. Please note that the information and specifications contained within this manual may change without notice. This is due to product modifications and continued vehicle improvements that are made throughout the model years. Should you encounter any discrepancy in the information provided, please do not hesitate to contact your nearest Mitsubishi Fuso Dealer or Mitsubishi Fuso Truck of America, Inc.

April 2001

## **GROUP INDEX**

### **HOW TO READ THIS MANUAL**

<b>GENERAL .....</b>	<b>00</b>
<b>MAINTENANCE SCHEDULE .....</b>	<b>01</b>
<b>ENGINE</b>	
< 4M5 > .....	11A
< 4D3 > .....	11B
<b>LUBRICATION</b>	
< 4M5 > .....	12A
< 4D3 > .....	12B
<b>FUEL AND ENGINE CONTROL</b>	
< 4M5 > .....	13A
< 4D3 > .....	13B
<b>ELECTRONICALLY CONTROLLED FUEL SYSTEM</b>	
< 4M5 > .....	13EA
< 4D3 > .....	13EB
<b>COOLING</b>	
< 4M5 > .....	14A
< 4D3 > .....	14B
<b>INTAKE AND EXHAUST</b>	
< 4M5 > .....	15A
< 4D3 > .....	15B
<b>CLUTCH .....</b>	<b>21</b>
<b>MANUAL TRANSMISSION .....</b>	<b>22</b>
<b>AUTOMATIC TRANSMISSION .....</b>	<b>23</b>
<b>TRANSFER .....</b>	<b>24</b>
<b>PROPELLER SHAFT .....</b>	<b>25</b>
<b>FRONT AXLE</b>	
< FE > .....	26A
< FG > .....	26B
<b>REAR AXLE .....</b>	<b>27</b>
<b>WHEEL AND TIRE .....</b>	<b>31</b>
<b>FRONT SUSPENSION .....</b>	<b>33</b>
<b>REAR SUSPENSION .....</b>	<b>34</b>
<b>BRAKE .....</b>	<b>35A</b>
<b>ANTI-LOCK BRAKE SYSTEM .....</b>	<b>35E</b>
<b>PARKING BRAKE .....</b>	<b>36</b>
<b>STEERING .....</b>	<b>37</b>
<b>FRAME .....</b>	<b>41</b>
<b>CAB .....</b>	<b>42</b>
<b>ELECTRICAL .....</b>	<b>54</b>
<b>AIR-CONDITIONER .....</b>	<b>55A</b>
<b>HEATER .....</b>	<b>55B</b>