

FE.FG

SERVICE MANUAL

2005 Model

FOREWORD

This Service Manual contains maintenance and repair methods for the Mitsubishi Fuso Truck FE. FG Series. Read this manual carefully as an aid in providing correct, efficient maintenance. Please note that the information and specifications contained within this manual may change without notice. This is due to product modifications and continued vehicle improvements that are made throughout the model years. Should you encounter any discrepancy in the information provided, please do not hesitate to contact your nearest Mitsubishi Fuso Dealer or Mitsubishi Fuso Truck of America, Inc.

May 2004

GROUP INDEX

GENERAL	00
MAINTENANCE SCHEDULE	01
ENGINE.....	11
LUBRICATION.....	12
FUEL AND ENGINE CONTROL.....	13A
ELECTRONICALLY CONTROLLED FUEL SYSTEM	13E
COOLING.....	14
INTAKE AND EXHAUST	15
EMISSION CONTROL	17
CLUTCH.....	21
MANUAL TRANSMISSION	22
AUTOMATIC TRANSMISSION.....	23
TRANSFER.....	24
PROPELLER SHAFT	25
FRONT AXLE	
<FE>	26A
<FG>.....	26B
REAR AXLE.....	27
WHEEL AND TIRE	31
FRONT SUSPENSION	33
REAR SUSPENSION.....	34
BRAKE.....	35A
ANTI-LOCK BRAKE SYSTEM.....	35E
PARKING BRAKE	36
STEERING	37
FRAME.....	41
CAB.....	42
DOOR.....	43
EXTERIOR.....	51
INTERIOR	52
ELECTRICAL.....	54
AIR-CONDITIONER.....	55A
HEATER.....	55B