

| Component | "Power Variant" | "Profi - ProfiPlus Variants" |
|------------------------------------|-----------------------|---|
| Rear power lift | EPC 33 LS - EHS1 - sa | EPC 33 LS - EHS1 - sa or EPC 33 LS - EHS1 - sa/da |
| Front power lift (Standard) | SB 23 LS - EHS 1 | SB 23 LS - EHS 1 |
| Front power lift (Comfort control) | SB 23 LS - EHS 1 | SB 23 LS - EHS 1 |
| Hydraulic trailer brake valve | optional | optional |

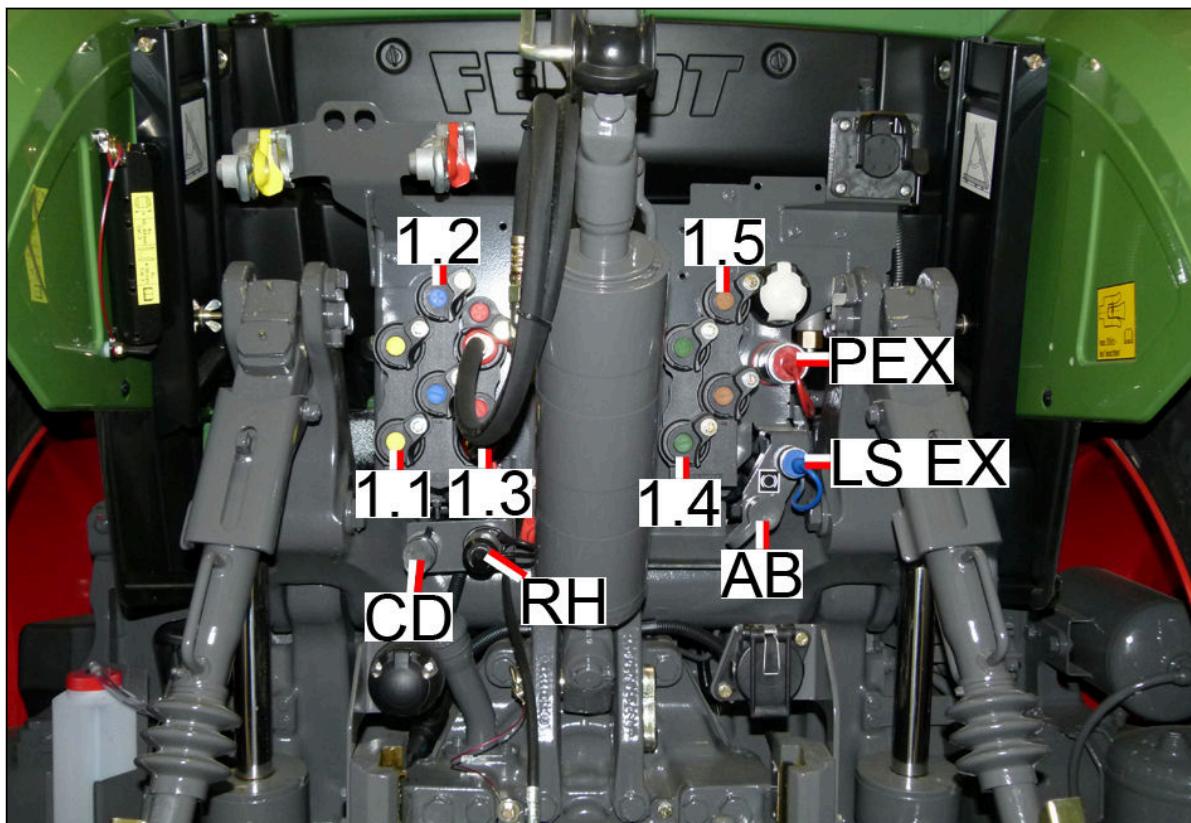


Fig. 1

- 1.1 (Y176) - position 1 spool valve (yellow)
- 1.2 (Y177) - position 2 spool valve (blue)
- 1.3 (Y178) - position 3 spool valve (red)
- 1.4 (Y179) - position 4 spool valve (green)
- 1.5 (Y180) - position 5 spool valve (brown)

- AB Hydraulic trailer brake
- CD Leakage (Case Drain) oil line
- LS External LS
- PEX External pressure supply (Power Beyond)
- RH Rear return line



Fig. 2

- 2.1 **(Y182)** - position 7 spool valve (olive)
 2.2 **(Y183)** - position 8 spool valve (gray)

RF Front return pipe

12.1.3 Pressure measuring points overview

- M1** - Measuring point for emergency steering pump
- M2** - Measuring point for auxiliary pump
- M3** - Measuring point for variable pump
- M4** - Measuring point for Load Sensing pressure
- M5** - Measuring point for control pressure

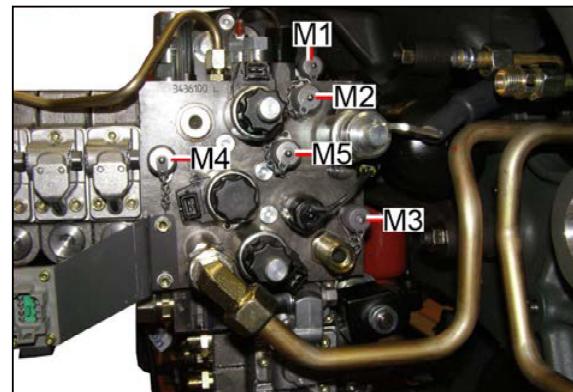


Fig. 3