

4. Remove the fastener (1) and hit out the pinch bolt (2) with an applicable tool. Then remove the drive shaft.

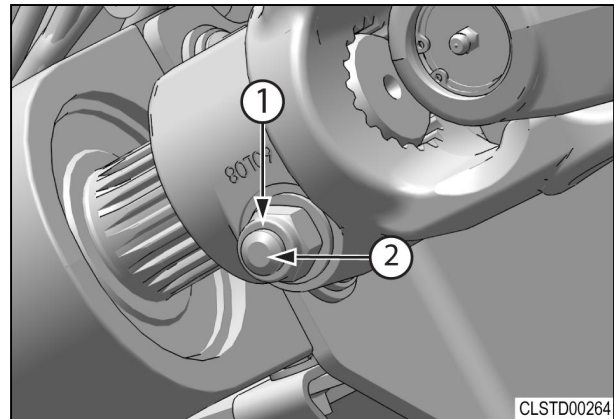


Fig. 4

5. Remove the fasteners (1, 2) and remove the drive shaft away from the feeder housing.

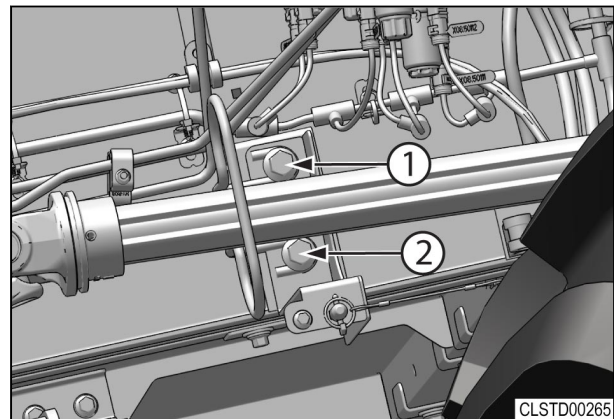


Fig. 5

6. Turn (1) to remove the drive belt tension. Then remove the drive belt.

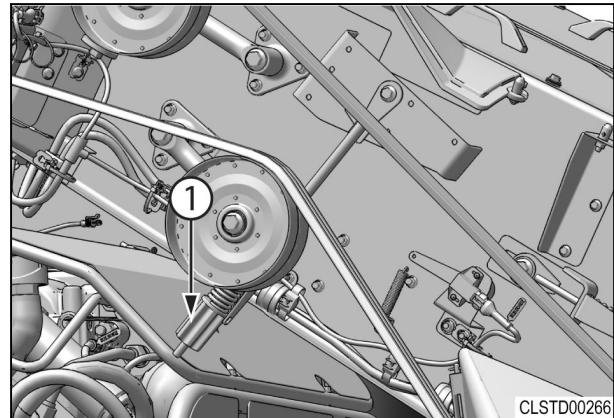


Fig. 6

7. Remove the fasteners and then remove the pulley.

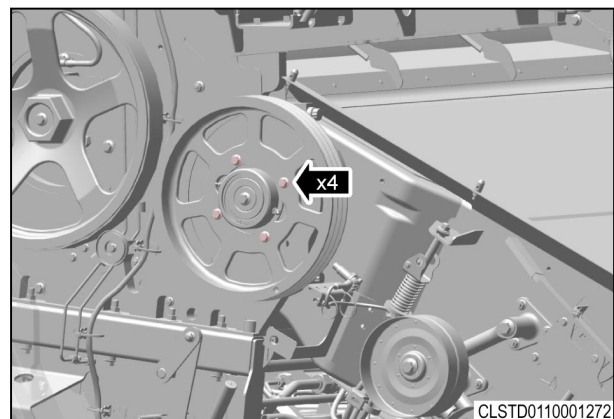


Fig. 7

8. Remove the fasteners (1, 2, 3, 4) and remove the top covers.

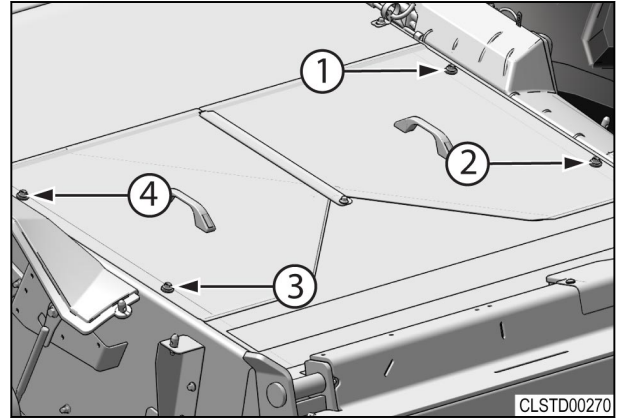


Fig. 8

9. Remove the fasteners (1, 2, 3, 4) and remove the bottom cover.

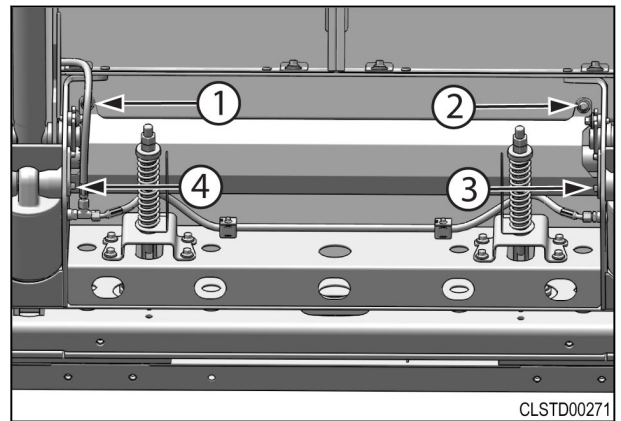


Fig. 9

10. Install the safety device (1).

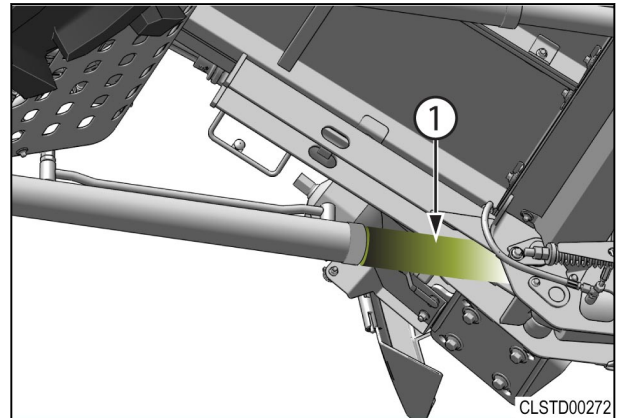


Fig. 10

11. Install the brackets to the feeder housing at points (A, B) and (C).

12. Attach the applicable lift equipment to the brackets.

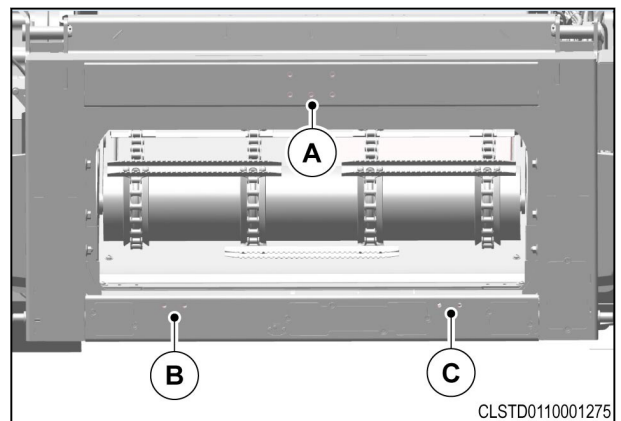


Fig. 11