

VALVE ROCKER ARM COVER REMOVAL - LEFT SIDE

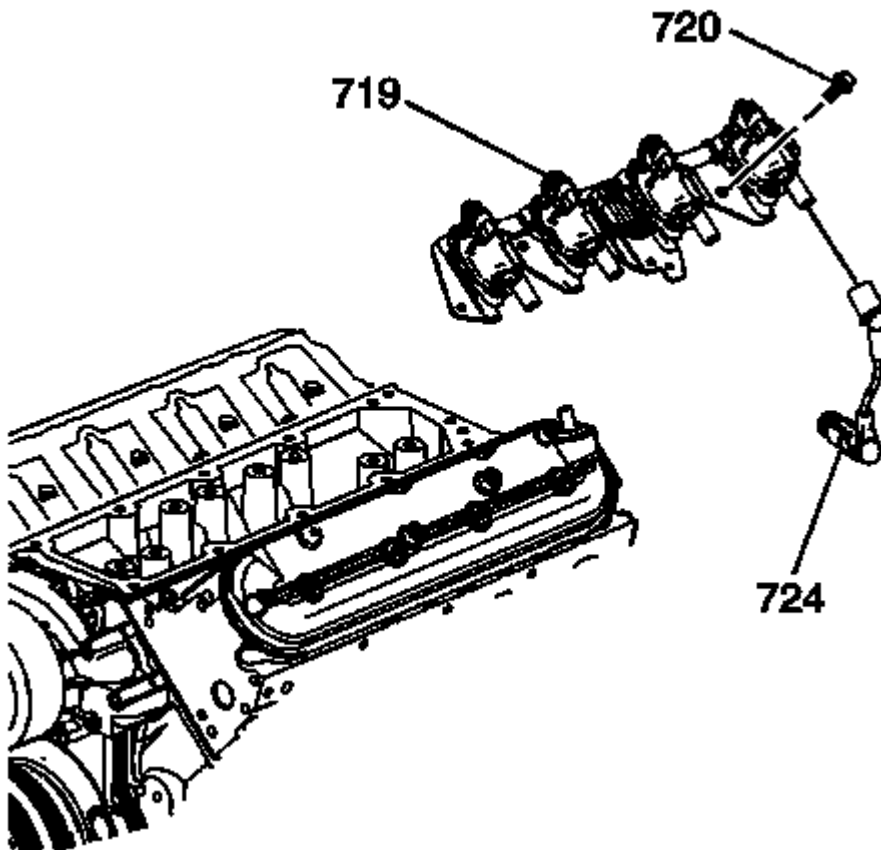


Fig. 9: Identifying Ignition Coils & Bracket
Courtesy of GENERAL MOTORS CORP.

1. Remove the spark plug wires (724).
2. Remove the ignition coil bracket studs (720).
3. Remove the ignition coil and bracket assembly (719).

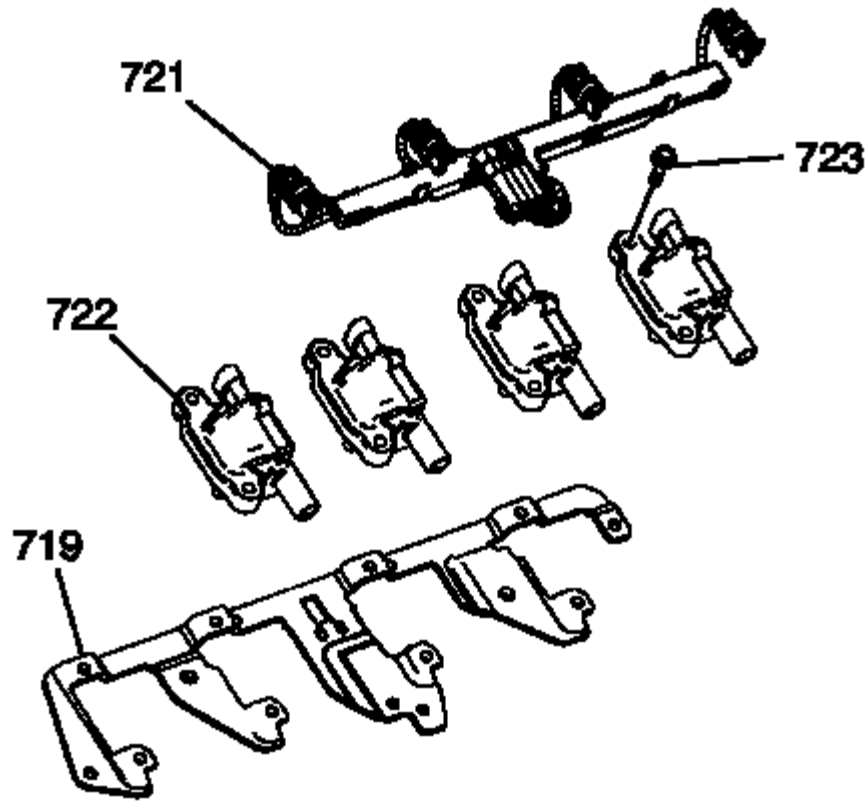


Fig. 10: View Of Bracket, Bolts, Coils & Wire Harness
Courtesy of GENERAL MOTORS CORP.

4. Disconnect the ignition coil electrical connectors.
5. Remove the bolts (723), coils (722), and wire harness (721) from the bracket (719), as required.

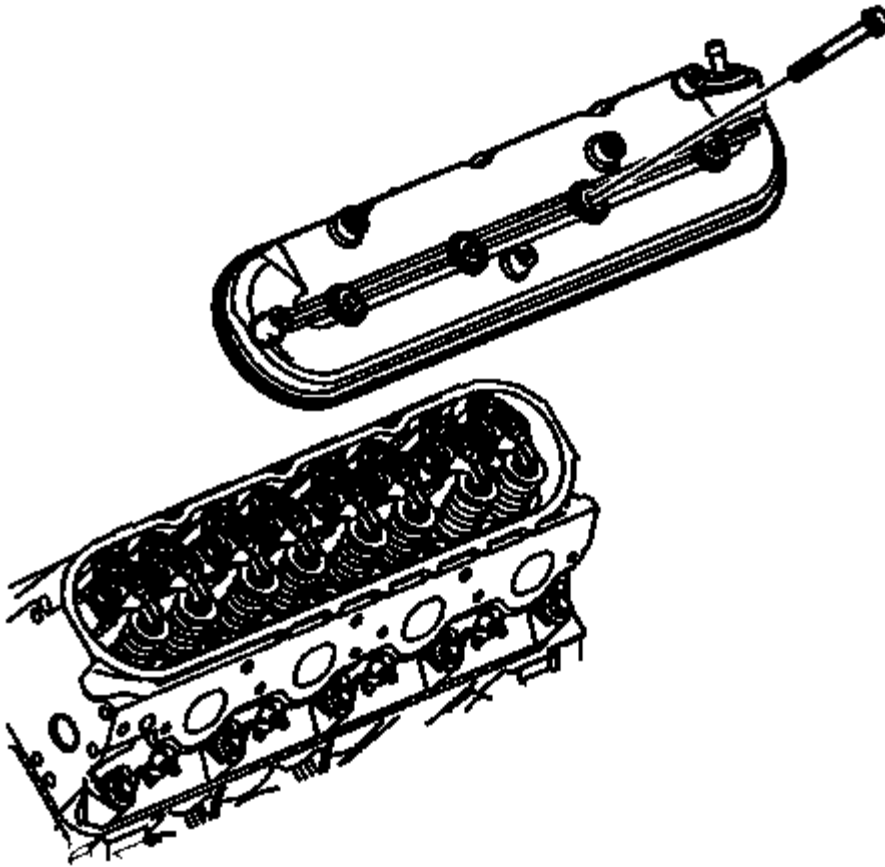


Fig. 11: View Of Valve Rocker Arm Cover
Courtesy of GENERAL MOTORS CORP.

6. Remove the valve rocker arm cover bolts and cover.

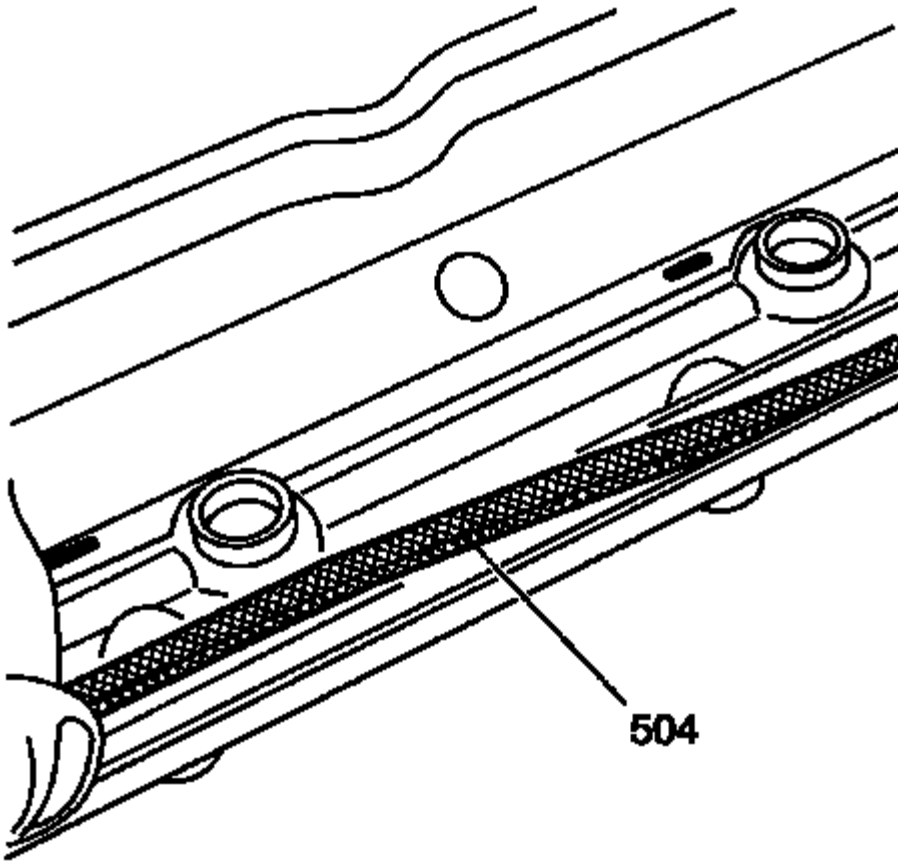


Fig. 12: View Of Valve Rocker Arm Cover Gasket
Courtesy of GENERAL MOTORS CORP.

7. Remove the gasket (504) from the cover.

VALVE ROCKER ARM COVER REMOVAL - RIGHT SIDE

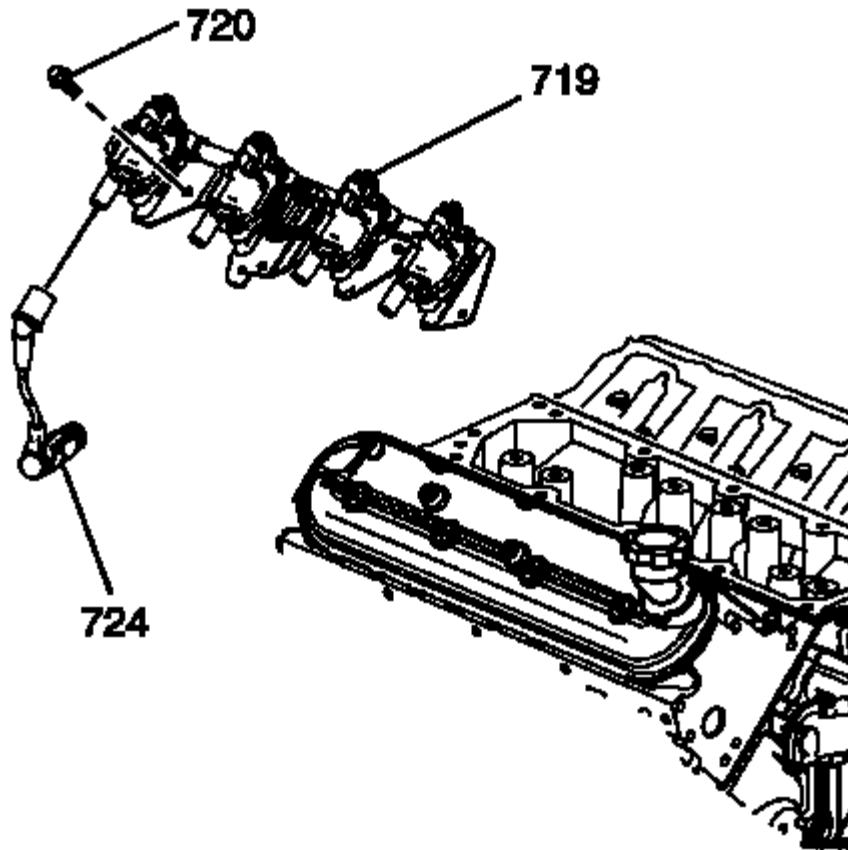


Fig. 13: View Of Ignition Coils & Bracket
Courtesy of GENERAL MOTORS CORP.

IMPORTANT: Do not remove the oil fill tube from the cover, unless service is required. If the oil fill tube has been removed from the cover, install a NEW tube during assembly.

1. Remove the spark plug wires (724).
2. Remove the ignition coil bracket studs (720).
3. Remove the ignition coil and bracket assembly (719).