

OIL LEVEL INDICATOR AND TUBE REMOVAL

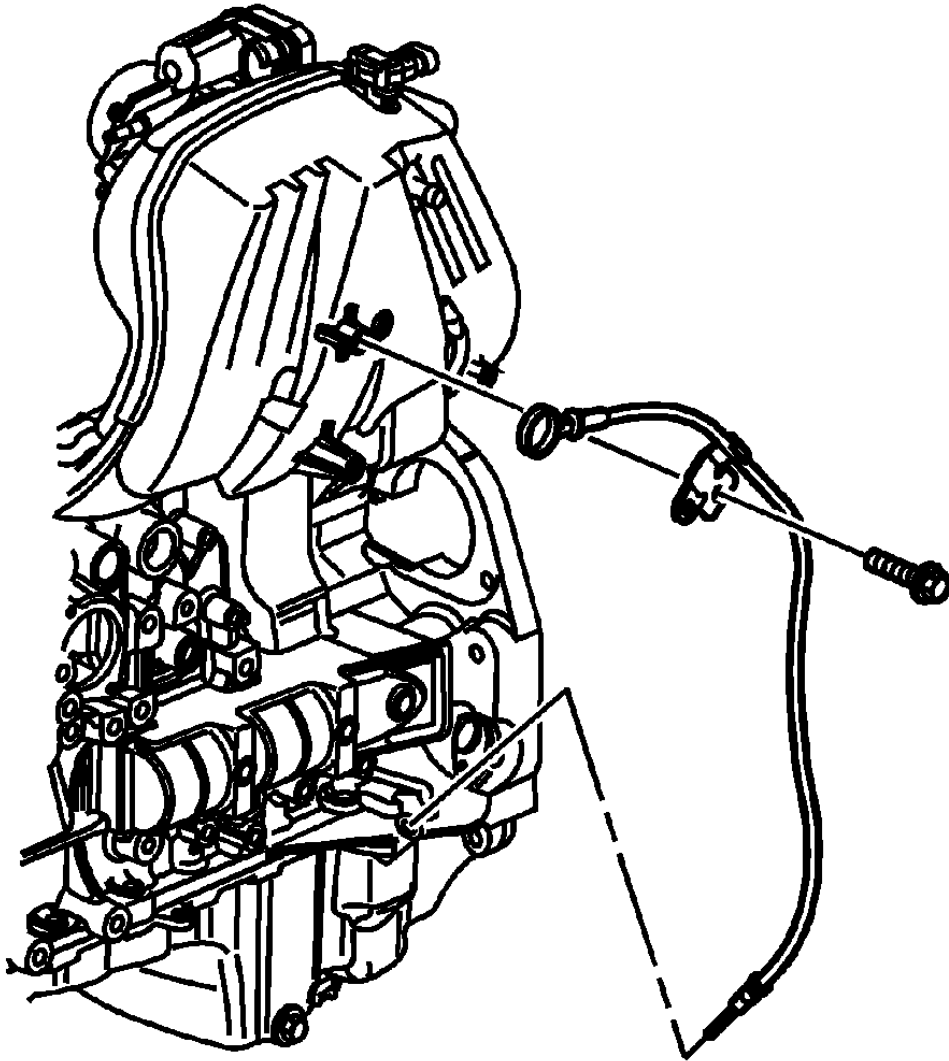


Fig. 335: View Of Oil Level Indicator Tube
Courtesy of GENERAL MOTORS CORP.

1. Remove the oil level indicator.
2. Remove the oil level indicator tube bolt.
3. Remove the oil level indicator tube.

EXHAUST MANIFOLD REMOVAL

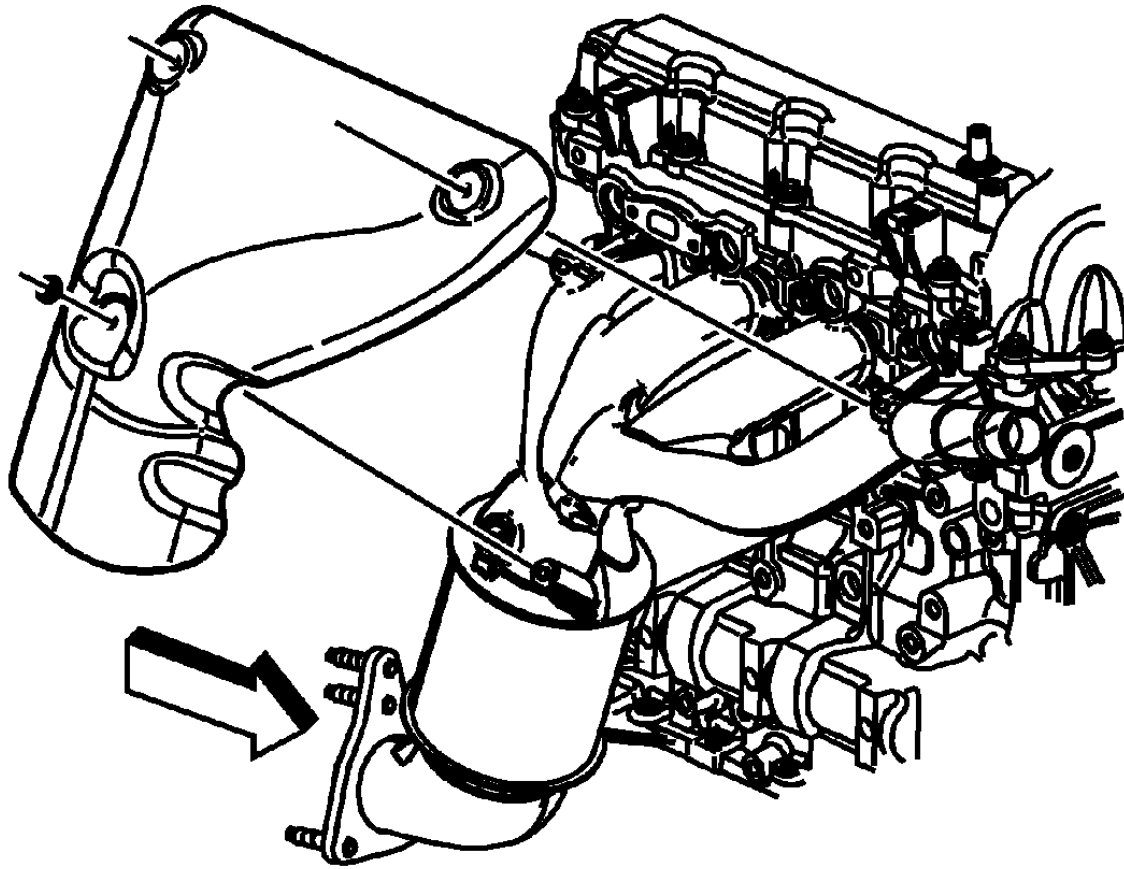


Fig. 336: Exhaust Manifold Heat Shield And Nuts
Courtesy of GENERAL MOTORS CORP.

1. Remove the exhaust manifold heat shield nuts.
2. Remove the exhaust manifold heat shield.

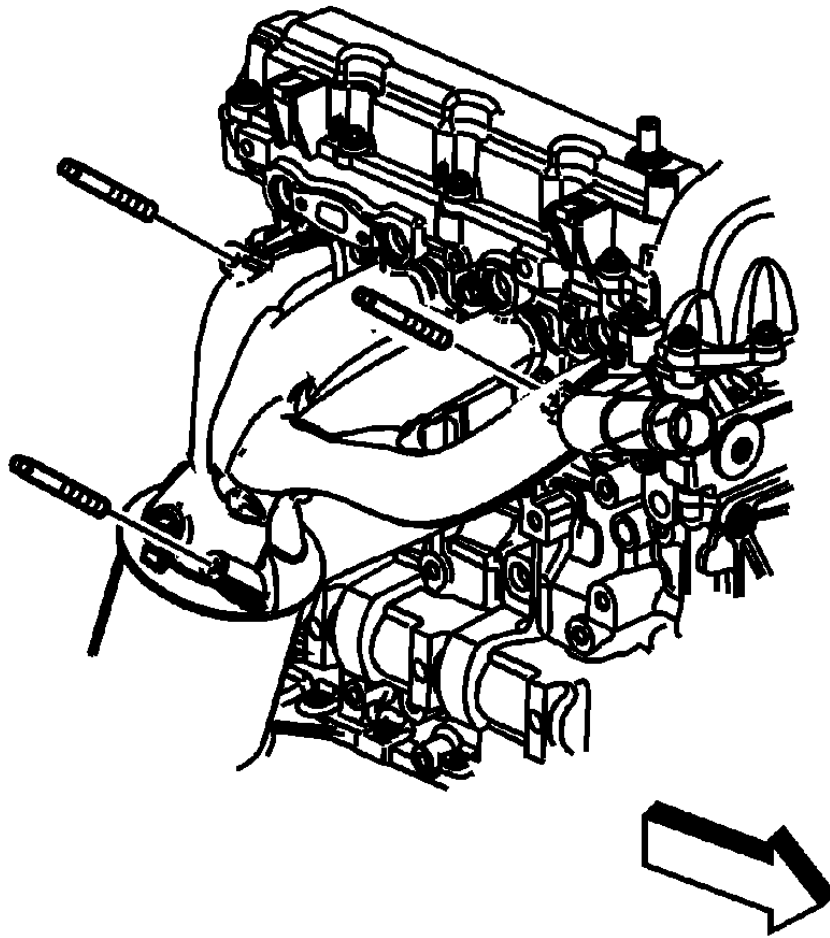


Fig. 337: Exhaust Manifold Studs
Courtesy of GENERAL MOTORS CORP.

3. Remove the exhaust manifold studs. (if needed)

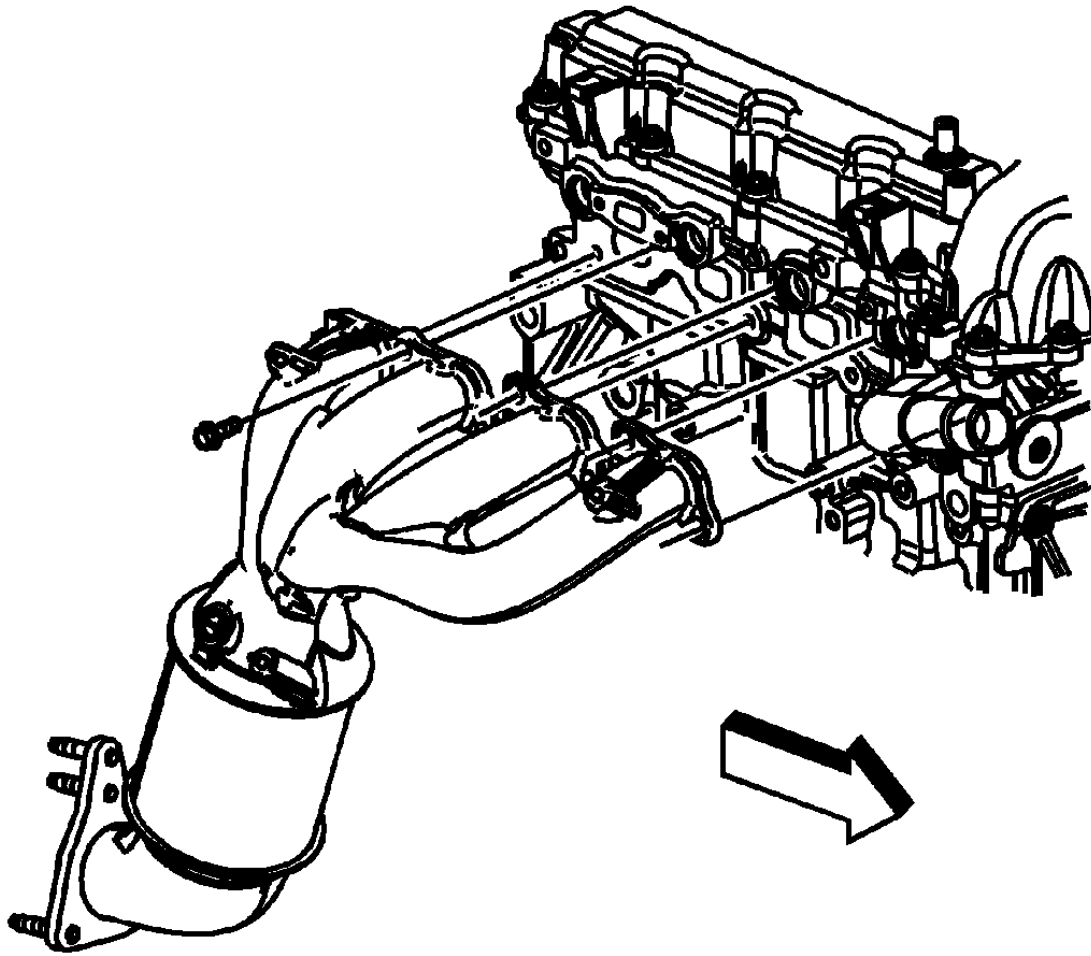


Fig. 338: Exhaust Manifold And Bolts
Courtesy of GENERAL MOTORS CORP.

4. Remove the exhaust manifold bolts.
5. Remove the exhaust manifold.

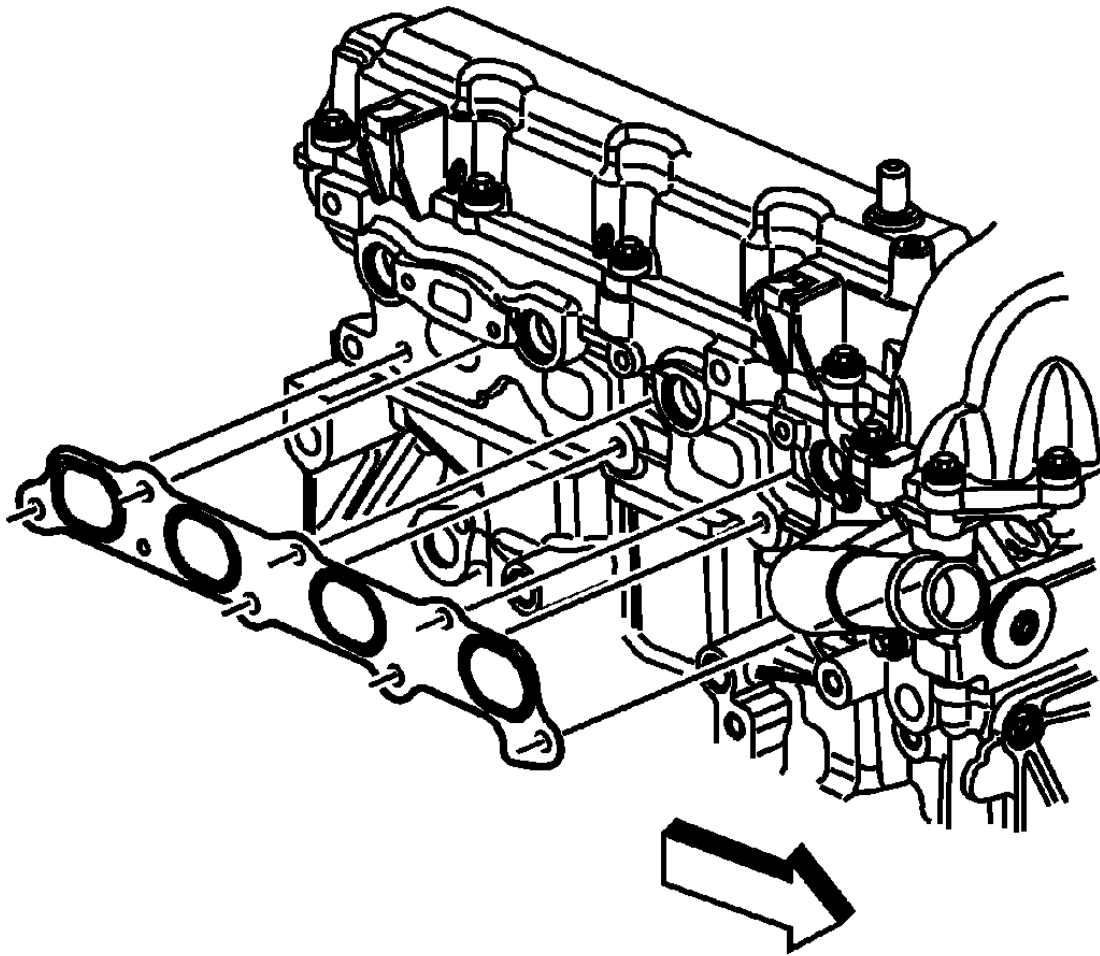


Fig. 339: View Of Exhaust Manifold Gasket
Courtesy of GENERAL MOTORS CORP.

6. Remove and discard exhaust manifold gasket.

OIL FILTER ADAPTER REMOVAL

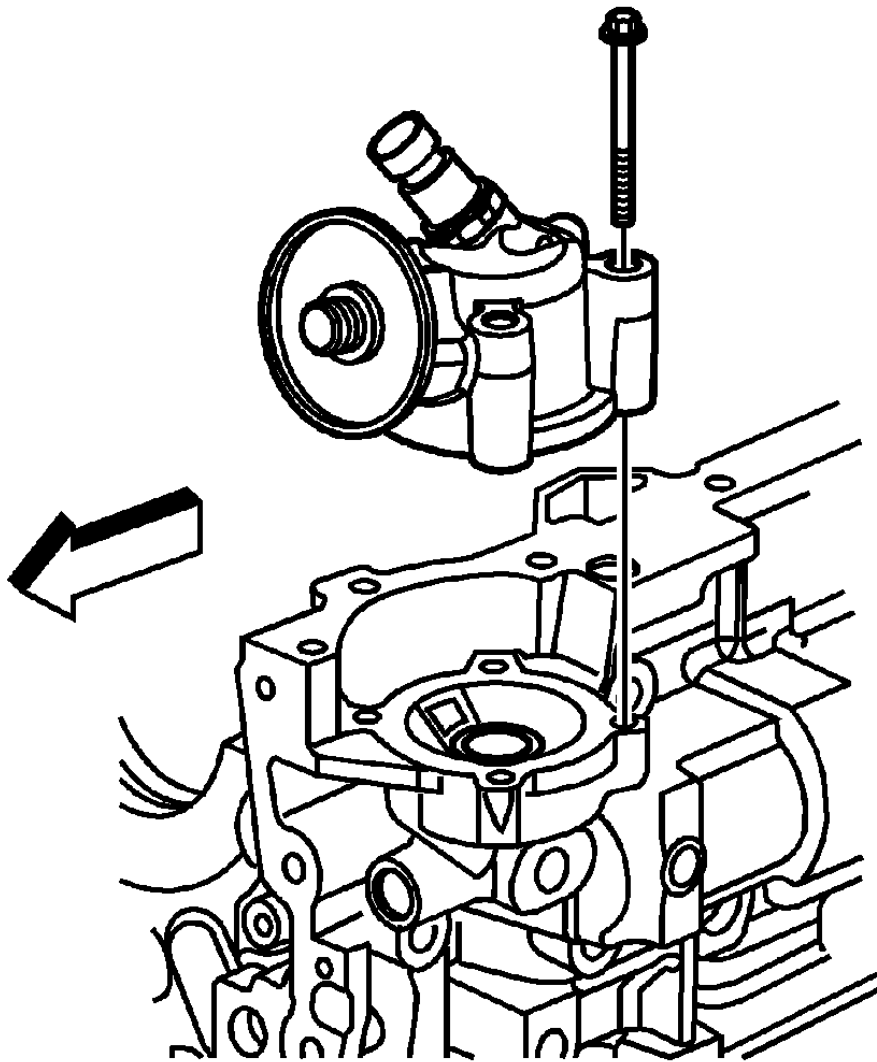


Fig. 340: View Of Oil Filter Adapter
Courtesy of GENERAL MOTORS CORP.

1. Remove the oil filter adapter.