
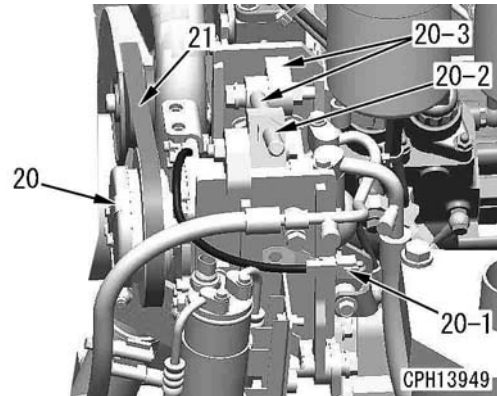




17. Remove air cleaner assembly (17). [*2]

18. Remove the right aftercooler hose and tube assembly (18). [*3]

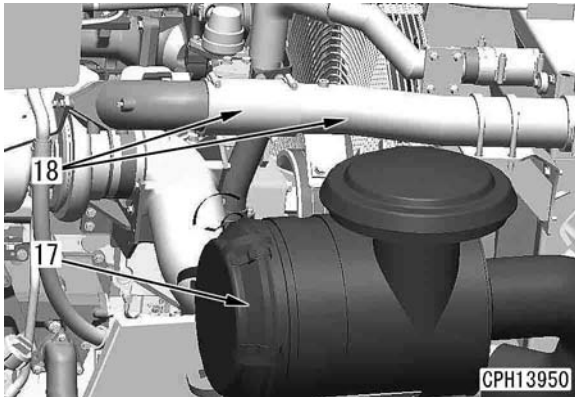


19. Air conditioner compressor

- 1) Remove glow plug wiring harness (19) (light blue).
- 2) Remove belt cover (19-1).

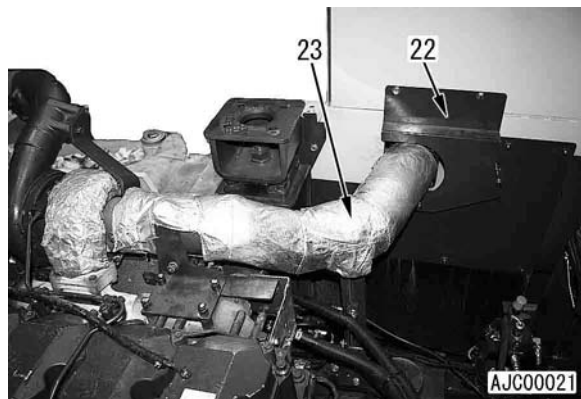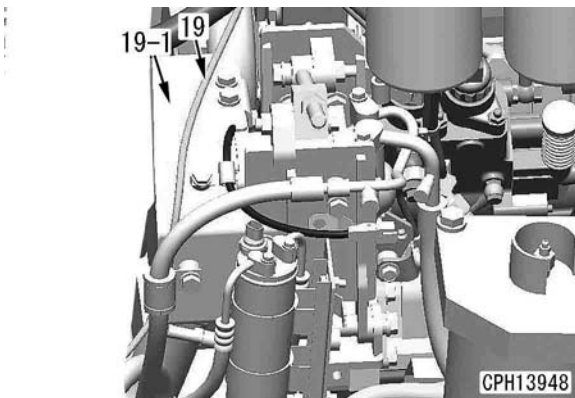

- 2) Remove exhaust pipe (24).

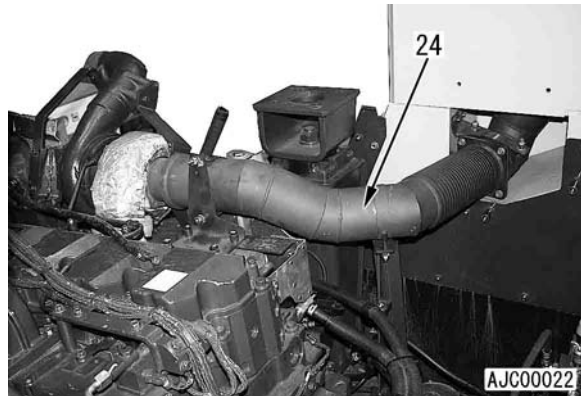


- 3) Disconnect connector (CN-COMP) (20-1) of the air conditioner compressor (20).
- 4) Loosen adjustment nut (20-2) of the air conditioner compressor (20).
- 5) Loosen the mounting bolts of air conditioner compressor (20).
- 6) Remove air conditioner compressor belt (21). [*4]
- 7) Remove rod and plate assembly (20-3).
- 8) Remove air conditioner compressor (20) from the bracket.

★ Do not disconnect air conditioner compressor hoses but place them on this side.

21. Air hose

- 1) Disconnect dust indicator connector (CN-M11) (25).
- 2) Remove the air hose • pipe assembly (26).

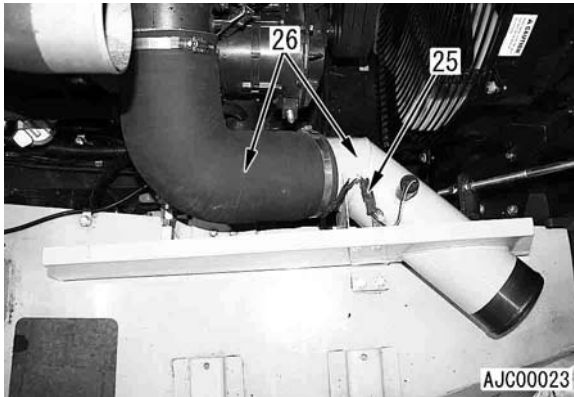


22. Remove radiator hoses (27).


23. Remove the radiator tube (28). [***5**]

24. Remove cover (29-1).

25. Remove fan guard (29).

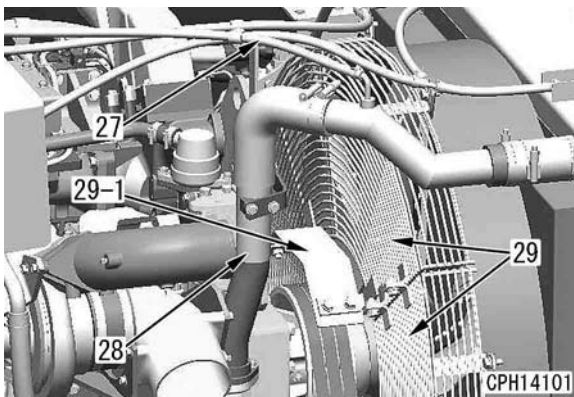**26. Fan**


- Remove fan (31) from fan coupling (30).
 ★ Leave the fan on the radiator side.

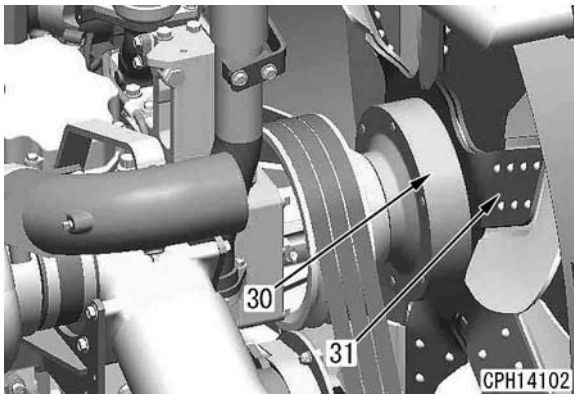


27. Remove radiator lower hose (32). [***6**]

28. Remove alternator front cover (33).

29. Remove heater hose (34) from the bottom of the engine.

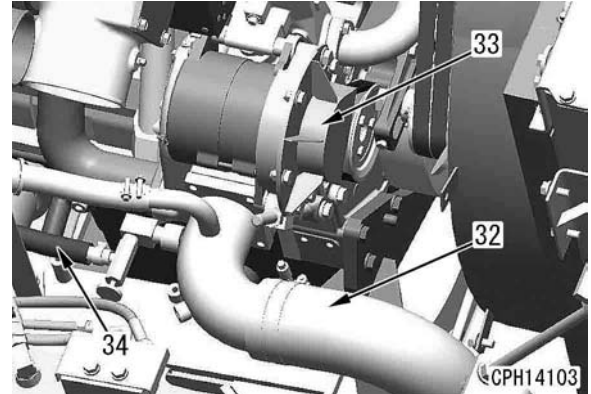

30. Remove alternator terminals (35).

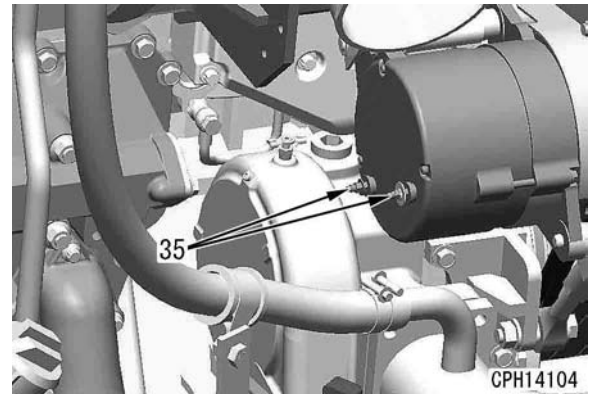

31. Remove heater hose (36) from the rear side of the engine.

