

MAINTENANCE PROCEDURE MAINTENANCE


3. Lower the work equipment to the ground and set the machine in a stable condition.

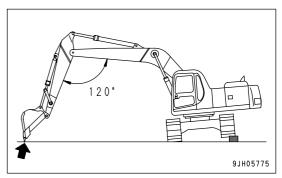


4. Set lock lever (1) to LOCK position (L) and stop the engine.

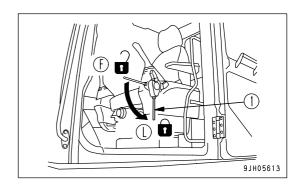

- 5. Remove the floor mat holder plate (4).
- 6. Pull the knob of floor mat holder clip (5) and remove clip (5).
- 7. Remove the floor mat.
- 8. Remove the cap from water drain hole (3).
- 9. Flush out the dirt on the floor directly with water through water drain hole (3).
- 10. After completing the washing operation, install the cap in water drain hole (3).
- 11. Fit the floor mat, then secure it with floor mat holder plate (4).
- 12. Secure the floor mat in position with the floor mat holder clip (5).

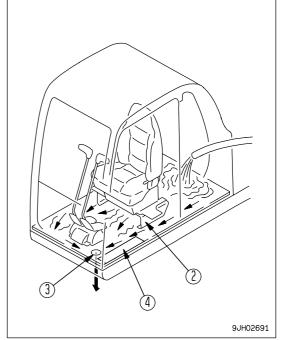

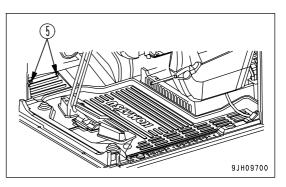

MAINTENANCE MAINTENANCE PROCEDURE

## **Method of Setting Machine at Angle**


**Method Using Slope** 

## **WARNING**

Select a solid and smooth slope.

Always put blocks under the track to prevent the machine from moving, and dig the work equipment into the ground.

- 1. Stop the machine so that the work equipment is on the downhill side.
- 2. Put blocks under the track and dig the work equipment into the ground.

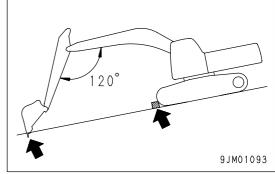


**Method Using Block** 



Select a firm flat place.

Put strong blocks under the undercarriage to stabilize the machine and be extremely careful when carrying out the operation.

- Raise the chassis with the boom and arm.
   When doing this, operate the levers slowly.
- 2. Insert block (5) under the raised track to make the machine stable.

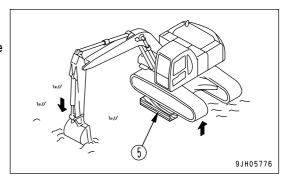

3. Raise the boom slowly and lower the machine.
When doing this, check that the machine is always stable.

