




8. Open the engine rear right inspection cover and remove covers (17) and (18).

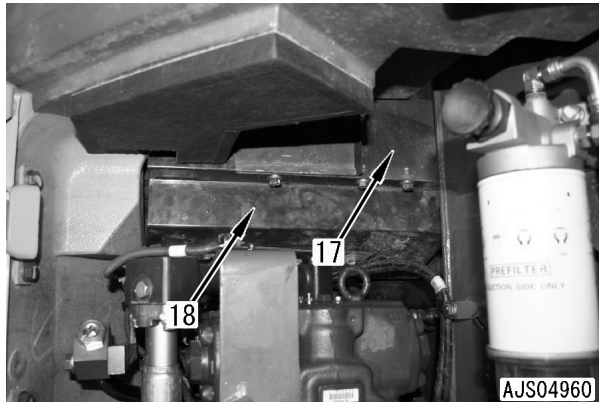


9. Remove 4 muffler mount bracket mounting bolts (19).

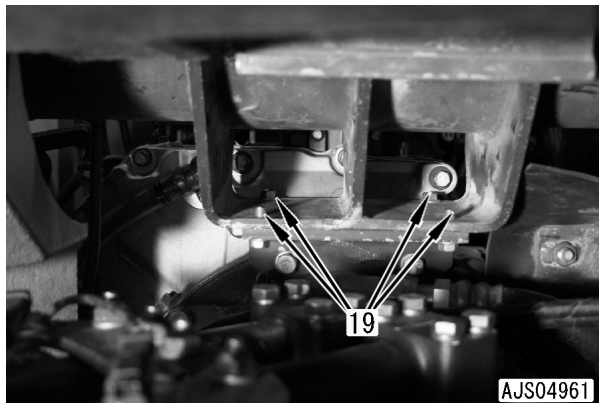


10. Lift off muffler assembly (20). [\*1]  
★ The clearance to pass the sling is narrow.  
Muffler assembly: **35 kg**

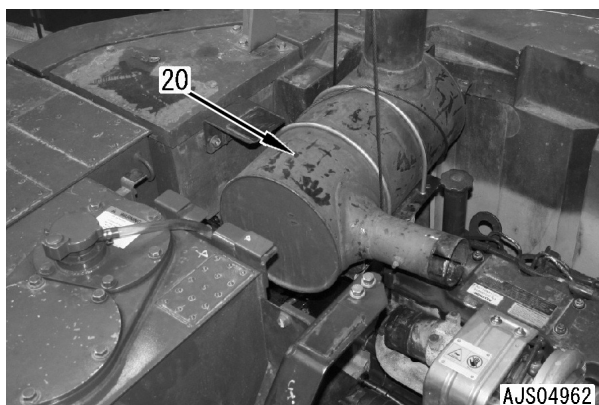



11. Remove bracket (21).  
12. Loosen 2 clamps (22) and 2 clamps (23) and move them inward.  
13. Disconnect clamp (24).  
14. Remove air hose assembly (25). [\*3]  
★ Make marks at the disconnected hose end and the mating part to indicate the connecting position of the hose.  
15. Disconnect heater hose (26).  
16. Disconnect radiator hose (27). [\*4]  
17. Remove air conditioner compressor drive belt (28).  
18. Remove fan belt (29).

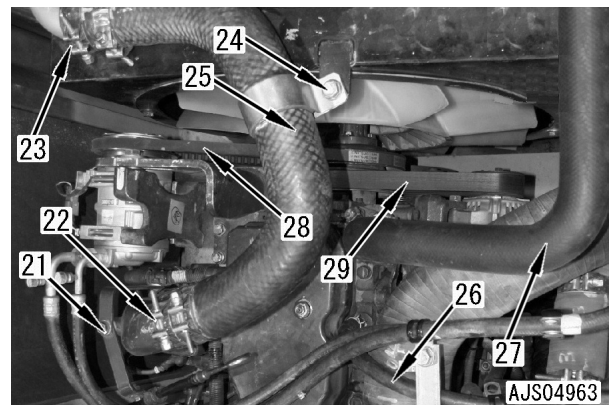

19. Remove clamps (30) and (31) from the cylinder block.  
20. Remove protection bellows (33) of high-pressure pipe (32) on the ESP side.  
21. Disconnect high-pressure pipe (32) from the ESP.

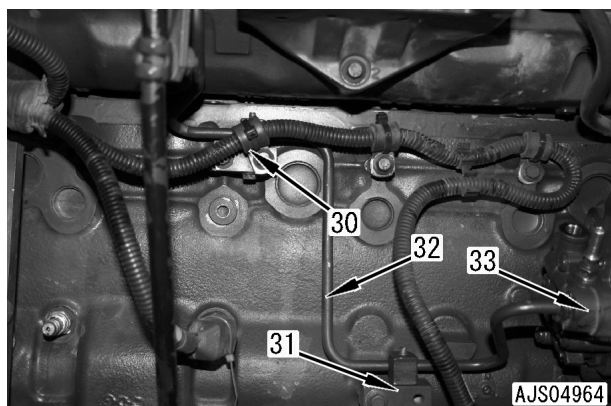

22. Disconnect 3 connectors (34).
  - ★ Since you cannot hold each connector, disconnect it with 2 flat-head screwdrivers according to the following procedure.
    - 1) Keep pressing the lock of connector (34) with flat-head screwdriver [1].
    - 2) Insert flat-head screwdriver [2] in the clearance between the connectors on the right and left sides of the lock and move it to the right and left to pull out the connector gradually.
23. Disconnect connector (35).
  - ★ While pushing up the lock of connector (35) with flat-head screwdriver [1], pull the connector in the direction of the arrow.
24. Remove 6 bellows (36).
  - ★ Remove only the bellows on the cylinder head side.
25. Disconnect 6 high-pressure pipes (37) from the cylinder head. [\*5]
26. Remove common rail and high-pressure pipe assembly (38). [\*6]
27. Disconnect fuel return hose (39). [\*7]
28. Disconnect fuel return hose (40).
29. Remove bracket (41). [\*8]
30. Remove fuel block (42). [\*9]
31. Disconnect high-pressure pipe (43) from the common rail mounting part.
32. Connector: Disconnect boost pressure/intake air temperature sensor connector (44).
  - ★ Move the disconnected connector aside. [\*10]

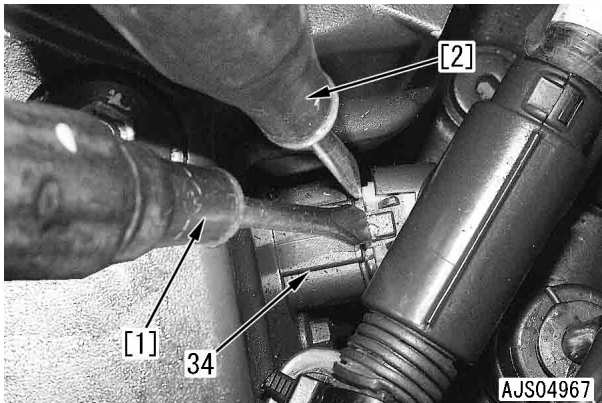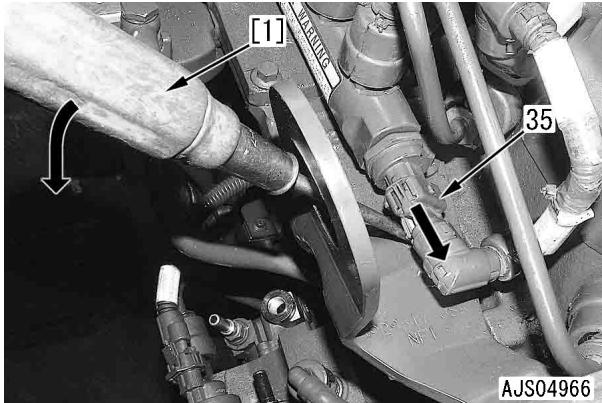

33. Remove blow-by duct (45).

34. Disconnect tube (46).

