

WINDSHIELD

(PC800,PC800LC,PC800SE pull up cab specification machine only)




WARNING

- When opening or closing the front window, bottom window, or door, always set the lock lever to **LOCK** position.
If the lock lever is at **FREE** position and the control levers or control pedals is touched by mistake, this may lead to a serious accident.
- When opening or closing the front window, stop the machine on horizontal ground, lower the work equipment completely to the ground, stop the engine, then carry out the operation.
- When opening the front window, hold the grip securely with both hands, pull up, and do not let go until the automatic lock catch is locked.
- When closing the front window, the window will move quicker under its own weight. Hold the grips securely with both hands when closing it.


It is possible to stow (pull up) the front window in the roof of the operator's compartment.

Opening

1. Stop the machine on level ground, lower the work equipment completely to the ground, then stop the engine.
2. Set the lock lever securely in **LOCK** position (L).

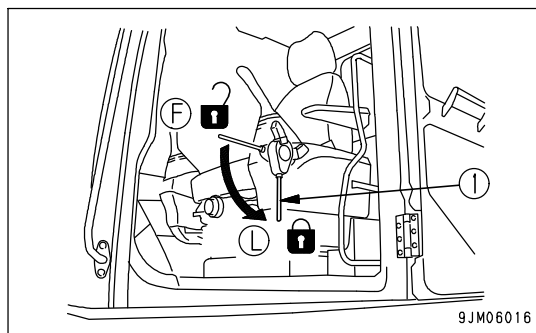

3. Check that the wiper blade is stowed in the right stay.

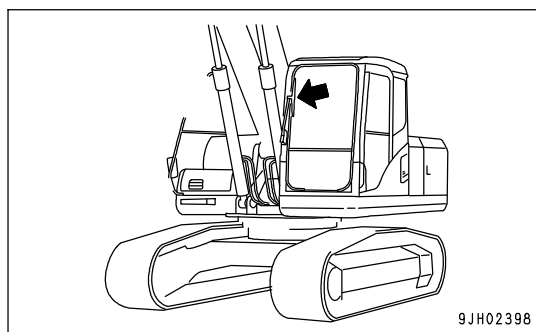

4. Grip handles (A) at the top right and left of the front window, and pull lock lever (B) toward yourself to release the lock at the top of the front window. The top of the front window will come out.

