


Troubleshooting Chart No. M-1


Failure mode: Fuel gauge gives no display or gives abnormal display

- ★ Turn the starting switch OFF before removing the connector and connecting the T-adapter (or socket adapter).
- ★ Connect the male and female of the T-adapter respectively; for the socket adapter, connect as shown in ().
- ★ After disconnecting the connectors and checking, connect again immediately.


a. Does not display

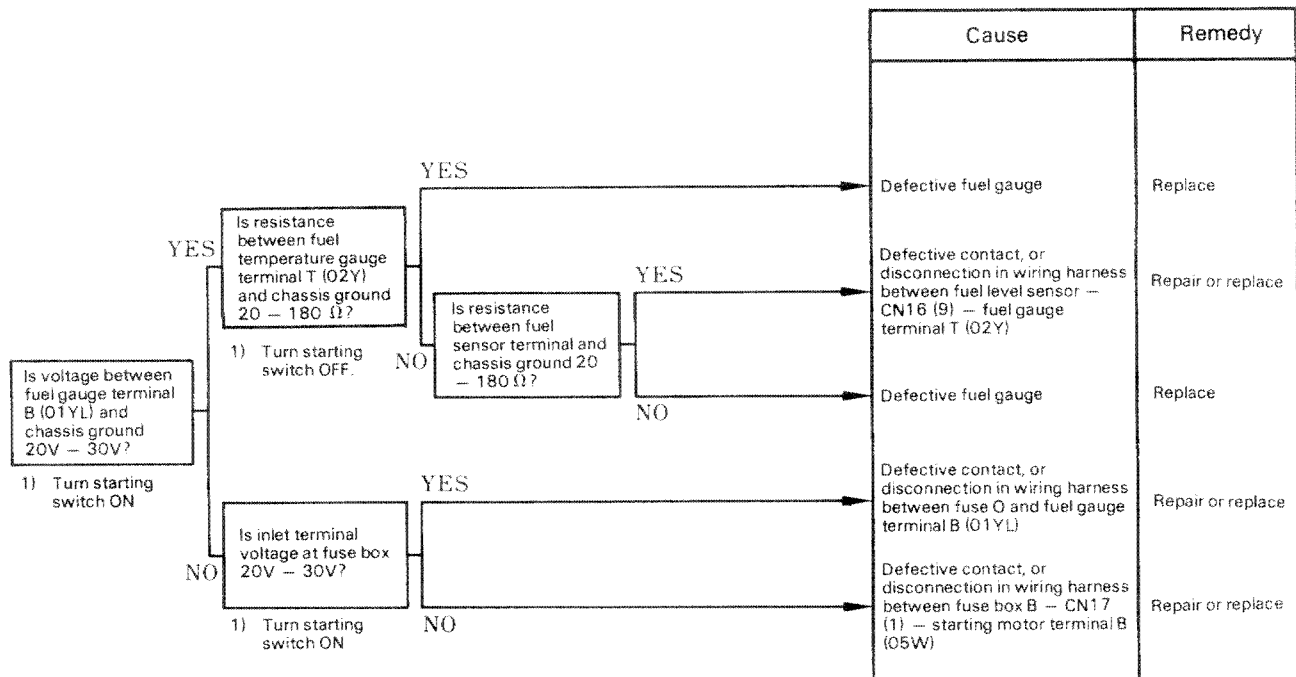

b. Gives abnormal display

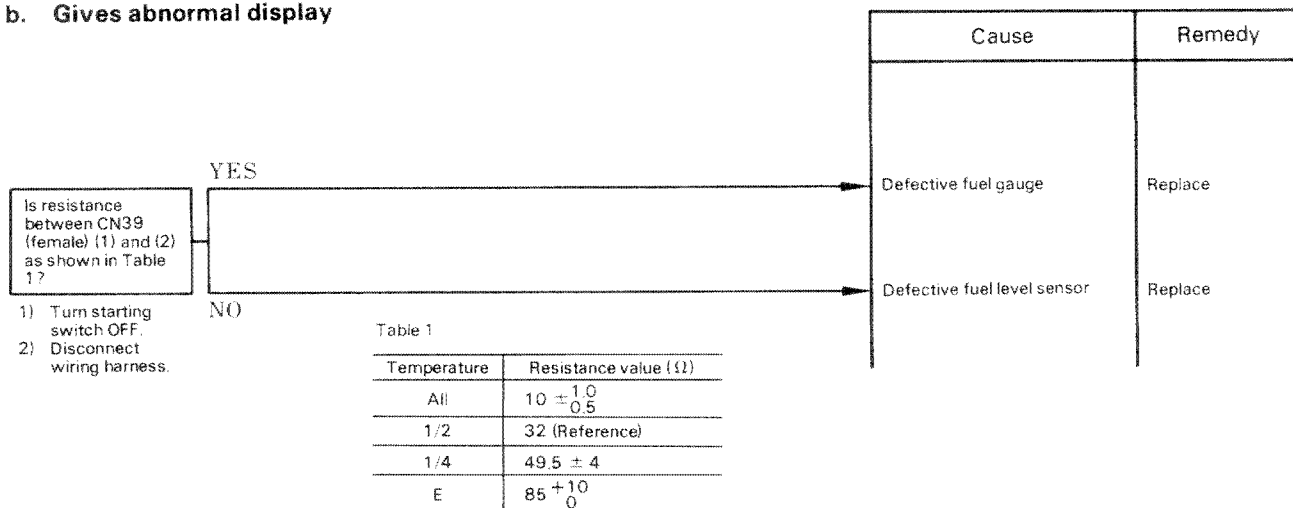

M-1 Related electrical circuit diagram

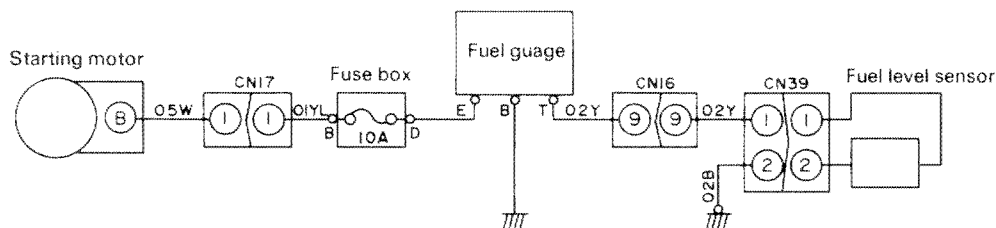


Troubleshooting Chart No. M-2


Failure mode: Water temperature gauge gives no display or gives abnormal display

- ★ Turn the starting switch OFF before removing the connector and connecting the T-adapter (or socket adapter).
- ★ Connect the male and female of the T-adapter respectively; for the socket adapter, connect as shown in ().
- ★ After disconnecting the connectors and checking, connect again immediately.

a. Does not display

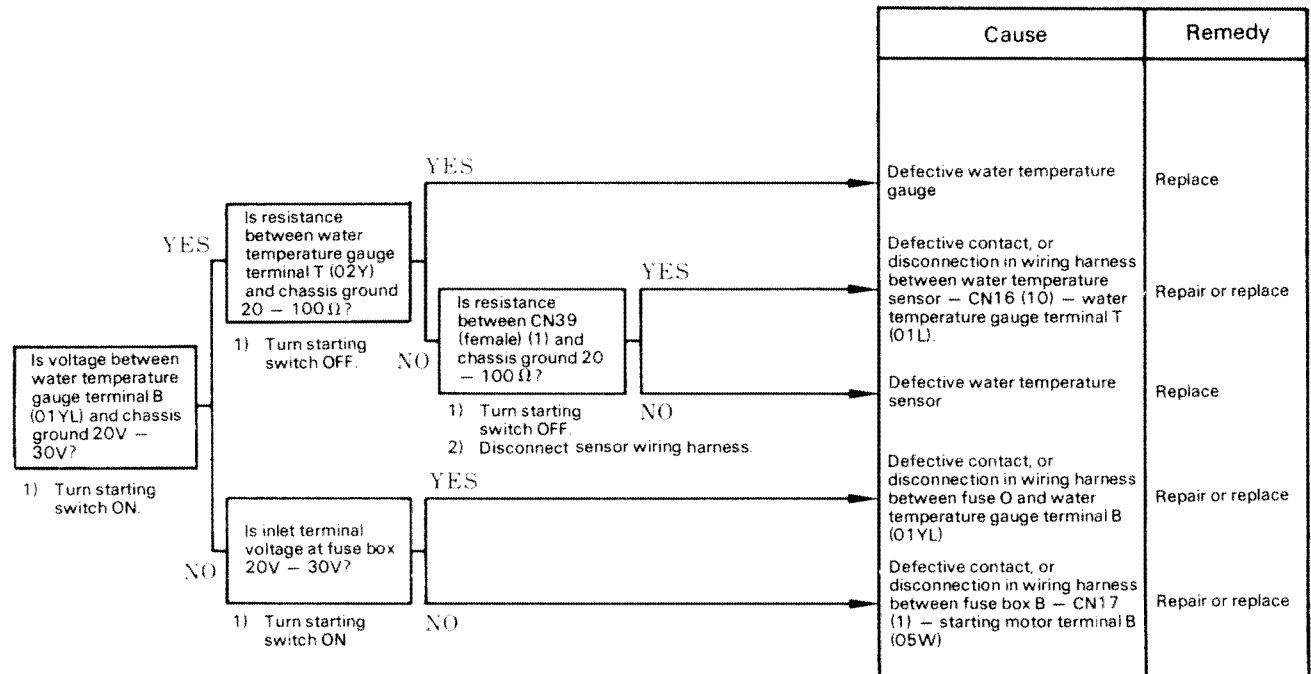

b. Gives abnormal display

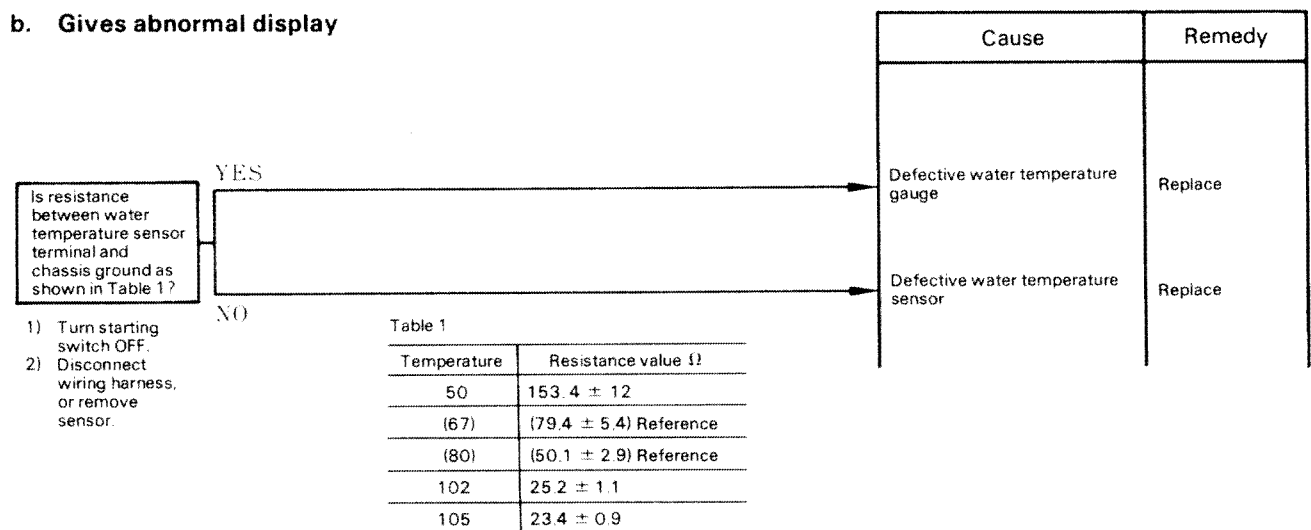

M-2 Related electrical circuit diagram

