## Removal and installation of fuel injector assembly

## Removal


▲ Disconnect the negative (–) terminal from battery.


1. Drain coolant.

Coolant: 36 ℓ

- 2. Close the fuel stopper valve on the fuel tank.
- 3. Remove connector (P24), overflow tube (1) and sub-tank (2).
- 4. Remove the mounting bolt and then hoist the engine hood assembly (3) to remove.

Engine hood: 200 kg

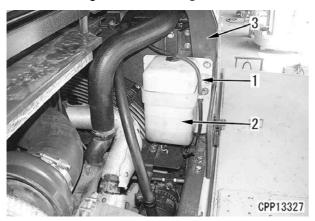


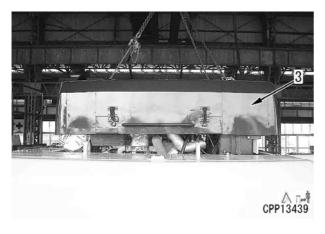

5. Remove clamp (4) and remove air intake tube (5). [\*1]



- Remove the clamp and disconnect hose (9) between the radiator and the engine at the radiator side. [\*2]
- 7. Remove covers (6), (7), and fan guard (8).

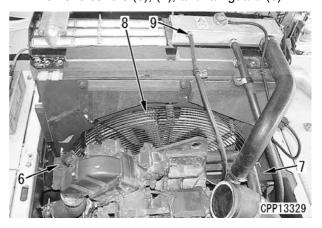

Remove oil filter (10). (Leave the tube unremoved)




- 9. Remove fuel pre-filter (11).
  - After disconnecting the hose, put it at the left side of the engine.
- 10. Remove priming pump (12).
  - ★ After disconnecting the hoses, let each hose put on the left-hand side of the engine.

**6** PC400, 450-8


- 11. Remove fuel main filter (13).
  - ★ Remove the tube clamp and allow the tube to hang on the left-hand side of the engine. [\*3]




- 12. Disconnect the terminal of intake air heater harness (14).
  - ★ Disconnect the clamp.
- 13. Remove the air intake connector (15).

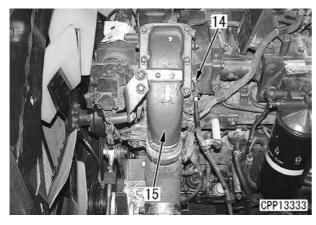


- Disconnect the connector EGR (16), SEGR (17), TIM boost temperature (18), wiring clamp (19), PIM boost pressure sensor (20), PAMB atmospheric pressure sensor (21) and connector (22).
  - ★ Remove harness clamps.
  - ★ Place removed parts together under the engine. [\*4]

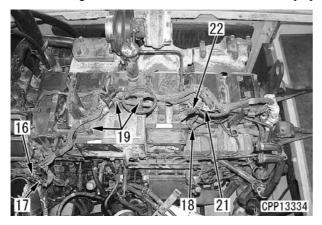


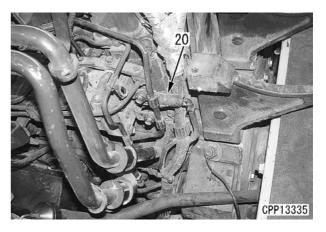

15. Remove clamp (23), bolts (24) and bracket (25) to remove the housing complex (diffuser) (26).

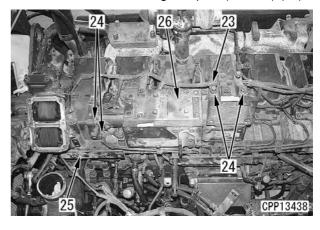

- Disconnect injector harness connectors (27) (at 6 places), remove the clamp and shift the harness to the lower left-hand side of the engine. [\*5]
  - ★ For how to remove the connector, see the "Removal and installation of cylinder head assembly".
- 17. Remove clamps (28) and boots (29). [\*6]
- 18. Remove the clamp and 6 high-pressure injection tubes (30). [\*7]

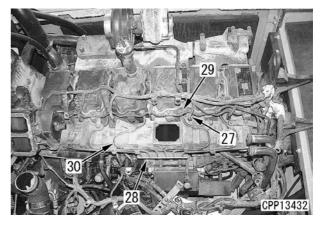

PC400, 450-8 7