

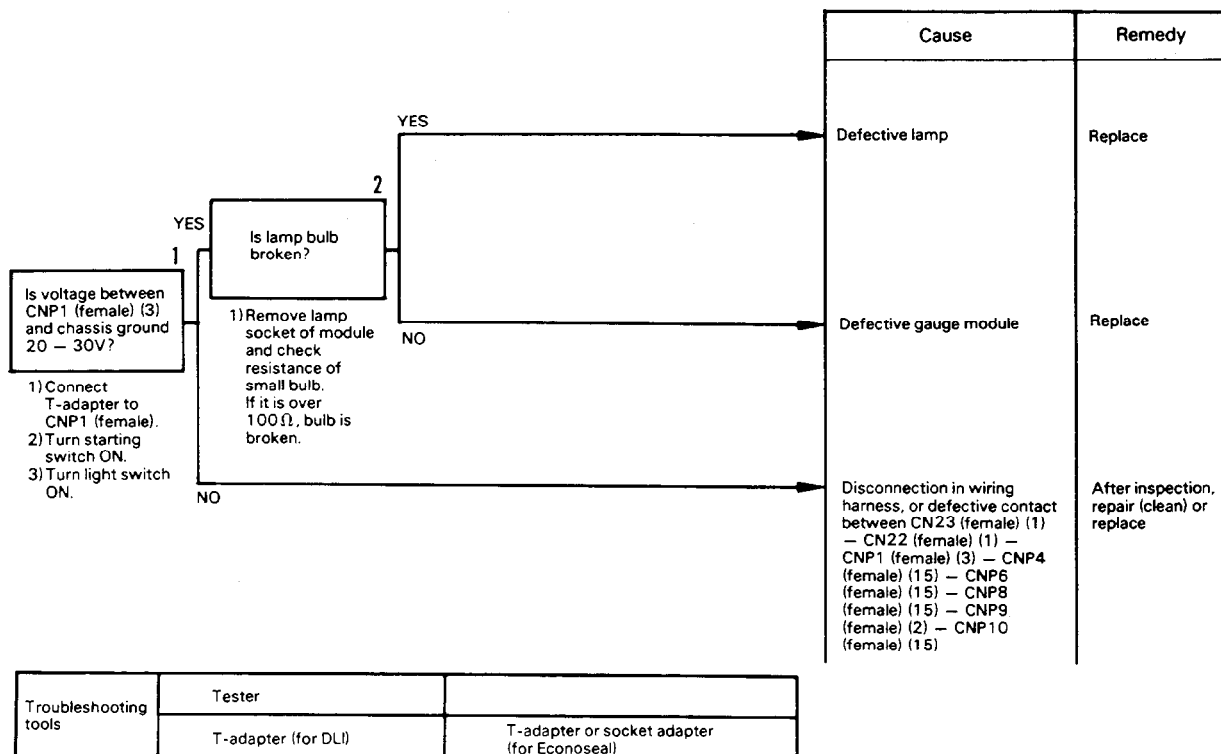


c) PANEL LAMPS OF GAUGE MODULE DO NOT LIGHT UP.


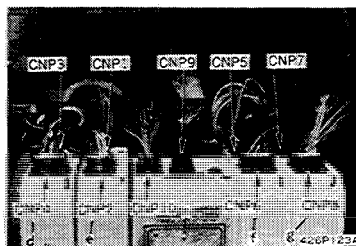


POSITION OF CONNECTOR


Gauge module (e)
CNP1

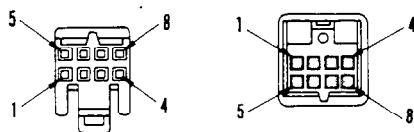


CN22, CN23

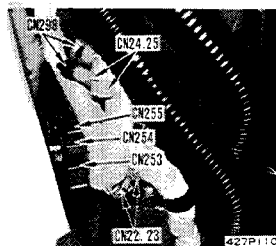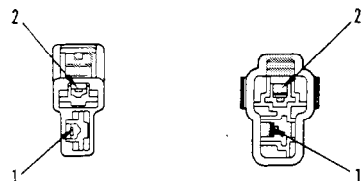

Monitor panel lamp (with spare bulb)



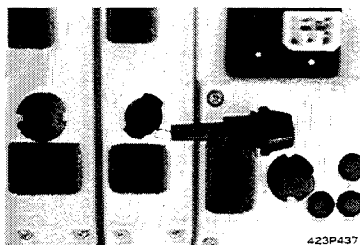


d) PANEL LAMPS OF CHECKS, CAUTION 1 AND 2, SPEEDOMETER MODULE DO NOT LIGHT UP.

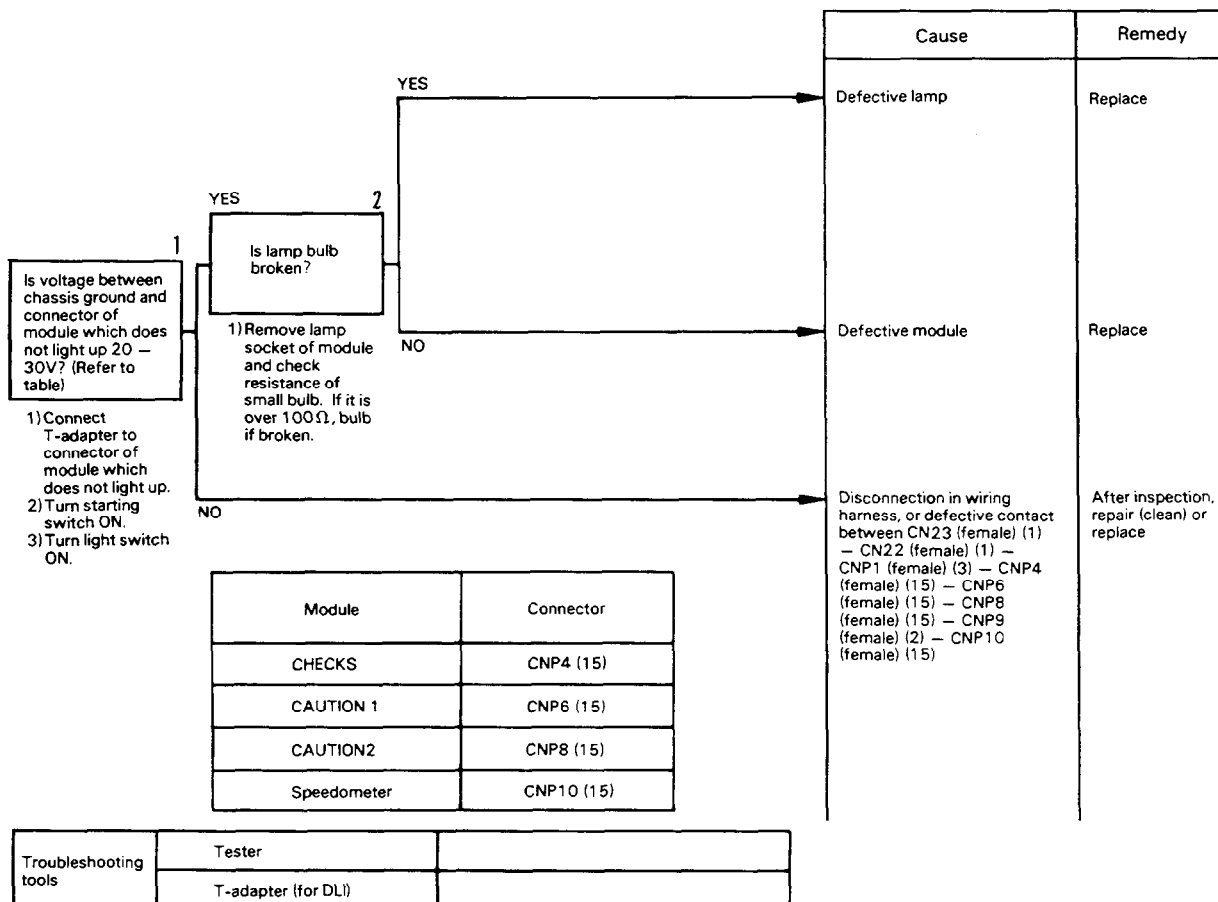

POSITION OF CONNECTOR

CNP4, CNP6, CNP8 and CNP10

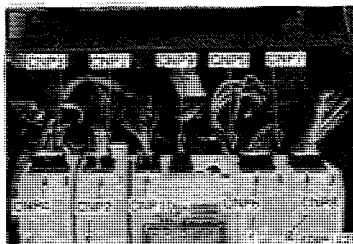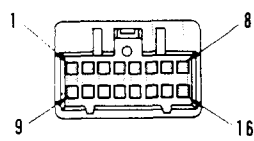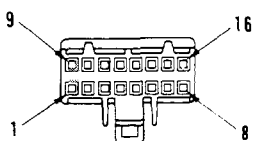

CN22, CN23

