

AD32421D


1. Display (for clock and fault indication)	11. Service meter
2. Engine water temperature gauge	12. Fuel gauge
3. Engine water temperature monitor	13. Fuel level monitor
4. Radiator water level monitor	14. Engine oil level monitor
5. Engine oil pressure monitor	15. Hydraulic oil level monitor
6. Air cleaner clogging monitor	16. Charge level monitor
7. Overload caution monitor	17. Engine preheating monitor
8. Working mode selector switch	18. Swing lock monitor
9. Power-max, swift slow-down switch	19. Engine oil replacement monitor
10. Travel speed switch	20. Auto-deceleration switch

EXPLANATION OF COMPONENTS

The following is an explanation of the devices needed for operating the machine.

To carry out suitable operations correctly and safely, it is important to understand fully the methods of operating the equipment and the meanings of the displays.

MACHINE MONITOR

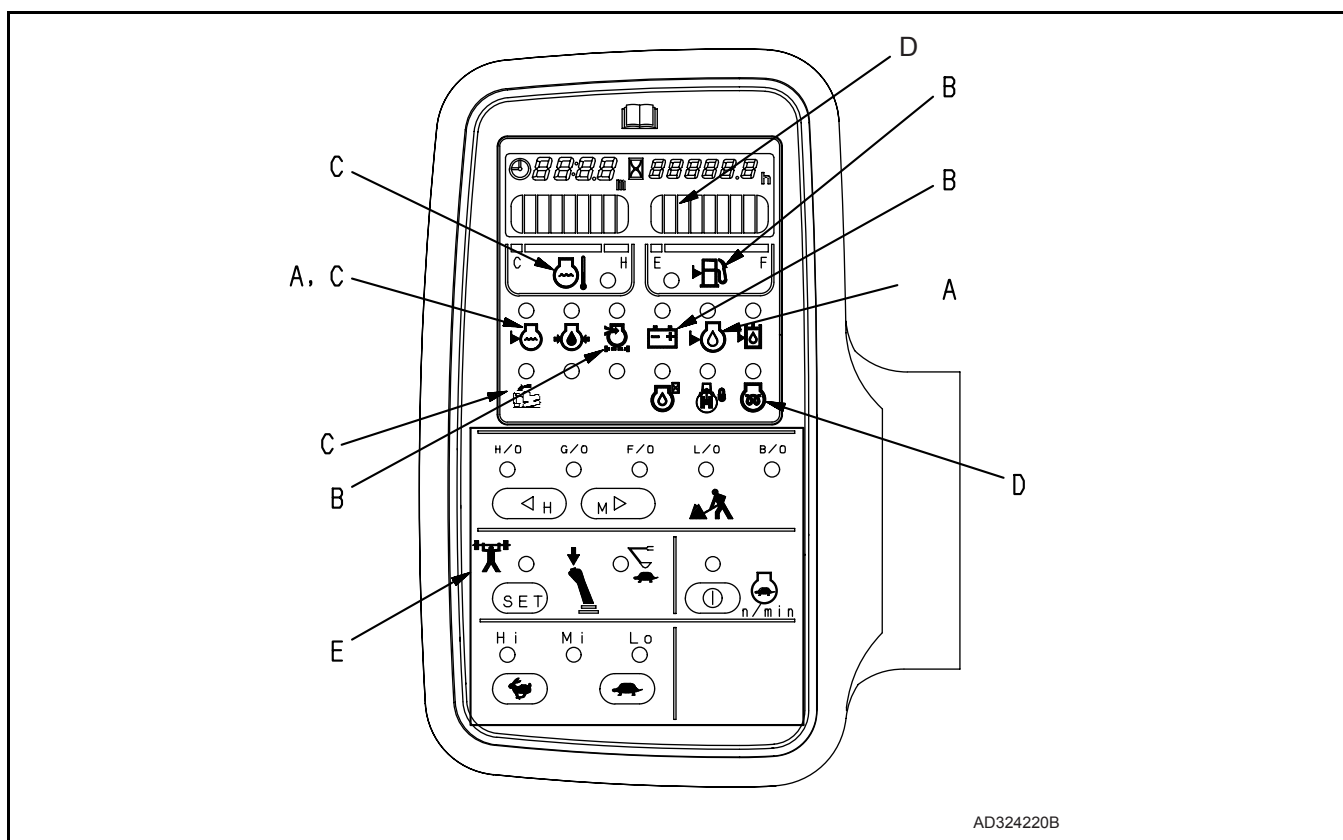

A. BASIC CHECK ITEMS

This displays the basic items that should be checked before starting the engine.

If there is any abnormality, the appropriate monitor lamp will flash.

NOTICE

When carrying out checks before starting, do not simply rely on the monitor. Always refer to the periodic maintenance items or "OPERATION" on page 106 to carry out the checks.