

Removal and installation of LS control EPC valve


Removal

1. Remove bolts (1). (2 off).
2. Carefully remove LS control EPC valve (2), do not bend or pull harness (3) with more than 4.9N.



Installation

- ✕ Install in reverse order of removal.

 N·m LS control EPC valve bolts (1): **11.8 - 14.7 Nm**

Removal and installation of EPC solenoid valve assembly

Removal

1. Remove bolts (1).
2. Carefully remove EPC solenoid valve (2), do not bend or pull harness (3) with more than 4.9N.



Installation

- ✖ Install in reverse order of removal.



EPC solenoid valve bolts (1): **11.8 - 14.7 Nm**