



P97.10-0326-09

- 22 Spare wheel recess cross member above rear axle
- 23 Floor, lateral, rear left
- 24 Floor, lateral, rear right
- 28 Roof - seal all four corners

- 25 Main floor partition wall
- 26 Rear end center assembly
- 27 Rear fender

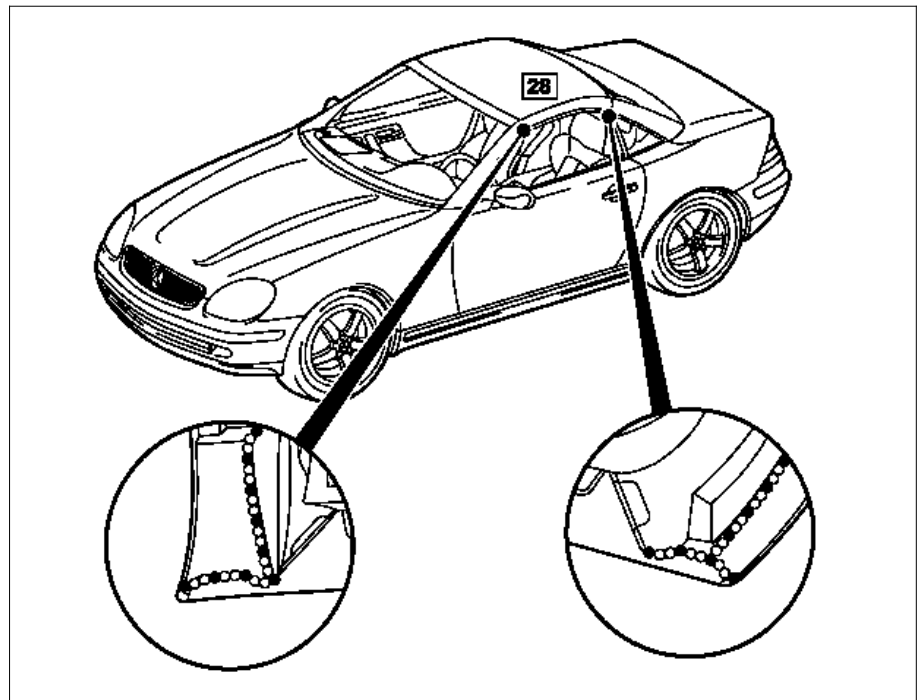

P97.10-0328-06

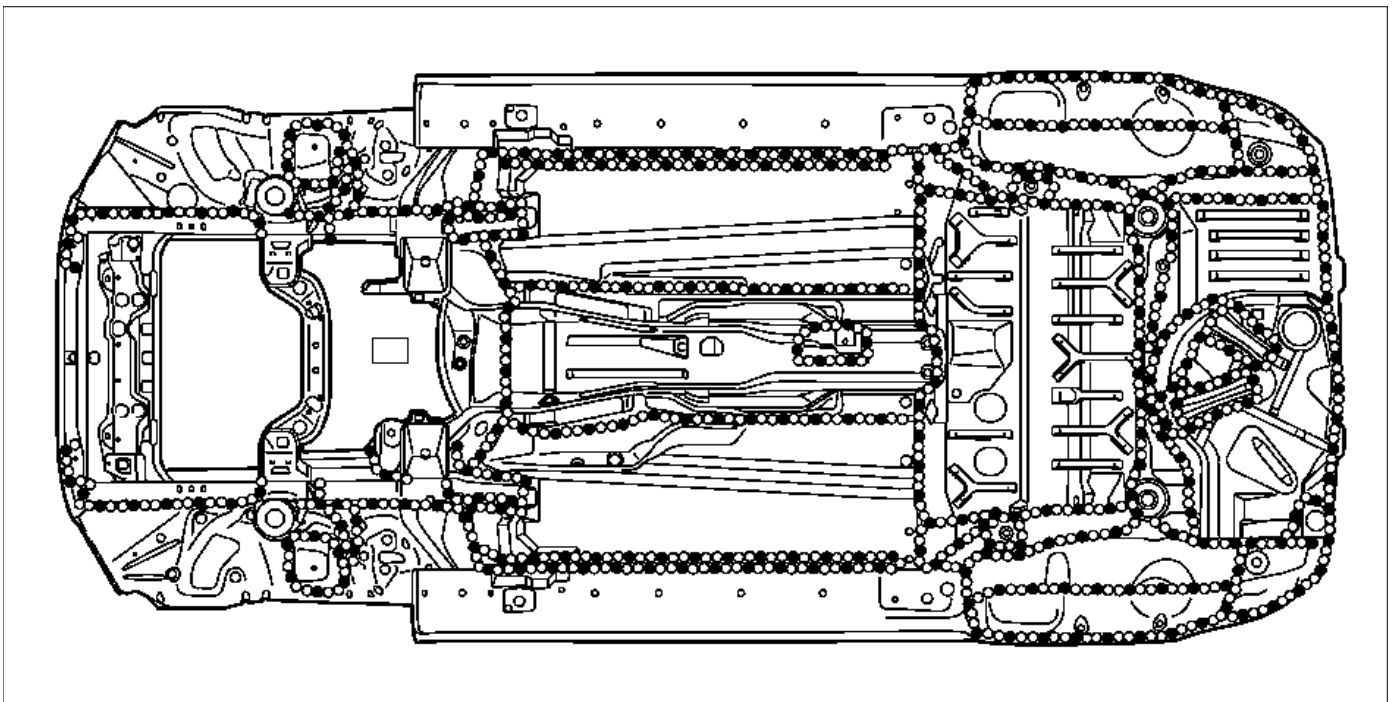

P97.10-0329-09

29 Floor assembly

Fig. item, etc.	Work instructions		
<p>i</p>	<p>Sealing</p>	<p>After repairs to body, welds seams are to be sealed on both sides Sealant Processing instructions i on sprayable seam sealing Refer to ↓ Service information on sprayable seam sealing</p>	<p>AR97.20-P-0500A AR97.10-P-0500-02A SI97.10-P-0001A</p>
<p>i</p>	<p>Corrosion protection</p>	<p>Do not apply sealant to bare metal, prime weld seams, etc. beforehand.</p>	
<p>i</p>	<p>Detachable body components</p>	<p>When replacing components such as doors, engine hood, trunk lid, etc. seams and folds are also to be sealed</p>	
<p>i</p>	<p>Parting points</p>	<p>Apart from the points shown in illustrations, sealing measures required may differ from case to case depending on extent of repair.</p>	