
AR91.10-P-1061MFA Remove/install backrest 20.02.2019

Model 118, 177, 247

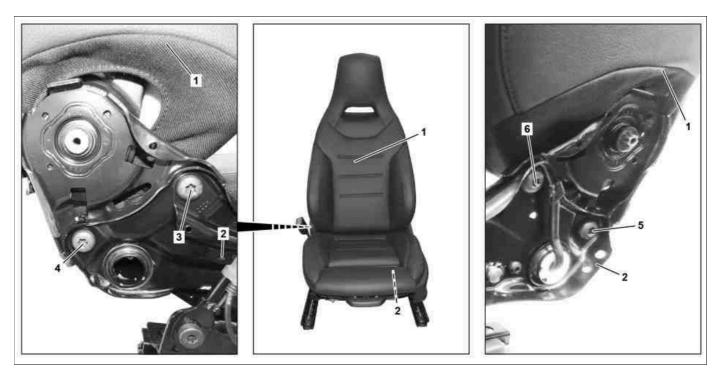

P91.10-4114-09

Shown on

- 1 Seat backrest
- 2 Seat frame
- 3 Screw

- 4 Screw
- 5 Screw
- 6 Screw

| | Information on preventing damage to electronic components due to electrostatic discharge | | AH54.00-P-0001-01A |
|--------------|--|---|---------------------|
| \mathbf{X} | Remove/install | | |
| 1 | Remove front seat. | | AR91.10-P-1000MFA |
| 2 | Remove trim from seat frame. | Remove outer trim from seat frame. | AR91.10-P-1201MFA |
| | | Remove inner trim from seat frame. | AR91.10-P-1202MFA |
| 3 | Release electrical wiring harness of seat backrest (1) from seat frame base (2) then release and disconnect electrical connectors. | Installation: Ensure that electrical wiring harness is routed and secured without any chafing. Otherwise damage may occur. The number of electrical connectors varies according to vehicle equipment. | |
| 4 | Remove bolts (3, 4, 5, 6). | installation: Tighten all the bolts (3, 4, 5, 6) lightly by hand and follow the tightening sequence while doing so. Tighten the bolts (3, 4, 5, 6) in the following sequence: Bolt (3), bolt (4), bolt (5), bolt (6). | *BA91.10-P-1002-01U |
| 5 | Remove seat backrest (1) from seat frame base (2). | Do not crush or kink or subject lines to tension This will result in damage to the lines which may impair their functional capability. | |
| 6 | Install in the reverse order. | | |

| Nm | Front | seats |
|----|-------|-------|
| | | |

| Number | Designation | | | Model 118 | Model 177 |
|--------------------|------------------------------|-----|----|-----------|-----------|
| BA91.10-P-1002-01U | Bolt, backrest to seat frame | M10 | Nm | 34 | 34 |



| Number | Designation | | | Model 247 |
|--------------------|------------------------------|-----|----|-----------|
| BA91.10-P-1002-01U | Bolt, backrest to seat frame | M10 | Nm | 34 |