


Model 117 with engine 133, 270, 607, 651
 Model 156 with engine 133, 270, 607, 651
 Model 176 with engine 133, 270, 607, 651
 Model 242 with engine 270
 Model 246 with engine 270, 607, 651

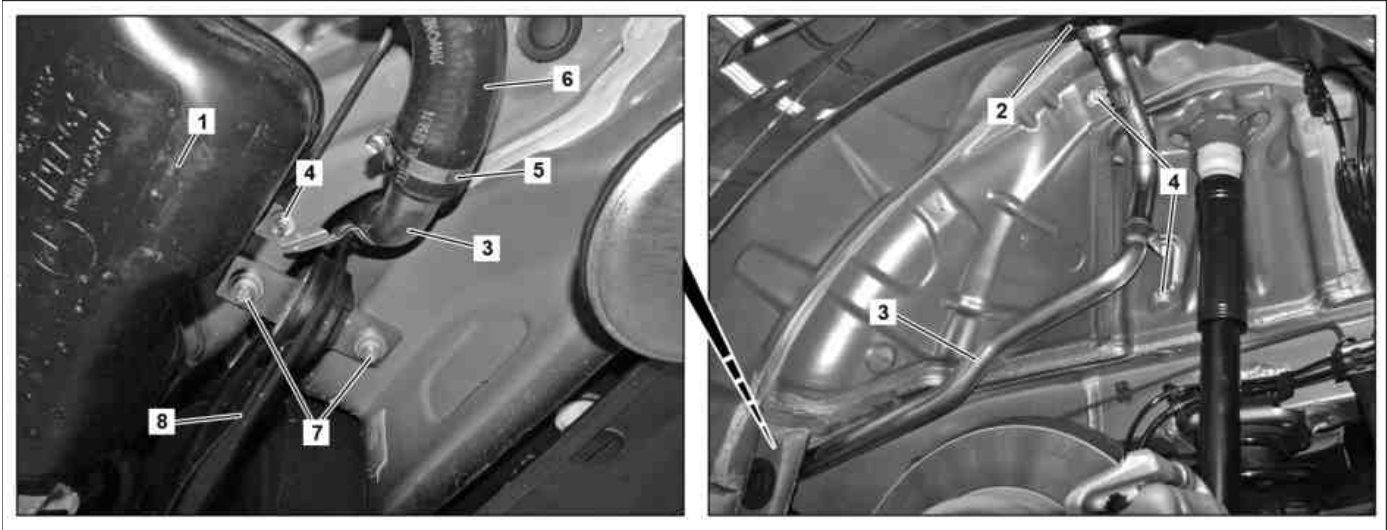


P47.10-2624-08

Shown on model 246

1 Fuel tank
 2 Seal boot
 3 Filler pipe
 4 Nuts
 5 Clip
 6 Filling hose
 7 Bolts
 8 Left trailing arm

Danger!	Risk of explosion caused by fuel igniting, risk of poisoning caused by inhaling and swallowing fuel as well as risk of injury to eyes and skin caused by contact with fuel.	No fires, sparks, open flames or smoking. Pour fuels into suitable and appropriately marked containers only. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
	Remove/install		
1	Drain fuel tank (1)		AR47.10-P-4001NKB
2	Remove left wheel		AR47.10-P-4001NKB
AP			AP40.10-P-4050AK
3	Remove rear left fender liner		AR88.10-P-1400NKB
4	Remove tank filling depression		AR88.60-P-2000NKB
5	Unfasten seal boot (2) from body and push downwards	Installation: Check seal boot (2) for damage, replace if necessary.	
6	Remove left underfloor paneling		AR61.30-P-1001NKB
7	Unscrew nuts (4) from filler pipe (3) at body		
8	Unfasten clamp (5) on filling hose (6) and detach filling hose (6) from filler pipe (3)	Attach filling hose (6). Plug	*168589009100
9	Remove screw/bolts (7) from LH trailing arm (8) at frame floor assembly		AR35.20-P-0100NKB
10	Pull LH trailing arm (8) downwards and remove filler pipe (3)		
11	Install in the reverse order		
12	Inspect fuel tank (1) and connections for leaktightness		
13	Perform wheel alignment check		AR40.20-P-0200NKB

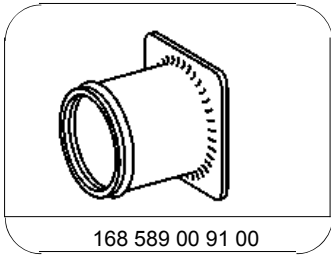

168 589 00 91 00

Plug