



Model 222
except code Z07 (B7 armoring on special protection version)
Passenger side

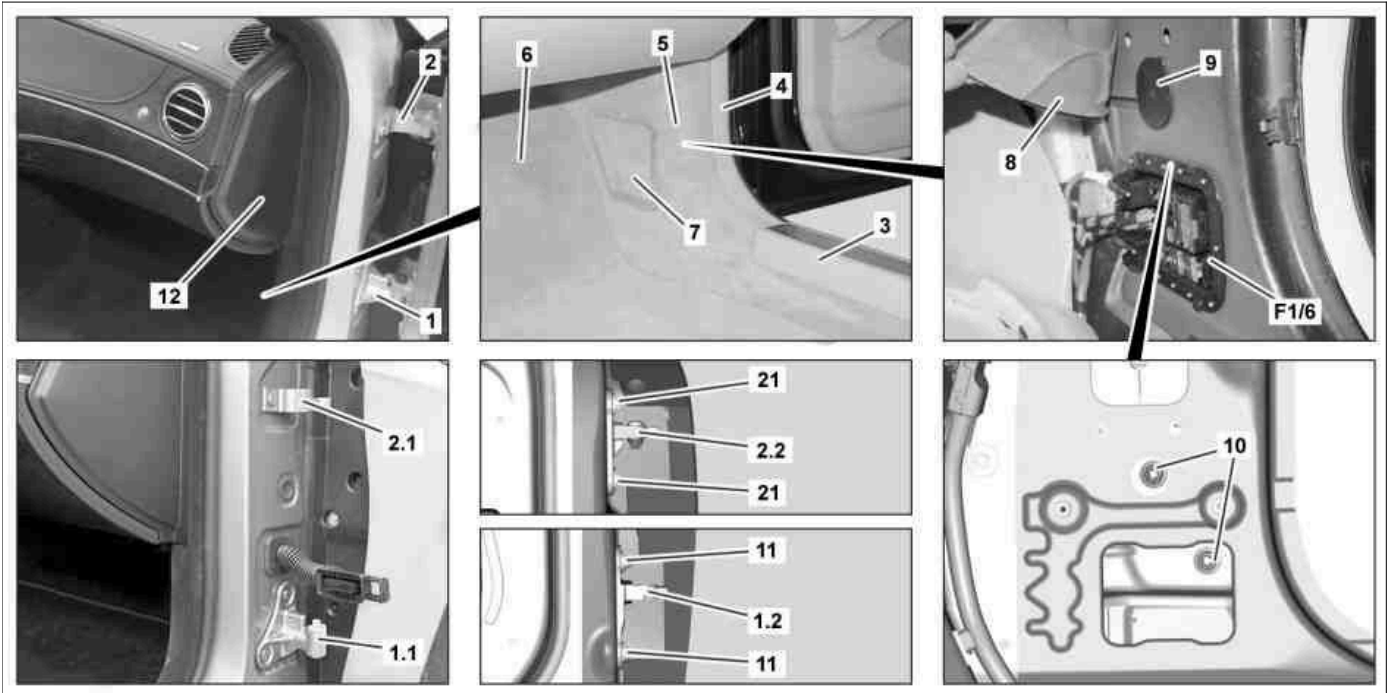


P72.10-4216-09

- | | | | | | |
|-----|----------------------------|---|-------------------------|------|---------------------------|
| 1 | Bottom hinge | 3 | Door sill | 9 | Cap |
| 1.1 | Bottom A-pillar hinge leaf | 4 | Edge guard | 10 | Nuts |
| 1.2 | Bottom door hinge leaf | 5 | Side floor covering | 11 | Screw |
| 2 | Top hinge | 6 | Footrest floor covering | 12 | Cover |
| 2.1 | Top A-pillar hinge leaf | 7 | Cover | 21 | Screw |
| 2.2 | Top door hinge leaf | 8 | Insulation mat | F1/6 | Instrument panel fuse box |

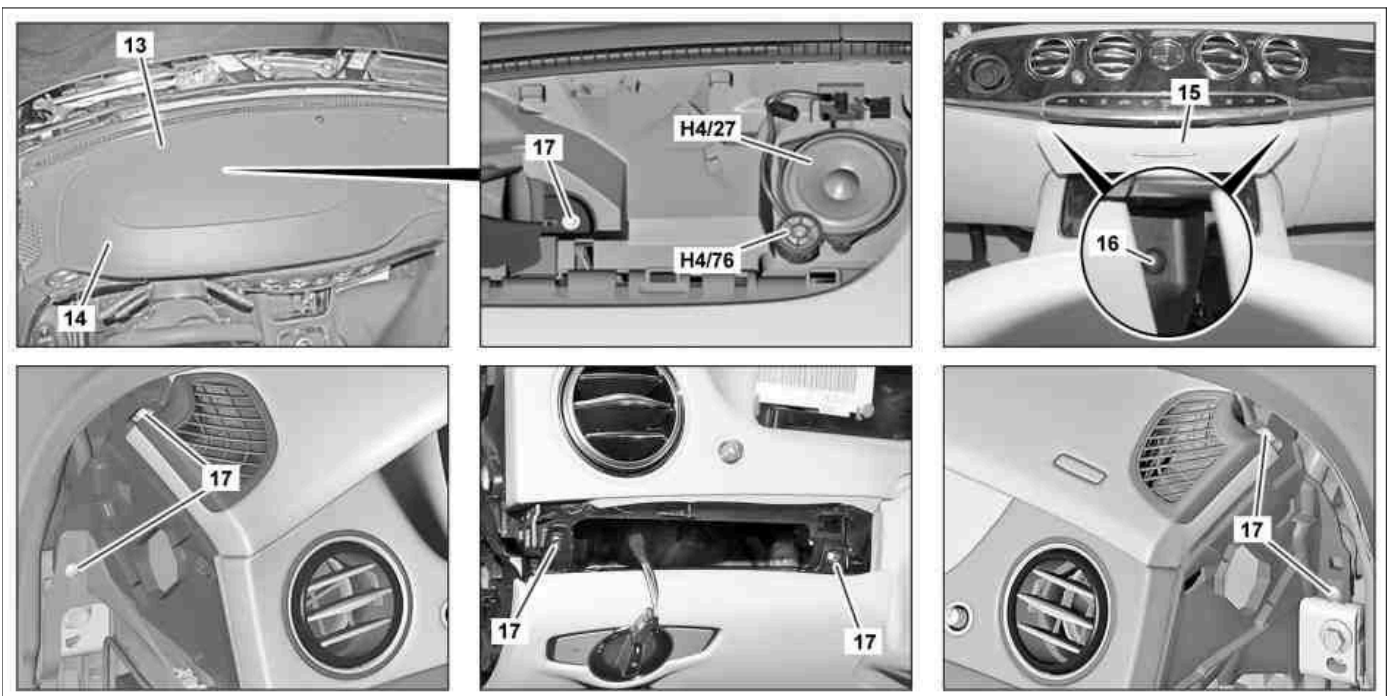

P72.10-4217-09

13	Center dashboard cover	16	Cap	H4/27	Center instrument panel speaker (with CODE 348 (Emergency call/assist system) or CODE 350 (Ecall Europa Gen. 2 emergency call system) or CODE 810 (Sound system) or CODE 811 (Advanced sound system))
14	Dashboard upper section	17	Bolts	H4/76	Center instrument panel tweeter (with CODE (811) Advanced sound system)
15	Stowage compartment or ashtray				

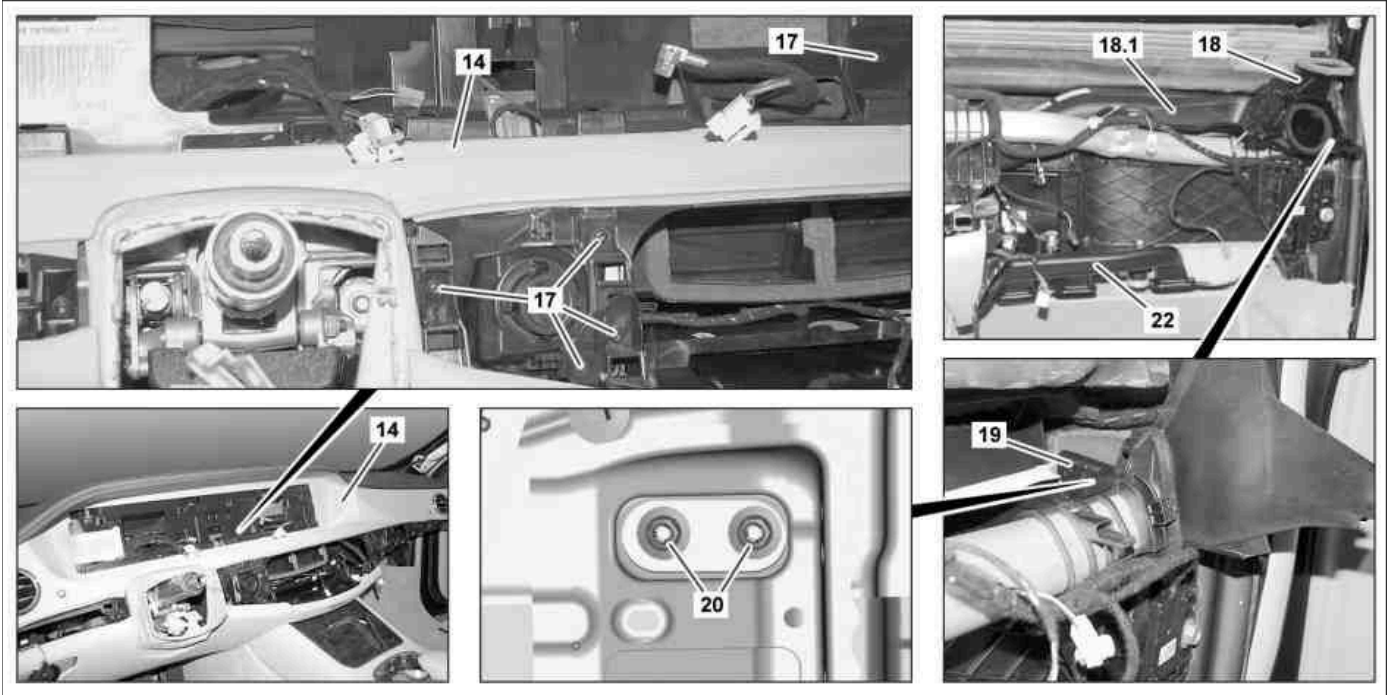

P72.10-4218-09

14	Dashboard upper section	18.1	Air duct	20	Nuts
17	Bolts	19	Cover	22	Footwell ventilation air duct
18	Air distributor				

	Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
		Remove, install bottom hinge (1)		
	1	Remove front door		AR72.10-P-0500LF
	2	Mark installation position of bottom A-pillar hinge leaf (1.1) and bottom door hinge leaf (1.2)		
	3	Remove door sill molding (3)		
	4	Remove edge guard (4) in area of side floor covering (5) from body flange		
	5	Fold footrest floor covering (6) toward rear		
	6	Remove cover (7)		
	7	Detach side floor covering (5) from A-pillar and fold over		
	8	Unclip instrument panel fuse box (F1/6) from A-pillar and lay down to side with electrical lines connected		
9	Press insulating mat (8) to side until cap (9) is accessible			
10	Remove cap (9)	i Installation: Before installing cap (9): ↓ Install front door and adjust	AR72.10-P-0500LF	