


MODEL 172.4

Shown on left door

- 1 Cover
 2 Door
 3 Rivets
 4 Electrical connector

B48/7 Left door pressure sensor
 B48/8 Right door pressure sensor

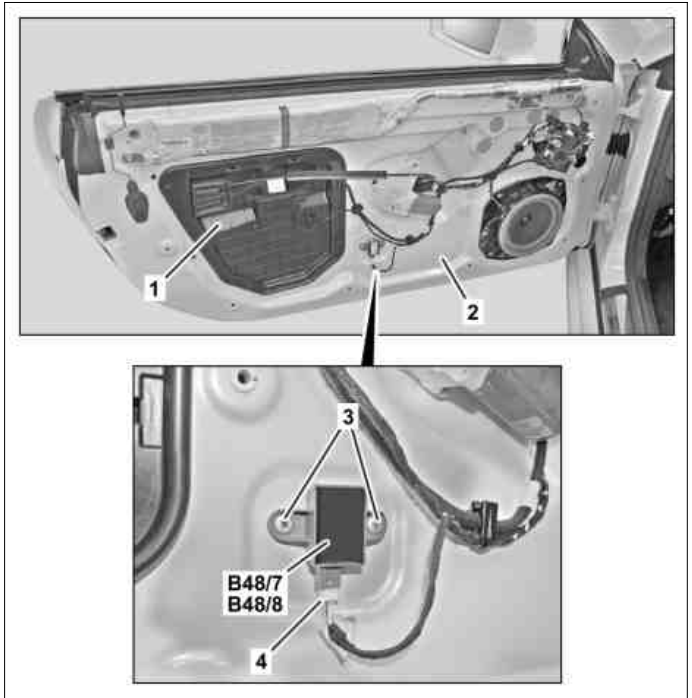


P91.60-4193-12

☒ ☒	Remove/install		
ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove left or right door lining	ⓘ Close crank window before electrical connectors are disconnected from left door control unit or right door control unit.	AR72.10-P-1000W
2	Disconnect ground line at the on-board electrical system battery		AR54.10-P-0003W
3	Loosen cover (1) from front door (2)	ⓘ Installation: Check sealing profile at cover (1) for damage, replace if necessary. Sealing cord	*BR00.45-Z-1086-01A
4	Disconnect electrical connector (4)		
5	Drill off heads of rivets (3)	Rechargeable drill / screwdriver gotis://G_58.0_01.1 ⓘ Installation: Only use approved rivets (3). Hand riveting tool gotis://K_68-80_06.0	
6	Remove left door pressure sensor (B48/7) or right door pressure sensor (B48/8)		
7	Completely remove rivet residues and drilling chips from front door (2).	ⓘ Remove all rivet residue. Remaining rivet residues cause corrosion damage on front door (2). Wet/dry vacuum cleaner gotis://P_00.12_06.0	
8	Install in the reverse order		
9	Connect Star Diagnosis and check Supplemental Restraint System (SRS)	When replacing left door pressure sensor (B48/7) or right door pressure sensor (B48/8).	AD00.00-P-2000-04A

Repair materials

Number	Designation	Order number
BR00.45-Z-1086-01A	Soft top frame sealing profile with metal core 35 m, SEALANT/butyl Bostik 1127	A 005 989 12 71 10

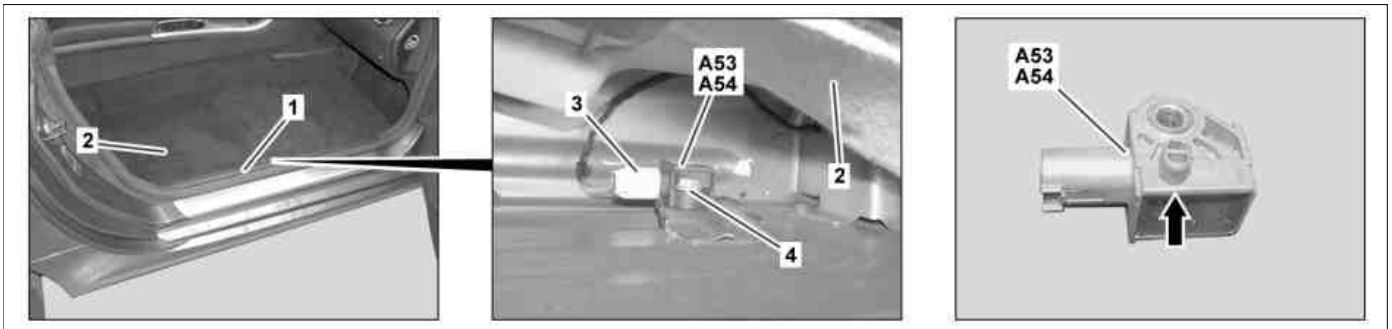

P91.60-4178-07

Shown on side of vehicle

1 Cover
2 Floor Covering


3 Electrical connector
4 Screw

A53 Left sidebag sensor
A54 Right sidebag sensor

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove left or right seat		AR91.10-P-1000W
2	Remove paneling (1)	Mounting wedge	*110589035900
3	Fold back floor covering (2) until left sidebag sensor (A53) or right sidebag sensor (A54) is accessible		
4	Disconnect electrical connector (3)		
5	Unscrew bolt (4)		*BA91.60-P-1019-01A
6	Remove left sidebag sensor (A53) or right sidebag sensor (A54)	Installation: Insert left sidebag sensor (A53) or right sidebag sensor (A54) with guide pin (arrow) into longitudinal member.	
7	Install in the reverse order		
8	Connect Star Diagnosis and check Supplemental Restraint System (SRS)	When replacing left sidebag sensor (A53) or right sidebag sensor (A54).	AD00.00-P-2000-04A

 Airbag

Number	Designation		Model 172
BA91.60-P-1019-01A	Screw/bolt, sidebag sensor to longitudinal member	Nm	8

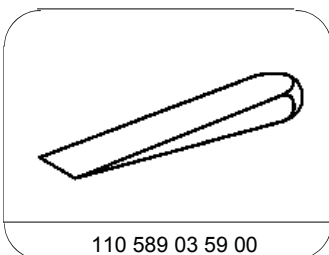

110 589 03 59 00

Mounting wedge