


Model 124


Note

The installation point of the anti-tow trigger unit (N27) is located in the right corner of the spare wheel well, or in the T model on the left below the rear bench seat.

Model W/V/C 124
N27 Anti-tow trigger unit

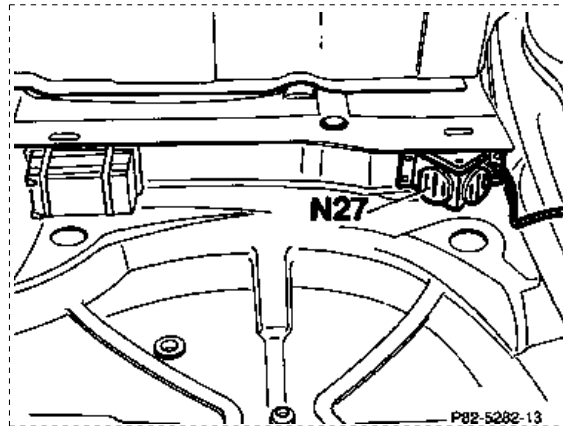

Model S 124
N27 Anti-tow trigger unit

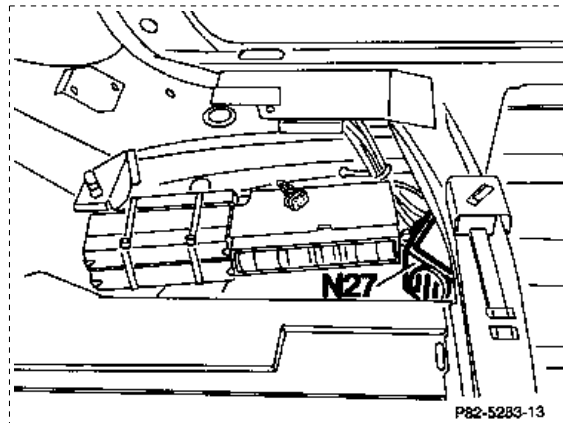


Model 126

Notes

The installation point of the anti-tow trigger unit (N27) is located in the trunk at the partition panel to the fuel tank, on the front passenger's side at the top in the corner flush with the edges.

The anti-tow trigger unit (N27) is attached from the inside to the partition panel fitting on the washers on the one side.

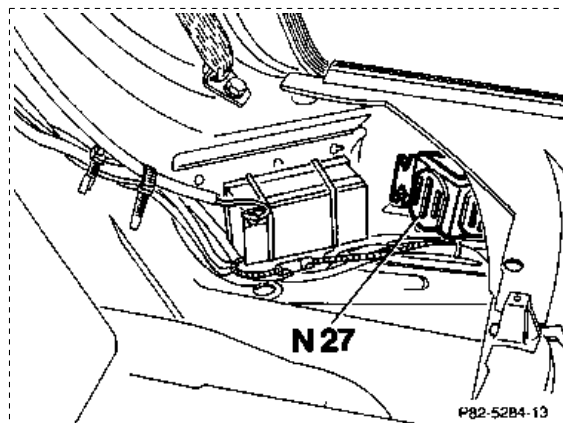


Model 126
N27 Anti-tow trigger unit

Model 201

Note

The installation point of the anti-tow trigger unit (N27) is located below the rear bench seat on the left at an existing vertical stiffener plate.

Model 201
N27 Anti-tow trigger unit

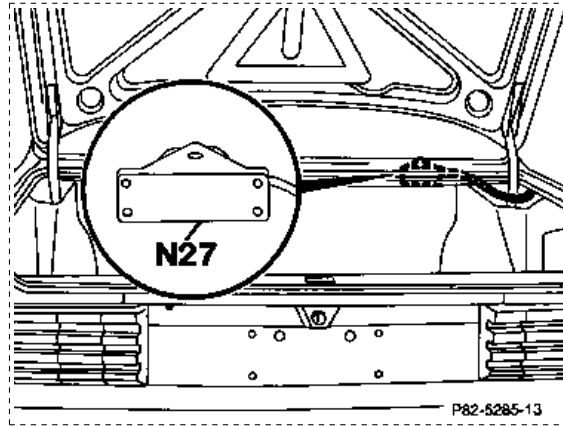

Pay attention to installation position of anti-tow trigger unit (N27). The triangular housing surfaces must be approximately horizontal.

Model 126

- 1 Remove partition panel to fuel tank.

Models 124, 126, 201

- 2 Fit in anti-tow trigger unit (N27) at the specified installation point and mark mounting holes.

- 3 Drill 3.8 mm dia. holes.

Note

Extract drillings.

- 4 Attach anti-tow trigger unit (N27) to the installation point with the M5 self-tapping screws supplied.

Use the cable ties supplied to attach to the existing wiring harness.

- 5 Plug connector (N27x1) of connection cable of anti-tow trigger unit (N27) to the existing 4-pin mating connector.