


## Fuses (Tractors with Cab)



**LX005807-UN: Main Fuse Located in Power Distributor**


The main fuse is located inside the power distributor. It protects the entire battery circuit (160 A).

Disconnect the battery, unscrew the r.h. pin and remove the retaining screw. Lift out the power distributor from below.

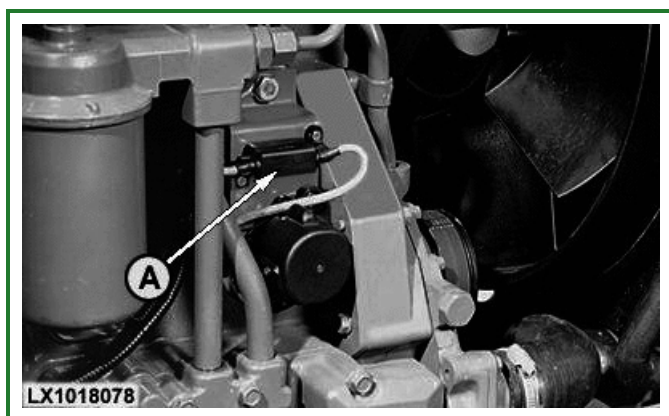

**LX1018078-UN: Electrical Starting Aid Fuse**

Fuse (A) is for the electrical starting aid. It is a 60 A fuse.

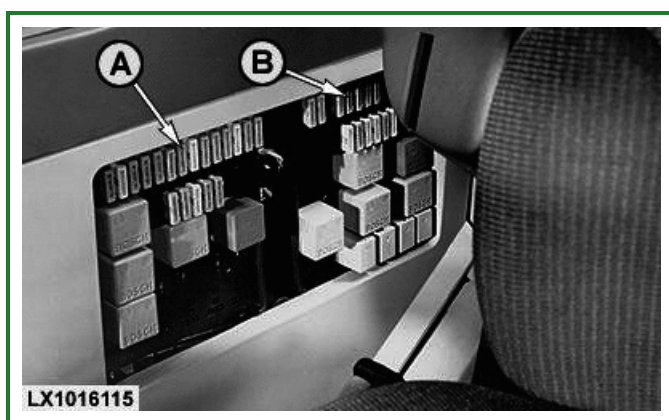

**LX1016115-UN: Additional Fuses in Load Centers**

**LEGEND:**

A - Load center 1

B - Load center 2

The other fuses are located in two load centers (fuse boxes).

