



Changing Drive Wheel Hub Housing Oil

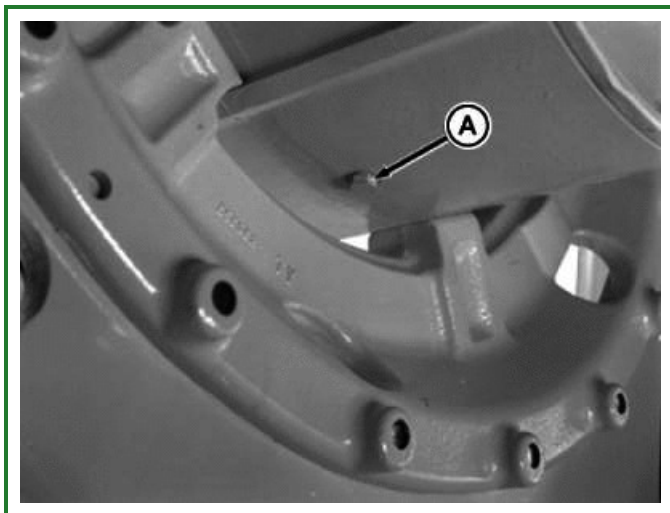

RW56364A-UN: Drain Hole at Bottom of Hub

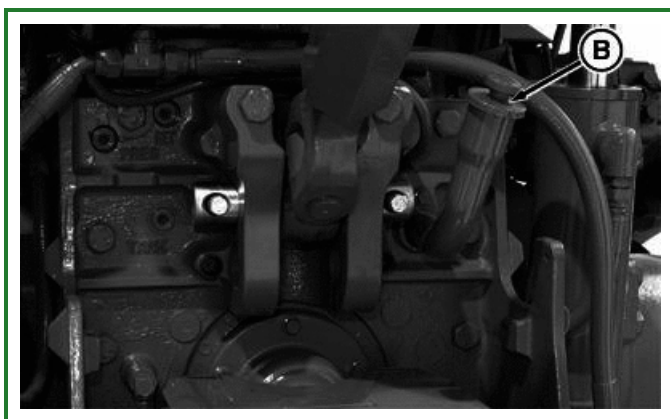

RXA0053225-UN: Refill with Transmission/Hydraulic Oil

LEGEND:

A - Drain Hole

B - Fill Tube

Park tractor on level surface.

Rotate wheels until drain hole (A) is at bottom of hub. Remove plug from each side and drain oil into a pan.


Reinstall plugs after oil has drained.

Refill transmission/hydraulic oil at fill tube (B). Use oil specified in Fuels, Lubricants, and Coolant section.

-: Wheel Hub Capacity

Wheel Hub Capacity	
Capacity (Each Side).....	25 L (6.6 gal)

Checking Mid-Rollers Oil Level

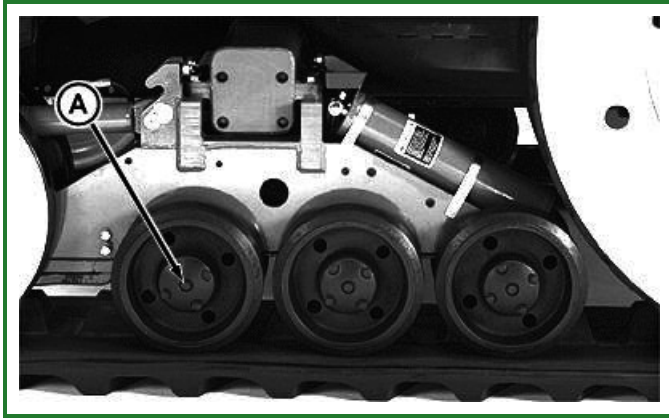

RW26690-UN: Repair Mid-Rollers

LEGEND:

A - Plug

Remove plug (A) on each mid-roller. Oil should be level with plug opening.

Fill with John Deere HY-GARD oil as required.

OURX935,000039E-19-20080625