ADDING ATTACHMENTS/ACCESSORIES TO ROLL-OVER PROTECTIVE STRUCTURE (ROPS)

Do not add attachments or accessories to the ROPS without contacting your John Deere dealer for information. Improper attachment may impair the protection offered by the ROPS.


04T,90,K117 -19-16MAR88

SERVICING AIR CONDITIONING SYSTEM

- 1. Check and adjust compressor belt tension. (See Maintenance-As Required chapter.)
- 2. Check compressor clutch engagement.
- 3. Check evaporator core for plugging.
- 4. Check air intake filters for plugging.
- 5. Check blowers for proper operation.
- A

CAUTION: Reduce compressed air to less than 210 kPa (2.1 bar) (30 psi) when using for cleaning purposes. Clear area of bystanders, guard against flying chips, and wear personal protection equipment, including eye protection.

- 6. Check the condenser core to see that it is not partially or completely plugged with dirt or trash. Clean with compressed air less than 210 kPa (2.1 bar) (30 psi) or water when needed.
- 7. Run air conditioning system for several minutes.
- 8. Check sight glass (A) on receiver dryer. Bubbles must not be present in sight glass. If bubbles are present, see your John Deere dealer for charging the air conditioning system.

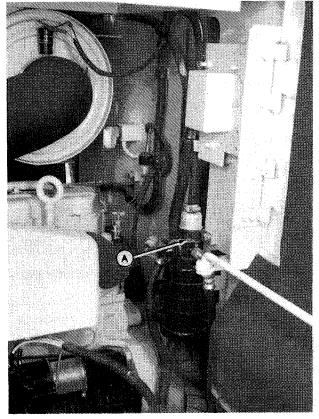

-UN-23AUG89

TX,90,DH527 -19-30MAY90

90-13

010690


ADJUSTING FRAME STEERING BUMPER SHIMS

If frames contact exessively hard, shims can be added behind rubber bumpers. Add shims until metal to metal contact is just made when unit is turned against stops when turning at maximum speed.



CAUTION: Prevent unexpected machine movement and possible personal injury. Install frame locking bar before working in frame pivot area.


- 1. Remove four cap screws (A).
- 2. Add replacement shims (B).
- 3. Reinstall cap screws.

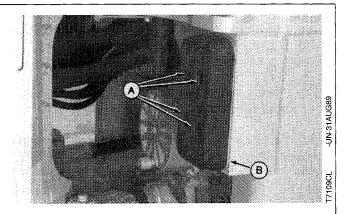

TX,90,DH450 -19-30MAY90


INSPECTING BRAKE PADS

1. Remove brake inspection port plug (A).

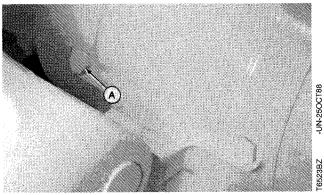

-19-16JUN87

2. Inspect the brake linings (A) on pressure plates and brake backing plate.

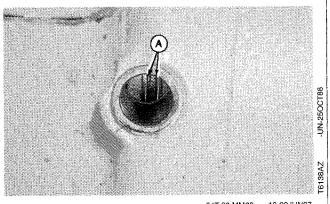

04T,90,MM23 -19-30JUN87